

# HANDBOOK



308



## FAMILIARISATION

### EXTERIOR

#### Welcome lighting

This additional exterior and interior lighting, controlled remotely, makes your approach to the vehicle easier when the light is poor.

» 96, 102

#### Directional lighting

This lighting automatically provides additional visibility when cornering.

» 97

#### Panoramic sunroof

This roof provides incomparable visibility and light in the passenger compartment.

» 90

#### Temporary puncture repair kit

This kit is a complete system, consisting of a compressor and a sealant cartridge, for the temporary repair of a tyre.

» 164



## EXTERIOR

### Panoramic sunroof

This roof provides incomparable visibility and light in the passenger compartment.

» 90



### Roof bars

Transverse bars fitted on longitudinal bars, these allow you to load long and bulky objects on the roof.

» 198



### Opening rear screen

This allows you to access the luggage compartment easily without having to open the tailgate.

» 89

### Seat modularity

The individual rear seats of the 2nd and 3rd rows can be arranged in various ways to permit different layout and loading configurations.

» 73

# FAMILIARISATION

## OPENING

### Remote control key



A. Unfolding/Folding the key  
(first press this button).



Normal locking  
(press once; fixed lighting of  
the direction indicators).

or



Deadlocking of the vehicle  
(press twice in succession;  
fixed lighting of the direction  
indicators).

» 78



Unlocking of the vehicle  
(rapid flashing of the direction  
indicators).

When a sensor detects a low level of light,  
the remote switching on of the dipped  
beam headlamps and sidelamps makes  
your approach to the vehicle easier.

» 96



» 102

### Fuel tank





1. Opening the fuel filler flap.
2. Opening and hooking the fuel filler  
cap.

Capacity of the tank: approximately  
60 litres.

» 91

## OPENING

### Panoramic sunroof

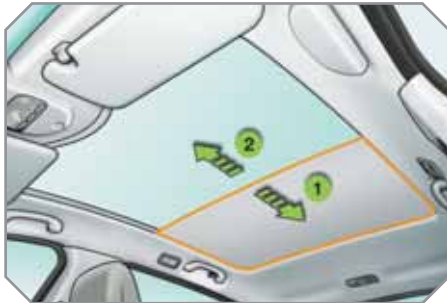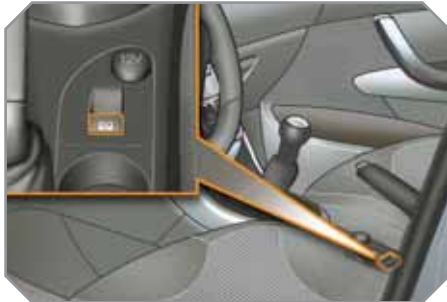


1. Opening the blind.
2. Closing the blind.

» 90



### Boot

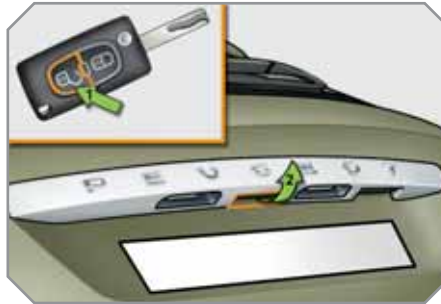

1. Unlocking the vehicle.
2. Opening the boot.

» 89



The tailgate and the rear screen cannot both be open at the same time, to prevent damage to the rear screen.



### Rear screen



1. Unlocking the vehicle.
2. Partial opening of the rear screen.
3. Opening the rear screen.

» 89

## FAMILIARISATION

### INTERIOR

#### Interior mood lighting

This dimmed lighting of the passenger compartment facilitates visibility inside the vehicle when the light is poor.

» 102

#### 6-speed electronic gear control gearbox

This system offers driving combining a fully automatic mode, a manual mode and an auto-sequential mode which combines the advantages of the other two modes.

» 143



#### Audio and communication systems

This equipment benefits from the latest technology: MP3 compatible Peugeot Connect Sound, Bluetooth, Peugeot Connect Navigation or Peugeot Connect Media with 16/9 retractable colour screen, JBL audio system, auxiliary sockets.

**Peugeot Connect Sound** » 301

**Peugeot Connect Navigation** » 273

**Peugeot Connect Media** » 233



## FAMILIARISATION

### INSTRUMENTS AND CONTROLS



1. Cruise control/speed limiter switches.
2. Steering wheel adjustment control.
3. Lighting and direction indicator control stalk.
4. Instrument panel.
5. Driver's airbag.  
Horn.
6. Gear lever.
7. Parking brake.
8. Panoramic sunroof blind control.
9. Heated seat control.
10. Bonnet release.
11. Door mirror controls.  
Electric window controls.
12. Fusebox.
13. Manual headlamp height adjustment.
14. Front side window demisting vent.
15. Speaker (tweeter).
16. Windscreen demisting vent.

# FAMILIARISATION

## INSTRUMENTS AND CONTROLS



1. Steering lock and ignition.
2. Audio and telematics system steering mounted control.
3. Wiper/wash-wipe/trip computer control stalk.
4. Central adjustable air vents.
5. Multifunction screen.
6. Sunshine sensor.
7. Passenger's airbag.
8. Side adjustable air vent.
9. Passenger's airbag deactivation.
10. Glove box/Audio/video sockets.
11. Storage compartment or instrument panel navigator associated with Peugeot Connect Media.
12. 12 V accessories socket.
13. Front ashtray.
14. Heating/air conditioning controls.
15. CD changer.
16. Audio and telematics system.
17. Emergency call button.
  - Alarm button.
  - Central locking button.
  - Hazard warning lamps button.
  - Dynamic stability control (ESP/ASR) button.
  - Parking sensors button.
  - PEUGEOT services button



SITTING COMFORTABLY

Driver's seat

Forwards-backwards



Height



Manual adjustment

» 63



Electric adjustment

» 64



Seat back angle



# FAMILIARISATION

## SITTING COMFORTABLY

### Front seats

#### Head restraint height



#### Lumbar



» 65



#### Other functions available...

Table position for the front passenger seat (SW).  
Storing driving positions (driver's electric seat).  
Heated seats.

#### Steering wheel adjustment



1. Unlocking the control.
2. Adjustment for height and reach.
3. Locking the control.



As a safety precaution, these operations must only be carried out when stationary.

» 77

### Front armrest



For your comfort, the height and longitudinal position of the front armrest can be adjusted.

It also has a storage compartment.

» 106

## SITTING COMFORTABLY

### Door mirrors



#### Adjustment

- A. Selection of the mirror to be adjusted.
- B. Adjustment of the position of the mirror in the four directions.
- C. De-selection of the mirror.

» 75



#### Other functions available...

Folding/Unfolding.

Automatic tilting of the mirror in reverse gear for parking.

### Rear view mirror



#### Manual day/night model

1. Selection of the "day" position of the mirror.
2. Adjusting the mirror.

» 76



#### Automatic day/night model

- A. Automatic brightness detection for the day/night mode.
- B. Adjusting the mirror.

» 77

### Front seat belts



1. Fastening the buckle.
2. Height adjustment.

» 132

# FAMILIARISATION

## SEEING CLEARLY

### Lighting



#### Ring A

**0** Lighting off.

**AUTO** Automatic illumination of headlamps.

Sidelamps.

Dipped/main beam headlamps.

#### Ring B

Rear foglamp.  
or

Front and rear foglamps.

» 93

### Direction indicators



Raise or lower the lighting stalk passing the point of resistance; the corresponding direction indicators will flash for as long as the stalk remains in this position.


#### "Motorway" function

Press the lighting stalk up or down once, without passing the point of resistance; the corresponding direction indicators will flash three times.

This function can be used at any speed, but it is particularly useful when changing lane on high-speed roads.

» 128

### Wipers

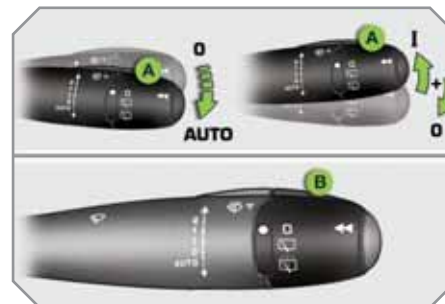

#### Stalk A: windscreen wipers

» 98

#### Switching on "AUTO"

☞ Press the stalk down and release it.

#### Switching off "AUTO"

☞ Push the stalk up and return it to position "0".

» 100

#### Ring B: rear wiper

**0** Park.







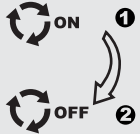





Intermittent wipe.

Wash-wipe.

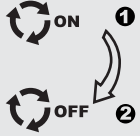» 99

## VENTILATION

### Recommended interior settings

I require...	Heating or Manual Air Conditioning				
	Air distribution	Air flow	Air recirculation/ Intake of outside air	Temperature	Manual A/C
HOT					—
COLD					<b>ON</b>
DEMISTING DEFROSTING					<b>ON</b>

**Digital air conditioning:** we recommend use of the fully automatic mode by pressing the "AUTO" button.

# FAMILIARISATION

## MONITORING

### Instrument panel



- A.** With the ignition on, the needle should indicate the level of fuel remaining.
- B.** With the engine running, its associated low level warning lamp should switch off.
- C.** With the ignition on, the oil level indicator should indicate for a few seconds that the level is correct or OK, depending on version.

If the levels are not correct, top up the levels which are low.

» 22

### Warning lamps



1. With the ignition on, the orange and red warning lamps come on.
2. With the engine running, these warning lamps should switch off.

If warning lamps remain on, refer to the page concerned.

» 26

### Switch panel



Lighting of the indicator lamp indicates the status of the corresponding function.

- A.** Emergency call in progress.  
» 229
- B.** Deactivation of the alarm interior volumetric monitoring.  
» 83
- C.** Central locking.  
» 87
- D.** Deactivation of the ESP/ASR system.  
» 131
- E.** Deactivation of the front and rear parking sensors.  
» 155
- F.** Access to PEUGEOT services.  
» 229



## PASSENGER SAFETY

### Passenger's front airbag



1. Insert the key.
2. Select the position:  
**"OFF"** (deactivation), with "rear facing" child seat,  
**"ON"** (activation), with front passenger or "forwards facing" child seat.
3. Remove the key keeping the switch in the new position.

» 137

### Seat belts and passenger's front airbag



- A. Front and/or rear seat belts not fastened/unfastened warning lamp.
- B. Front left seat belt warning lamp.
- C. Front right seat belt warning lamp.
- D. Rear right seat belt warning lamp\*.
- E. Rear centre seat belt warning lamp\*.
- F. Rear left seat belt warning lamp\*.
- G. Passenger's front airbag deactivated warning lamp.
- H. Passenger's front airbag activated warning lamp.

\* Only on SW individual rear seats.

» 133, 138

### Electric child lock



Lighting of the indicator lamp indicates the status of the corresponding function.  
**A.** Activation of the electric child lock.

» 127

# FAMILIARISATION

## PASSENGER COMFORT



### Operating the front passenger seat




#### Table position

- A. Placing in the partial table position.
- B. Placing in the full table position.

» 65



### Operating the rear seats

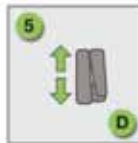

#### 2nd row rear seats

1. Forwards-backwards adjustment.
2. Seat back angle adjustment/Table position.
3. Head restraint height adjustment.
4. Folding.
5. Removal/Installation.
6. Carrying.

» 69



#### 3rd row additional seats

- A. Seat back angle adjustment/Table position.
- B. Head restraint height adjustment.
- C. Folding.
- D. Removal/Installation.
- E. Carrying.

» 71

SEAT CONFIGURATION



A few examples of seat modularity

7 seats




Transporting long objects



7 seats in 5 seats with additional seats folded configuration



Loading a large volume

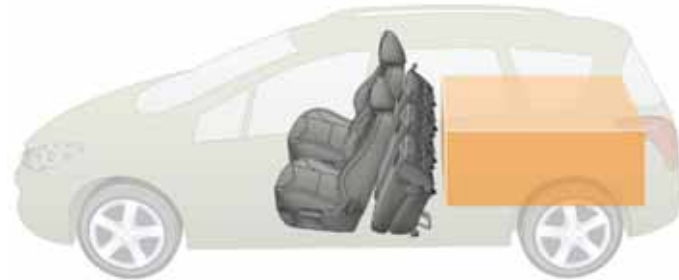

» 73

# FAMILIARISATION

## DRIVING SAFELY

### Speed limiter "LIMIT"



1. Limiter mode Selection/Off.
2. Decreasing of the programmed value.
3. Increasing of the programmed value.
4. Speed limiter On/Off.

The values must be set with the engine running.

» 150

### Cruise control "CRUISE"



1. Cruise control mode Selection/Off.
2. Programming a speed/Decreasing of the programmed value.
3. Programming a speed/Increasing of the programmed value.
4. Cruise control Off/Resume.

In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least fourth gear engaged on the manual gearbox (second gear for the 6-speed electronic gear control gearbox or automatic gearbox).

» 152

### Display on the instrument panel



The cruise control or speed limiter mode appears on the instrument panel when it is selected.



**Cruise control**



**Speed limiter**

## DRIVING SAFELY

### 6-speed electronic gear control gearbox



This 6-speed gearbox offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

1. Gear lever.
2. Button "S" (sport).
3. Steering wheel "-" paddle.
4. Steering wheel "+" paddle.

### Display on the instrument panel



The gear or the driving mode selected appears on the instrument panel screen.

**N:** neutral.

**R:** reverse gear.

**1 2 3 4 5 6:** gears engaged.

**AUTO:** automatic mode.

**S:** Sport driving style.

### Moving off



- ☞ Select position **N** and press the brake pedal firmly while starting the engine.
- ☞ Engage first gear (position **A** or **M**) or reverse (position **R**) using the gear lever 1.
- ☞ Release the parking brake.
- ☞ Take your foot off the brake pedal then accelerate.

▶▶ 143