



VOLVO C70

QUICK GUIDE



WELCOME TO YOUR NEW VOLVO!

Getting to know your car is an exciting experience.

After looking through this Quick Guide you'll like your new Volvo even more. You can find detailed information in the Owner's Manual.

Warning texts and other important information are only available in the Owner's Manual, not in this folder. The Owner's Manual contains the most up-to-date information.

Options are marked with an asterisk (*).

KEY & REMOTE CONTROL





KEY BLADE


Used to lock/unlock the glovebox or the driver's door/cargo area, e.g. if car is without electrical power.





Lock for emergency opening of the boot lid.

 **Locks** doors, storage compartment in doors*, boot lid and ski hatch and arms the alarm. After 30 seconds the doors are double-locked and cannot be opened from inside.

 **Unlocks** doors, storage compartment in doors*, boot lid, ski hatch and steering lock and disarms the alarm¹.

 **Unlocks** boot lid. (Boot lid does not open.)

 **Switches on lighting** for 30 seconds² in side mirrors*, in cabin, by feet and on number plate. Indicators and parking lamps illuminate.

 **"Panic" button.** Press and hold for approx. 3 seconds in an emergency to trigger the alarm. Switch off the alarm with the unlock button.

1. Automatic relocking takes place if a door/boot lid is not opened within 2 minutes after unlocking.
2. The time is adjustable to 30, 60 or 90 seconds, see Owner's Manual.

COLD START

NOTE

The idling speed may briefly be slightly higher in order to achieve efficient emission control.

AUTOSTART (APPLIES TO 2.4I, T5 AND D5)

Turn the ignition key/dial to position **III** and release. The engine starts automatically.

 
Diesel engines must always be preheated in position **II** before the engine is started.

DIRECTION INDICATORS



- A. Short sequence, **three flashes**.
B. **Continuous** flash sequence.



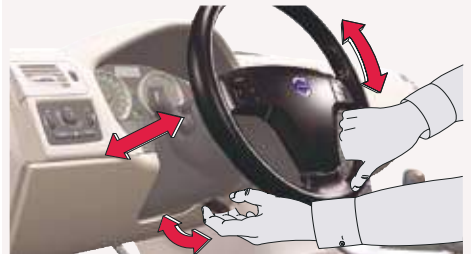


 
 


ADJUSTING THE STEERING WHEEL



WARNING! Adjust the steering wheel before setting off, never while driving.

LIGHT SWITCHES



-  **Headlamp levelling**, automatic for Bi-Xenon lights*
-  **Automatic dipped beam** and main beam flash. Main beam cannot be activated.
-  **Parking lamps**
-  **Dipped beam**, switches off when the ignition is switched off. Main beam can be activated.
-  **Display and instrument lighting**
-  **Front fog lamps***
-  **Rear fog lamp**, one lamp
-  **A** **Main beam flash**
-  **B** **Main/dipped beam switching.** Approach lighting.



REFUELLING



Open the fuel filler flap, hang up the fuel cap during refuelling.

CAR CARE



Washing by hand is gentler to the paintwork than an automatic car wash. The paintwork is also more sensitive when it is new. For this reason, handwashing is recommended during the first few months with a new car.

Leather upholstery requires regular cleaning. Treat with leather care products, once to four times per year or as necessary. Leather care products are available at your Volvo dealer.

BLIS – BLIND SPOT INFORMATION SYSTEM*



 
If the BLIS indicator lamp illuminates despite there being no vehicle within the blind spot, the cause could be for example, reflection from shiny wet road surface, own shadow on light road surface or low sun in the camera.

In the event of a direct fault in the system the display shows the text **BLIS SERVICE REQUIRED**

AUTOMATIC CAR WASHES



Remove the antenna before using an automatic car wash. Turn the antenna anticlockwise to remove it.

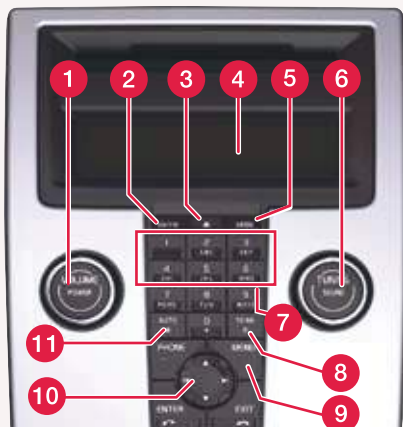

- 1 On/Off and audio volume.** Press for On/Off. Turn to adjust the volume. Radio, TP, handsfree* and RTI* volume are stored individually.
- 2 FM1, FM2 or AM radio**
- 4 Display, clock set via personal settings.**
- 5 MODE, CD or AUX¹**
- 6 Sound pattern,** press to select Sound pattern e.g. BASS, Dolby Pro Logic II* or SUBWOOFER*. Turn to adjust.
- 9 MENU, AUX, volume and advanced audio settings.**

RADIO

- 6 Select radio station by turning.**
- 10 Search for station** using Left/Right arrow or **SCAN (8)**. **Store up to 20 stations** by holding in **0-9** on FM1 and **0-9** on FM2. When a station has been stored it is confirmed in the display.
- 11 Autostoring stations.** Press **AUTO** for approx. 2 seconds. Autostoring is shown in the display. The ten strongest stations are stored. Then press **0-9** to select a station.

CD PLAYER

 
- 10 Change CD track** using Left/Right arrow or turn (6). **Select CD disc²** using Up/Down arrow.
- 3 Ejecting a CD disc.** One short press ejects the current disc. One long press ejects all².
- 7 Direct selection CD disc².** Press **1-6**.

1. AUX input for e.g. MP3 player (set volume at medium for optimum audio reproduction)
 2. Only CD changer*.

WINDSCREEN WIPERS AND RAIN SENSOR*



- C Single sweep**
- 0 Off**
- D Intermittent wiping,** turn (2) to adjust.
- E Normal speed**
- F High speed**
- G Windscreen and headlamp washing**

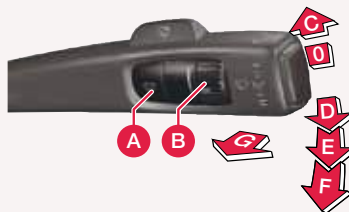

- A Activates rain sensor.** Position **D-F** deactivates rain sensor.
- B Adjust sensitivity** using the thumb-wheel.
- Display symbol** for rain sensor On.



AUTOMATIC CONTROL

In **AUTO** mode the ECC system controls all functions automatically making driving simpler with optimum air quality.

 
- 1 Automatic**
Press **AUTO** for automatic control of set temperature and other functions.
- 2 Temperature**
Press for individual adjustment of left **L** or right-hand **R** side. Turn to required temperature. The set temperature is shown in the display.

MANUAL CONTROL

- Fan speed**
- Air distribution**
- Defroster** to quickly remove misting from the windscreen and side windows.
- Air quality system*** On **A**.
Recirculation On **M**.
- AC** **Air conditioning** On/Off.
- Rear window** and door mirror defrosters. Automatic deactivation¹.

1. Rear window 12 minutes. Mirrors 6 minutes.

PACOS*, DEACTIVATING THE AIRBAG

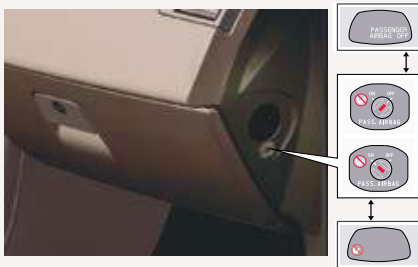

PACOS (Passenger Airbag Cut Off Switch)

Use the ignition key to switch **ON/OFF**.

OFF: The airbag is deactivated.
PASSENGER AIRBAG OFF is shown in the warning lamp above the interior rearview mirror. A child can sit on a booster cushion or child seat in the front seat but **never passengers taller than 140 cm**.

ON: The airbag is activated.
Passengers taller than 140 cm can sit in the front seat but **never a child on a booster cushion or child seat**.

⚠ WARNING
Incorrect use could endanger life. Consult the Owner's Manual if you have the slightest doubt about its use.

TRIP COMPUTER AND TRIP METERS



FUEL

- 1 Low fuel level**
8 litres petrol (7 litres diesel) remain.
- 2 Fuel gauge.**
The arrow indicates that the fuel filler flap is on the right-hand side.

TRIP METERS

- 5 Display** shows two independent trip meters, T1 & T2.
- 3 Switch between T1 & T2** with one short press. Reset the current meter with one long press.

TRIP COMPUTER

 


- 6 Press** to clear a message.
- 7 Turn** to show e.g. KILOMETRES TO EMPTY TANK in the display (4).
- 8 Reset the current function.** One long press resets all functions.

! IMPORTANT

KILOMETRES TO EMPTY TANK is an estimate based on earlier driving conditions.

CONTROL PANEL IN DRIVER'S DOOR

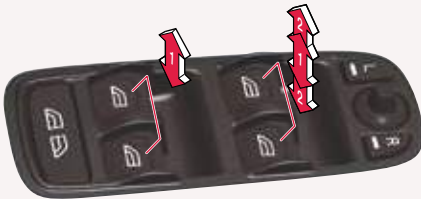

WINDOW AUTOMATION

The windows are automatically opened approx. 2 cm when doors are opened/roof is operated. The windows are closed automatically.

L R Adjusting the door mirrors, select L or R. Set with the lever.

Retracting the door mirrors*, press L and R simultaneously. Press again to extend.

1 **Manual windows**

2 **Automatic windows**

All windows open simultaneously with one press on the right-hand side of the button. Hold down the left-hand side to close.

OPERATING THE ROOF "TOP DOWN & TOP UP"



PREPARATIONS

No objects on parcel shelf, roof or boot lid.

- 2 m clearance and 0.2 m behind.
- Level ground.
- Outside temperature above -10°C .
- Closed cargo separator and boot lid.
- The car must be stationary.
- Pay attention that no individual is close to the roof's moving parts during its operation.

 
The side windows lower several centimetres when the roof is operated. They then return automatically.

OPERATION



1. Engine at idling speed.
2. Depress the brake pedal.
3. Press and hold button (A) or (B) until a signal sounds and the message ROOF CLOSED/ROOF OPEN is shown in the display.
4. Release the button.

CARGO SEPARATOR

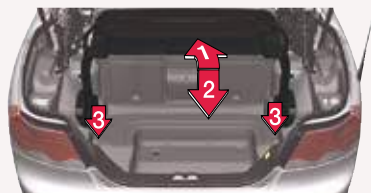

The cargo separator limits the cargo area to make space for the folding roof.

1. Raise the cargo separator during loading.
2. Lower the cargo separator fully into the catches (3) before lowering the roof. See decal on the cargo separator.

LOADING ASSISTANCE



 
Raise/lower the lowered roof to facilitate loading.

Press the button and wait several seconds until the roof is raised. Raise the cargo separator, load, and then fold it down fully. Press the button again to lower.

ADJUSTING THE FRONT SEAT



- 1 Lumber support
- 2 Backrest rake
- 3 Raise/lower seat
- 4 Seat cushion front edge raise/lower
- 5 Forwards/backwards

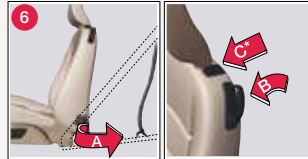

6 Easy entry & belt guide

Manual seat

- A. Always remove the seatbelt from the belt guide.
B. Pull the handle and move the seat forwards.

Power seat*

- A. Always remove the seatbelt from the belt guide.
B. Pull the handle and fold up the backrest.
C. Hold the button in while the seat moves forwards. Hold the button in again to move the seat back.

STORAGE SPACES, 12 V SOCKET & AUX



12 V socket in centre console **front/rear** works in ignition position I or II. **12 V socket** on right-hand side in **cargo area** is always active.
The car's audio system can playback music from an MP3 player etc. using the **AUX output**.

! IMPORTANT

Using the 12 V socket in the cargo area when the engine is switched off could discharge the battery.

