


Audi A4

Current Flow Diagram

No. 1 / 14

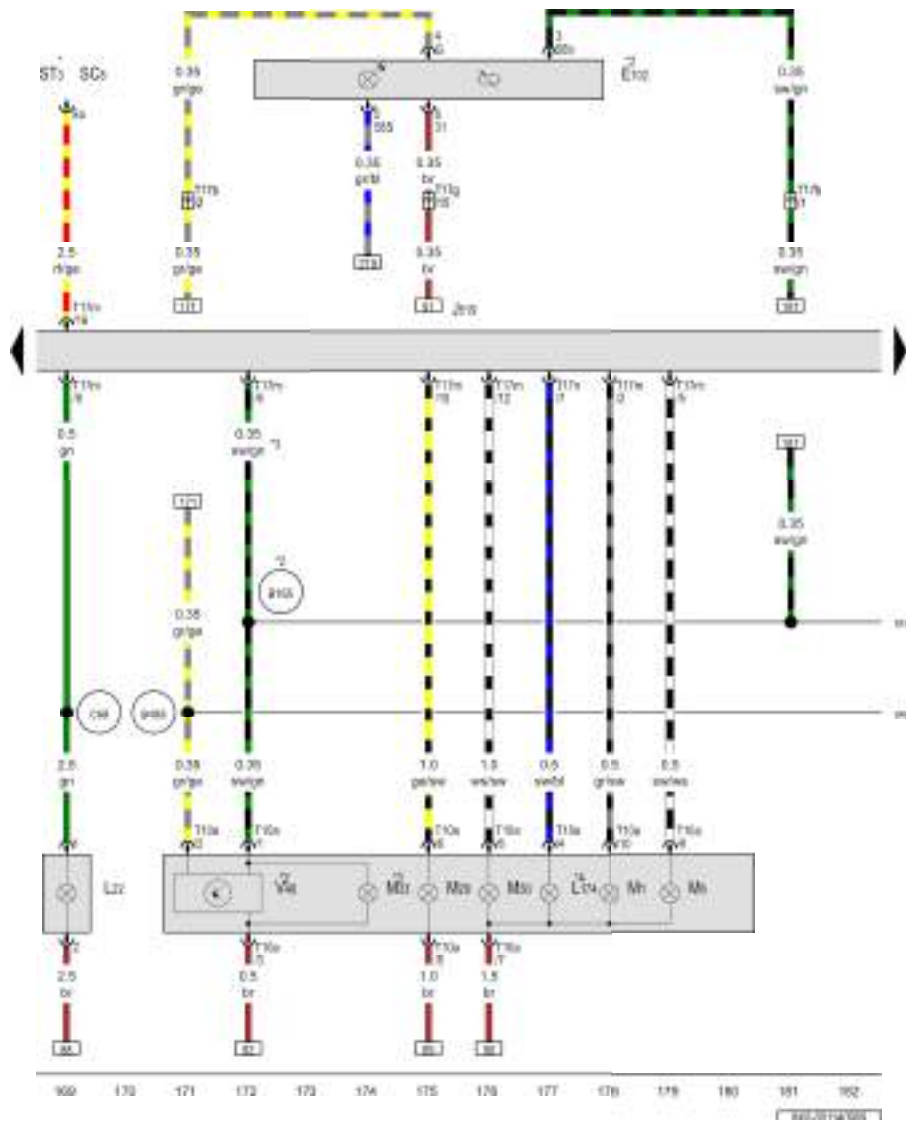

Front left turn signal bulb, Left headlight main beam bulb

- E102 - Headlight range control regulator
- J519 - Onboard supply control unit
- L22 - Left fog light bulb
- L174 - Left daytime running light bulb
- M1 - Left side light bulb
- M5 - Front left turn signal bulb
- M29 - Left headlight dipped beam bulb
- M30 - Left headlight main beam bulb
- M33 - Front left side marker bulb
- ST3 - Fuse carrier 3
- SC8 - Fuse 8 on fuse holder C
- T10a - 10-pin connector
- T17b - 17-pin connector, in left A-pillar coupling station
- T17g - 17-pin connector, in right A-pillar coupling station
- T17m - 17-pin connector
- T17n - 17-pin connector
- V48 - Left headlight range control motor
- B165 - Positive connection 2 (15), in interior wiring harness
- B488 - Connection 24, in main wiring harness
- C69 - Front left connection (fog light),, in main wiring harness
- * - see applicable current flow diagram for fuse assignment
- *2 - Not for American markets
- *3 - Only for American markets
- *4 - Only models with daytime running lights