

Model Overview

Audi

Model name

Model cycle

Model name

Model cycle

Audi 80

Audi 80 / S2	1990 – 1995
Audi 80 / S2 / RS2 Avant	1992 – 1995
Audi 80 / S2 Coupé	1988 – 1996
Audi 80 Cabriolet	1991 – 2000

Audi 100

Audi 100	1988 – 1991
Audi 100 Avant	1988 – 1991
Audi 100 / A6 / S6	1991 – 1997
Audi 100 / A6 / S6 Avant	1991 – 1997

Audi 200

Audi 200 / V8	1984 – 1991
Audi 200 Avant	1985 – 1991

A1

A1	from 2010
A1 e-tron	from 2011
A1 Sportback	from 2012

A2

A2	2000 – 2005
----	-------------

A3

A3 / S3 (3-door)	1996 – 2003
A3 / (5-door)	1999 – 2003
A3 / S3 (3-door)	2003 – 2012
A3 / S3 / RS3 Sportback	2004 – 2012
A3 Cabriolet	from 2008
A3 / S3 (3-door)	from 2012
A3 / S3 Sportback	from 2012
A3 / S3 Limousine	from 2013

A4

A4 / S4	1995 – 2001
A4 / S4 / RS4 Avant	1996 – 2001
A4 / S4	2001 – 2005
A4 / S4 Avant	2001 – 2005
A4 / S4 / RS4	2005 – 2007
A4 / S4 / RS4 Avant	2005 – 2008
A4 / S4 Cabriolet	2002 – 2005
A4 / S4 / RS4 Cabriolet	2005 – 2009
A4 / S4	2007 – 2012
A4 / S4 Avant	2008 – 2012
A4 allroad	2009 – 2012
A4 / S4	from 2012
A4 / S4 / RS4 Avant	from 2012
A4 allroad	from 2012

Continued on next page 

Quickfinder



Model Overview

Audi

Model name



A5

A5 / S5 / RS5
A5 / S5 Cabriolet
A5 / S5 Sportback
A5 / S5 / RS5
A5 / S5 Cabriolet
A5 / S5 Sportback

Model cycle

2007 – 2011
2009 – 2011
2009 – 2011
from 2011
from 2011
from 2011

Model name



Q3

Q3

Model cycle

from 2011

from 2008
from 2011



A6

A6 / S6 / RS6
A6 / S6 / RS6 Avant
A6 allroad
A6 / S6 / RS6
A6 / S6 / RS6
A6 / S6 / RS6 Avant
A6 allroad
A6 / S6
A6 Avant
A6 allroad
A6 hybrid

1997 – 2004
1998 – 2004
2001 – 2006
2004 – 2008
2008 – 2011
2004 – 2012
2006 – 2012
from 2011
from 2011
from 2012
from 2012



Q7

Q7

from 2006

from 2007
from 2010



R8

R8

from 2006
from 2006
1999 – 2006
from 2007



TT

TT Coupé
TT / TTS / TTRS Coupé
TT Roadster
TT / TTS / TTRS Roadster



A7

A7

from 2010



A8

A8 / S8
A8 / S8
A8 / S8
A8 hybrid

1994 – 2002
2002 – 2010
from 2010
from 2012

Quickfinder

?



Legal Disclaimer:

This manual has been created exclusively for rescuers who have been specially trained in the area of providing emergency rescue after automobile accidents and who are therefore qualified to use the activities described in this manual. Furthermore, this manual shows the maximum possible equipment specification in the model overview.

Vehicle specifications and special options as well as Audi model availability are constantly subject to change. Therefore, Audi reserves the right to change the content of this manual at all times.

Please note: The information contained in this manual is not intended for customers or for repair shops and dealers. Customers may gather detailed information from their vehicle owner's manual regarding vehicle function as well as any occupant safety features and system descriptions. Repair shops and dealers obtain repair information through their normal channels.

(Status: 08/2013)

Hint:

The maximum possible equipment specification is always shown in the model overview.



You will find "Rescue and Recovery involving Audi Vehicles" in a separate part of the same title.

The creation of this Rescue Data sheets is supported by Moditech Rescue Solutions (www.moditech.com). The vehicle overviews in the attachment are also included in interactive form in the data base "Crash Recovery System".



► Audi 80 / S2

1990 – 1995

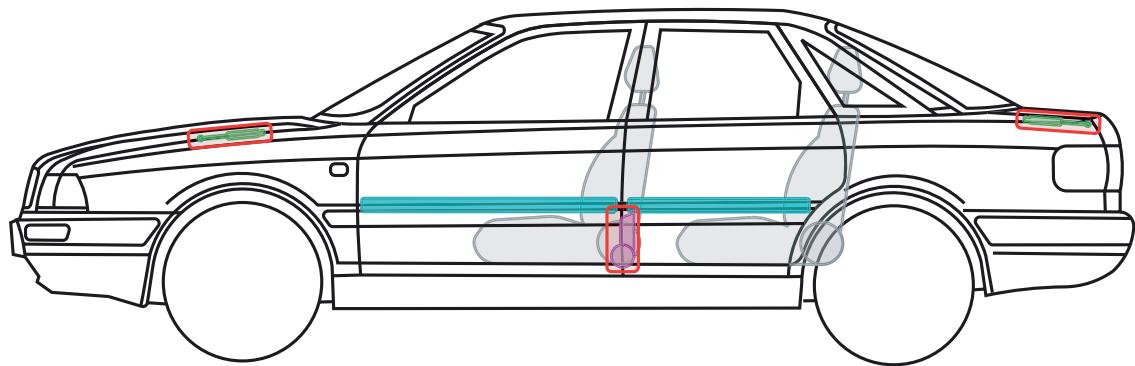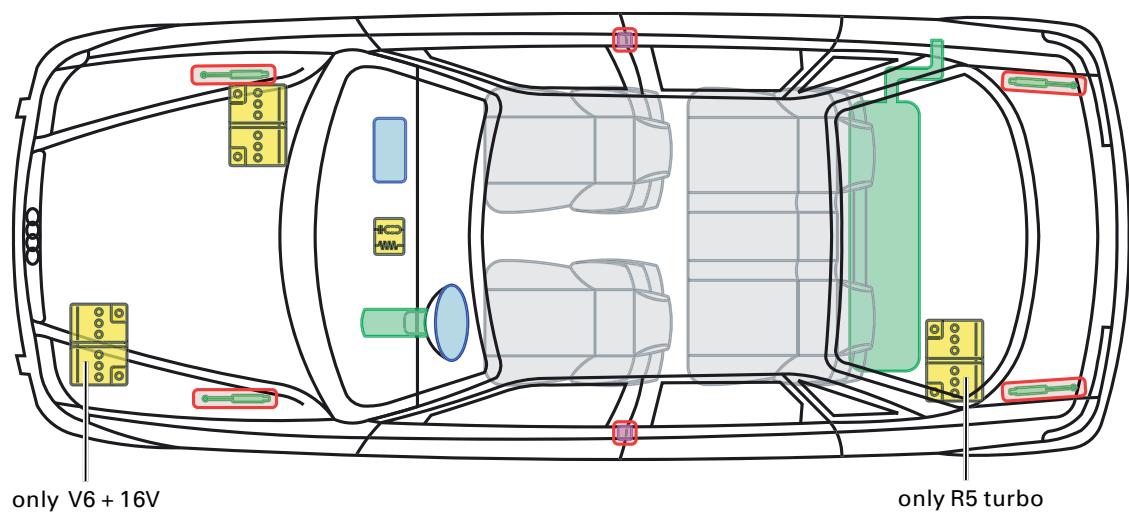

Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



80
+S2 Limousine





► Audi 80 / S2 / RS2 Avant

1992 – 1995

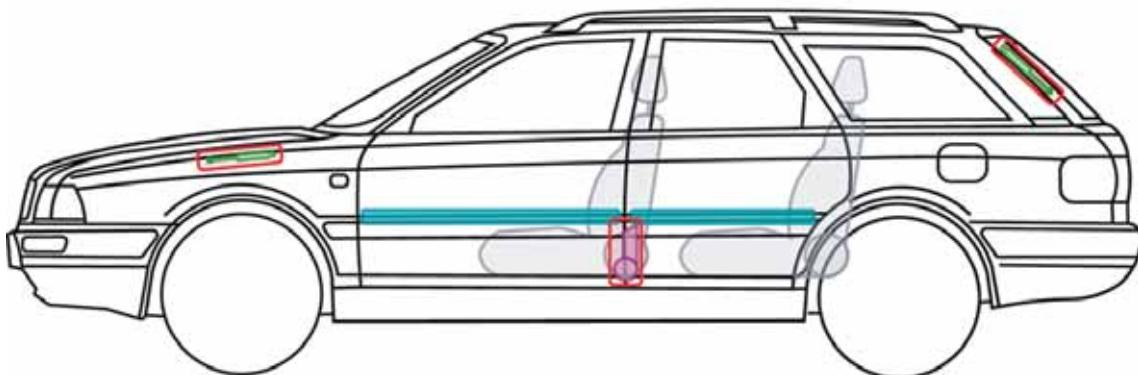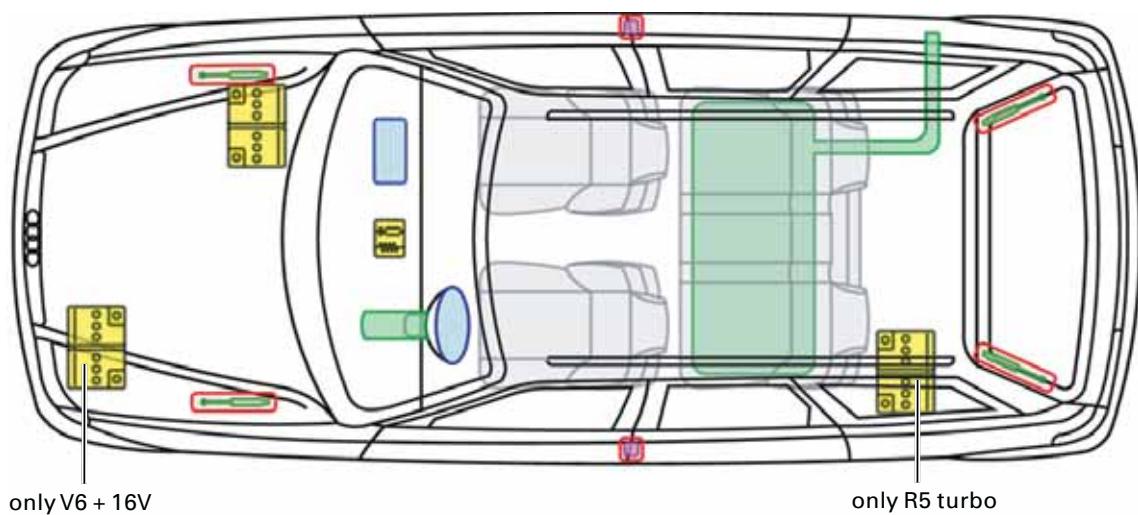

Legend



	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

80
+S2/RS2 Avant



► Audi 80 / S2 Coupé

1988 – 1996

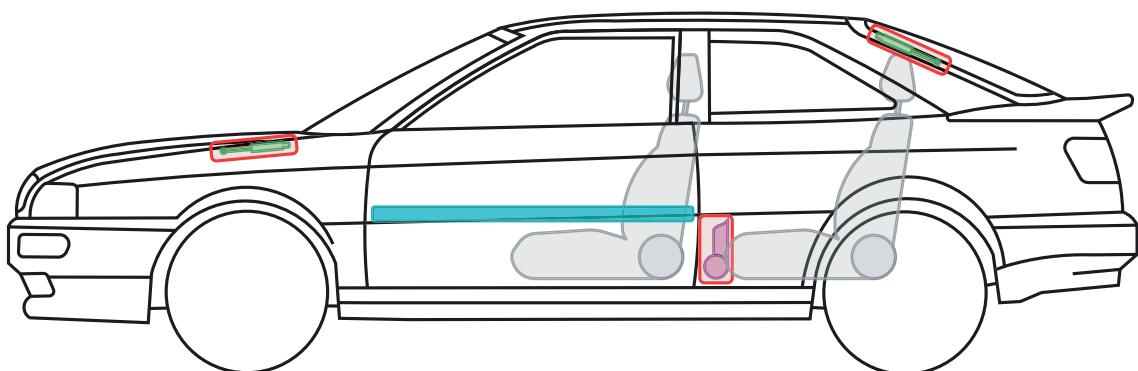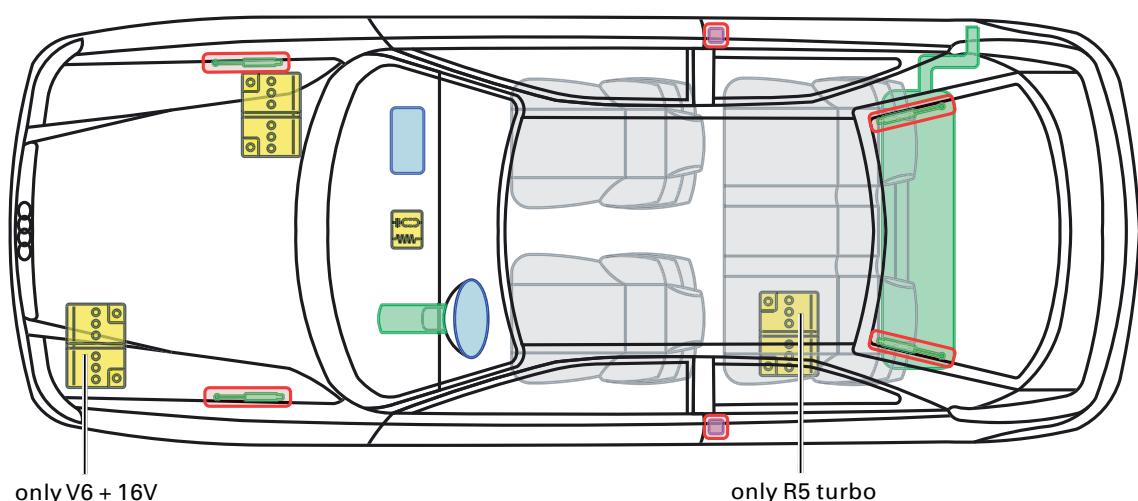

Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank


+S2 Coupé

80



► Audi 80 Cabriolet

1991 – 2000

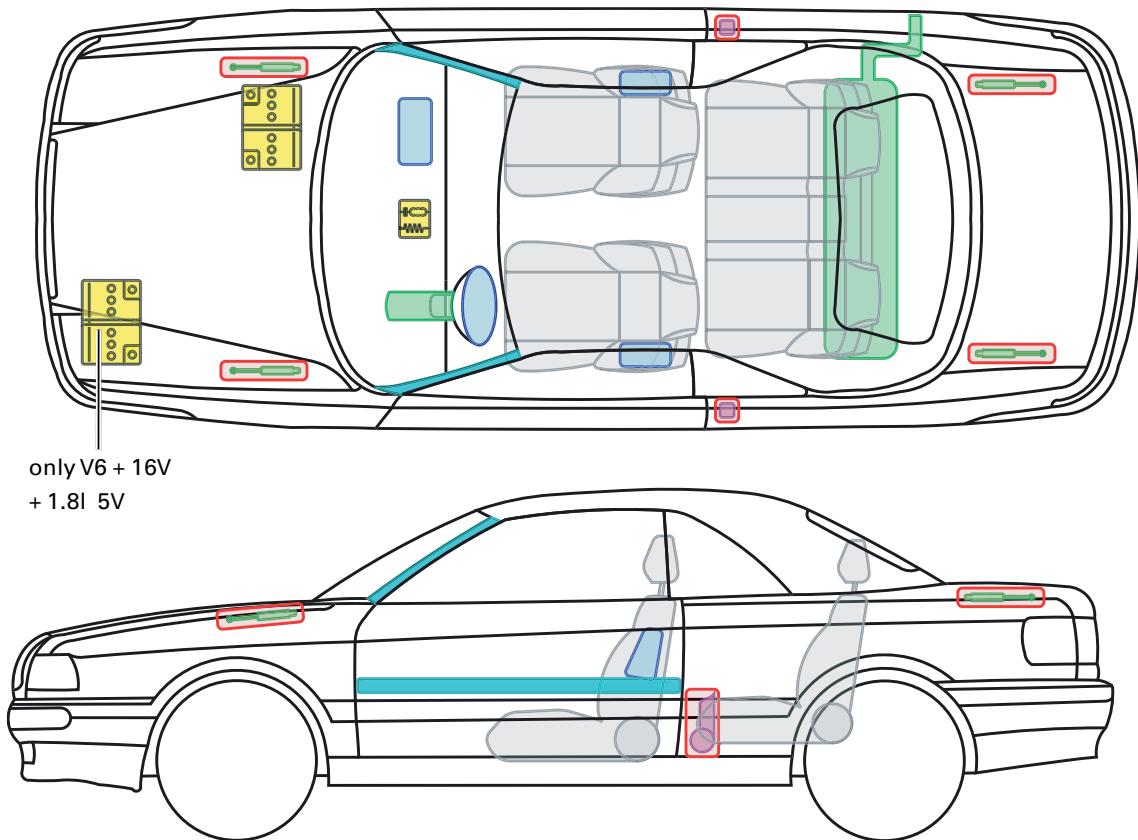

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

80 Cabriolet



► Audi 100

1988 – 1991

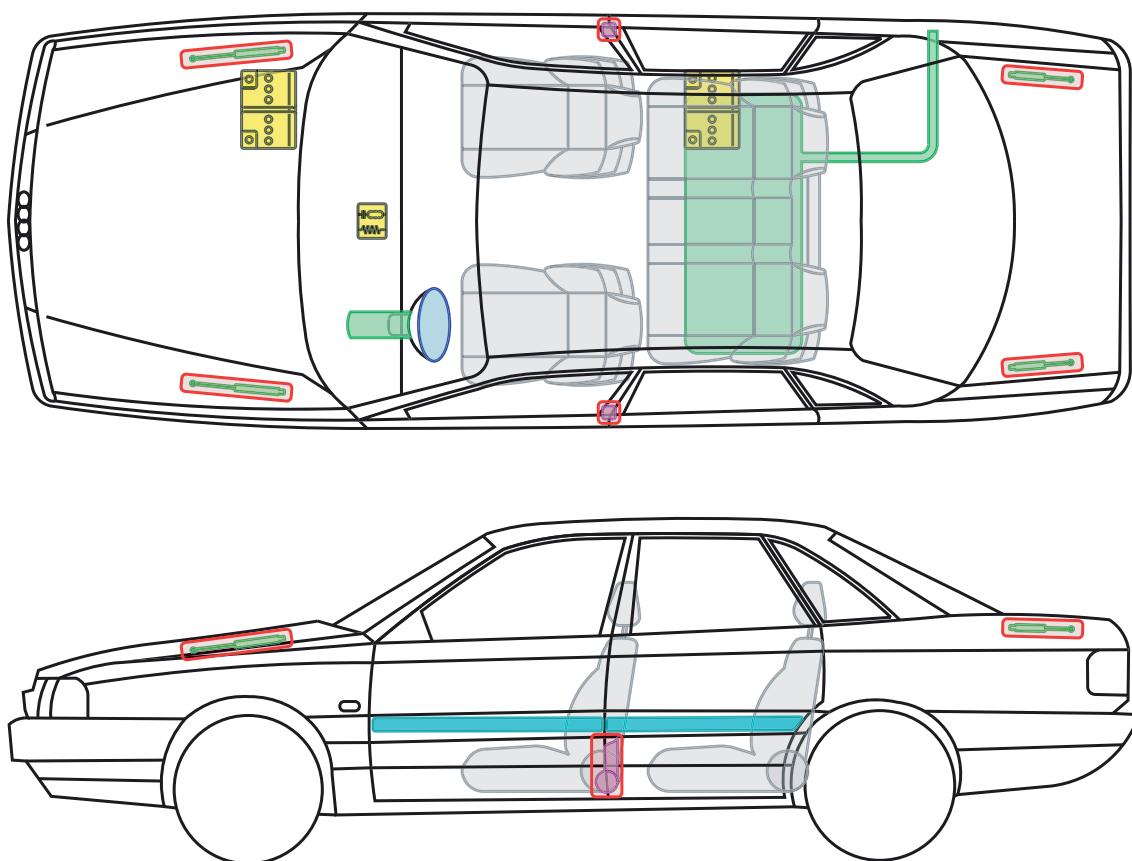

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

100 Limousine



► Audi 100 Avant

1988 – 1991

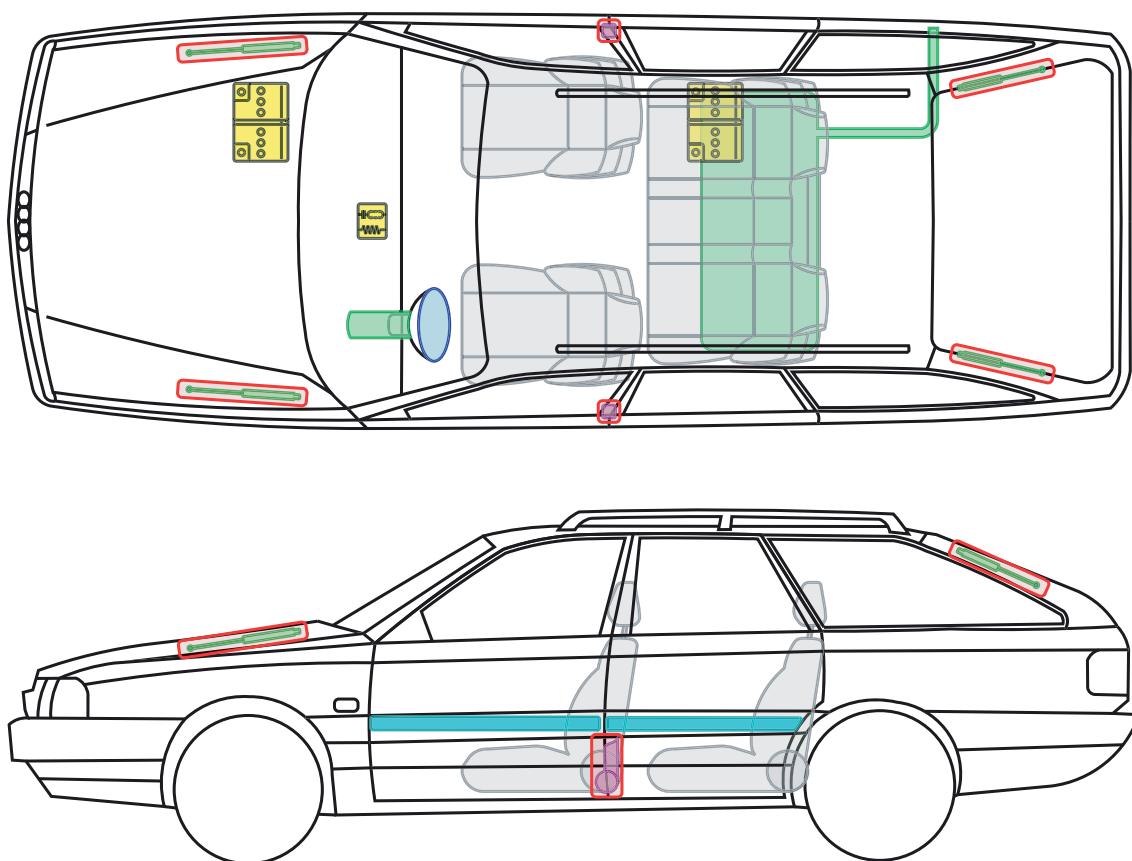

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

100 Avant



► Audi 100 / A6 / S6

1991 – 1997

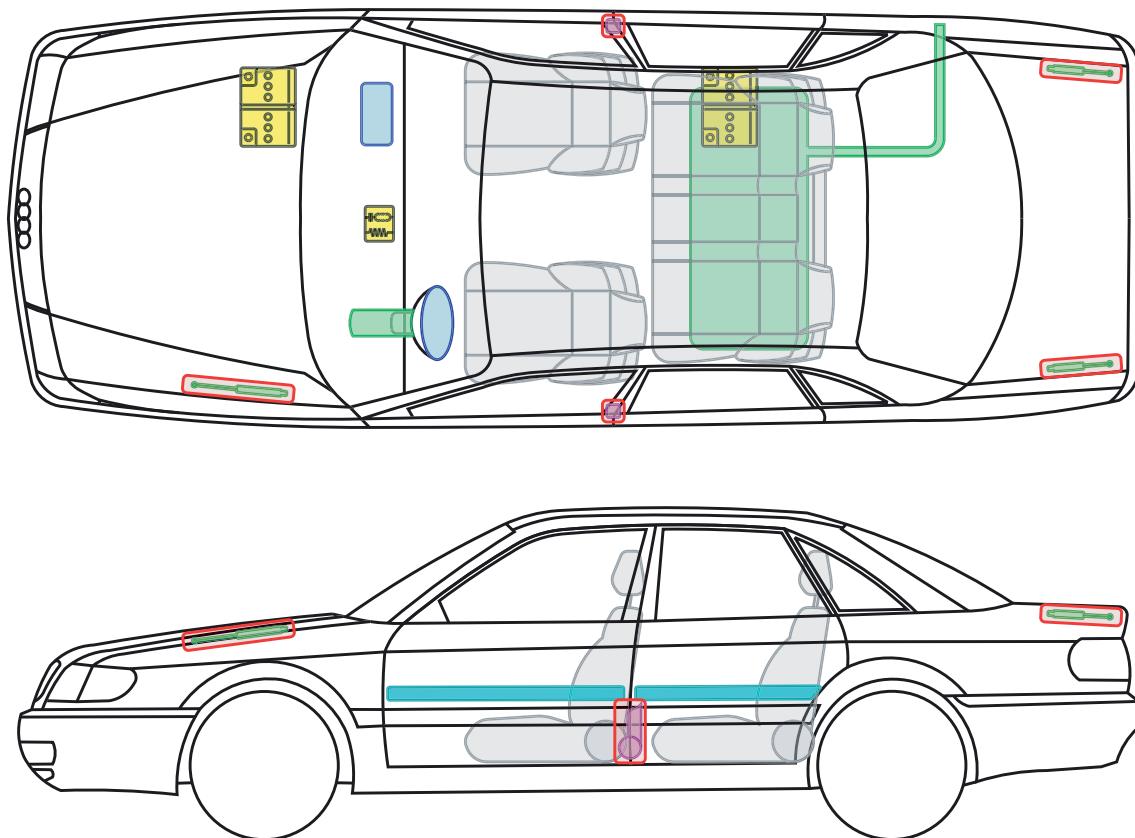



Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi 100 / A6 / S6 Avant

1991 – 1997

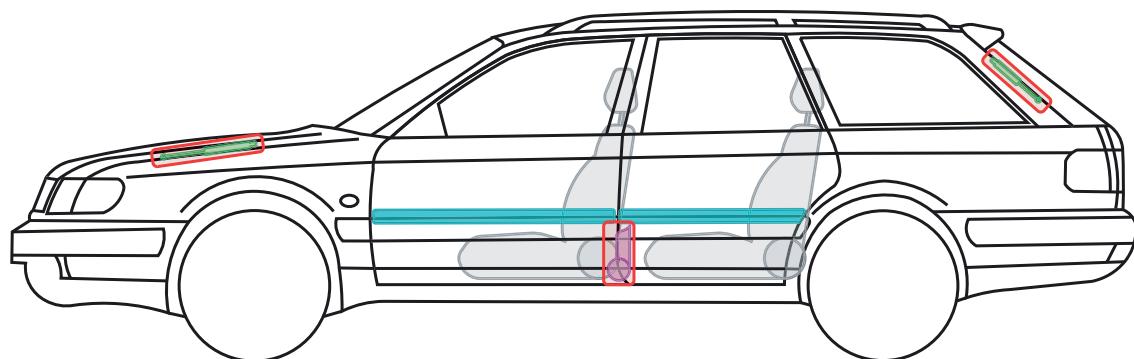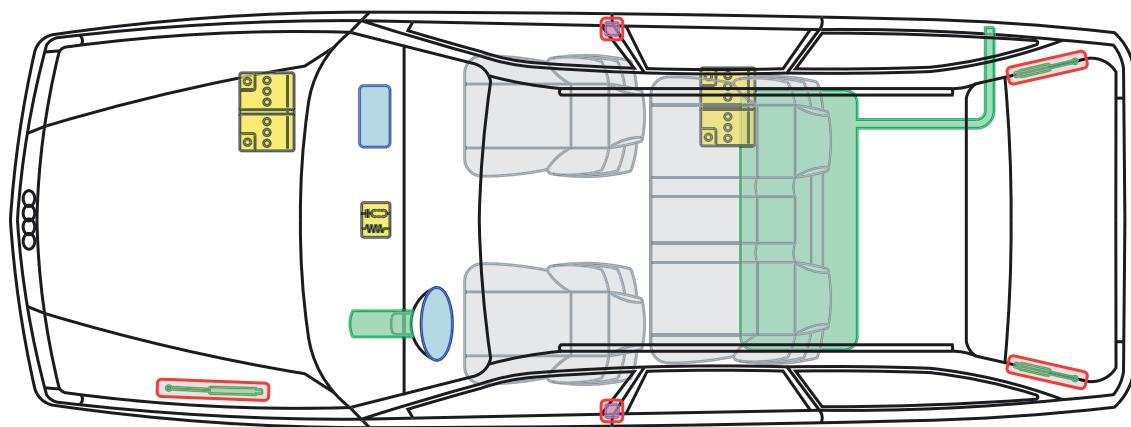


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi 200 / V8

1984 – 1991

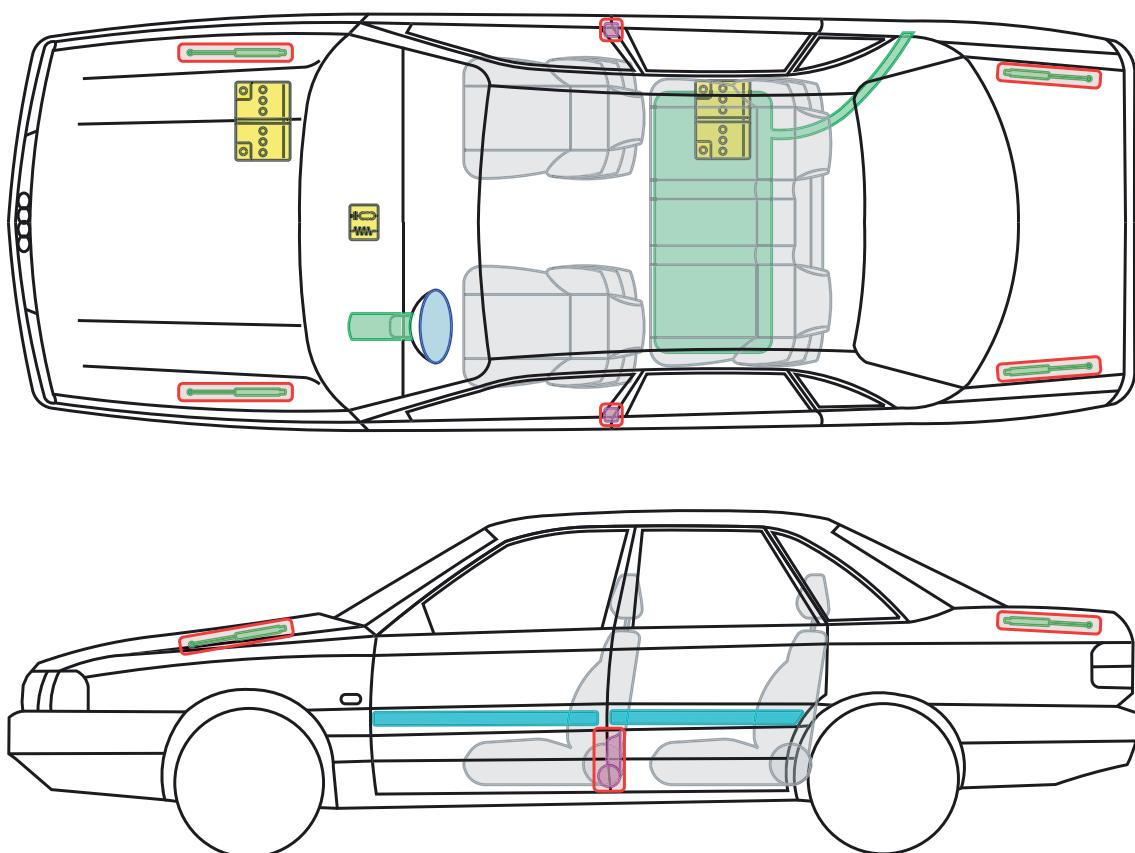

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

200
+V8 Limousine



► Audi 200 Avant

1985 – 1991

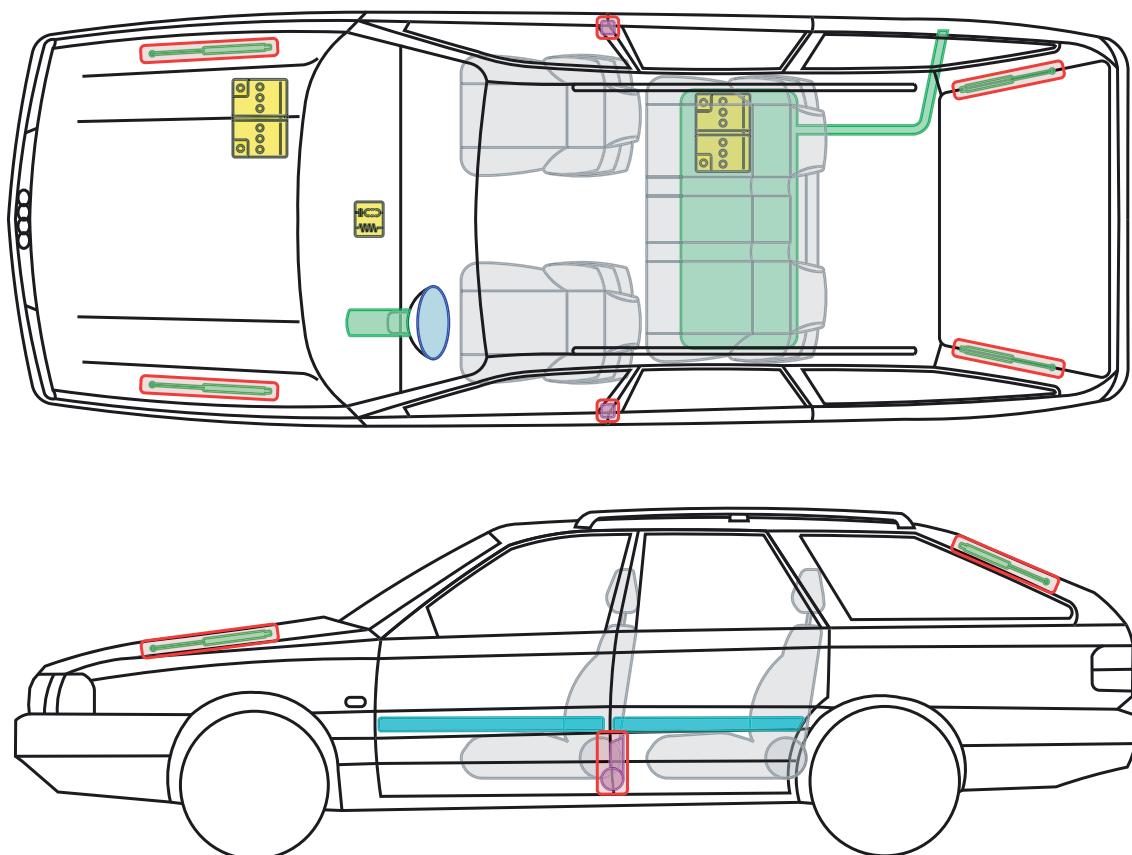

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

200 Avant




► Audi A1


from 2010

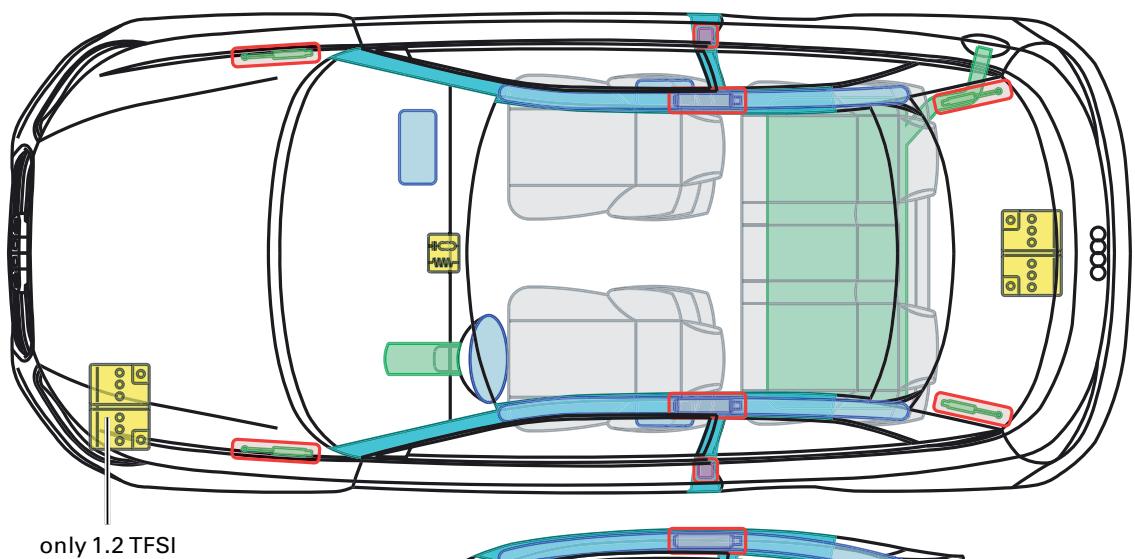

only 1.2 TFSI

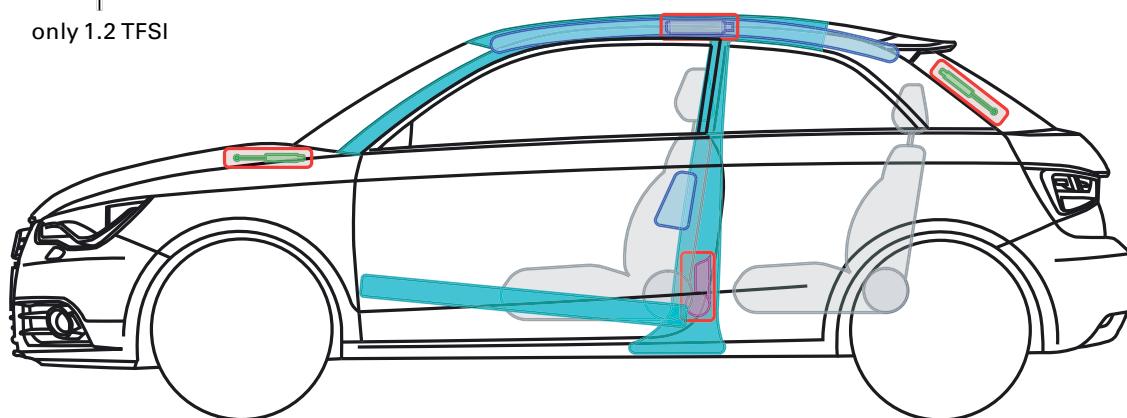



Legend

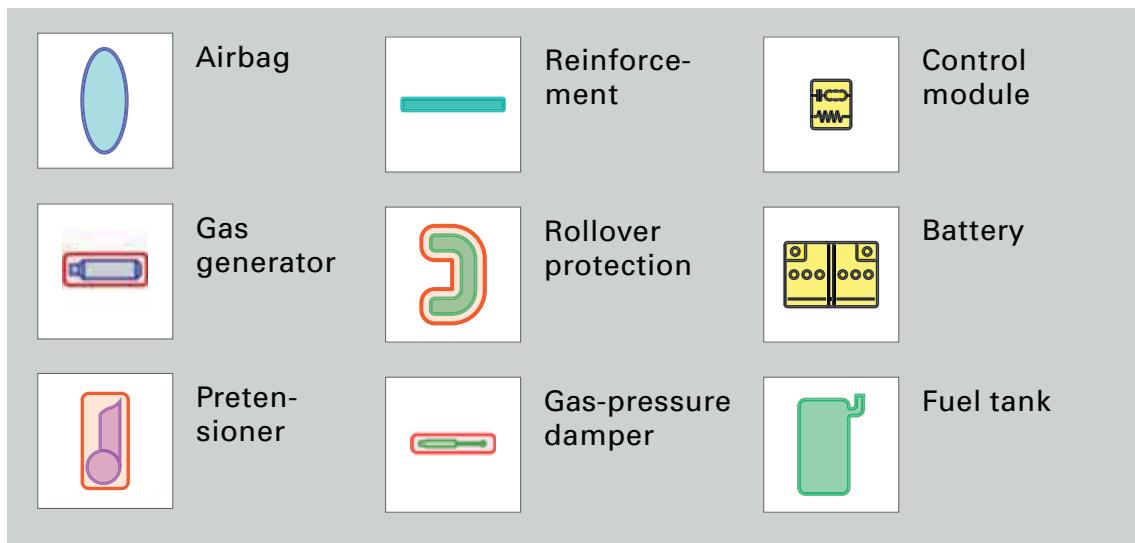



► Audi A1 e-tron

from 2011

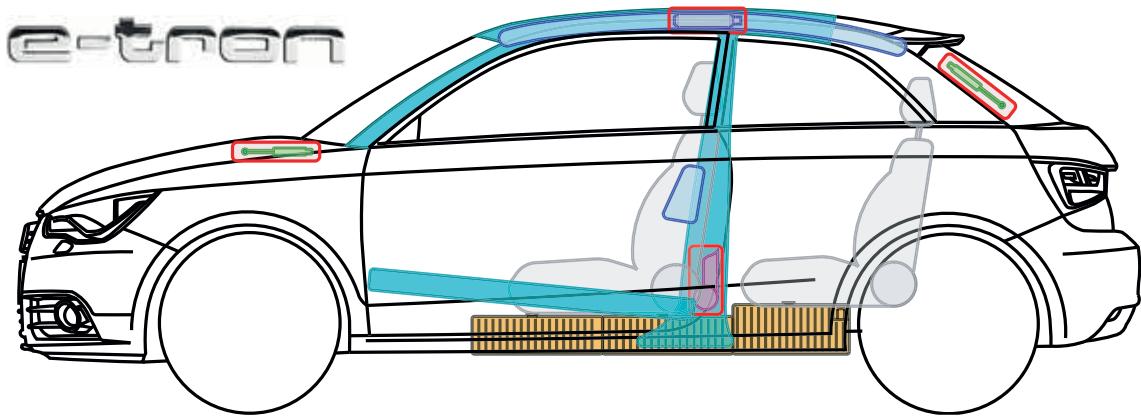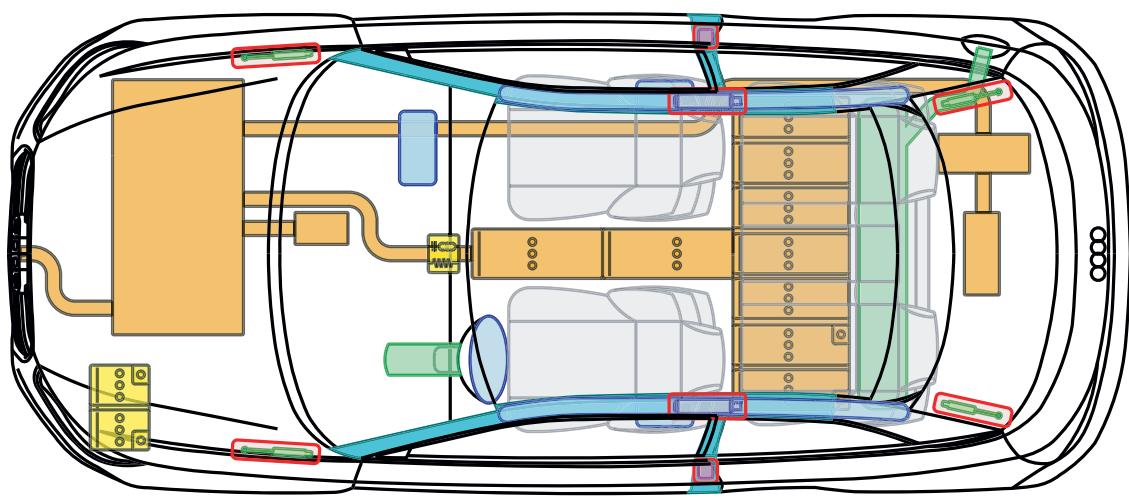

Legende

	Airbag		Reinforce- ment		Control module		High- voltage battery
	Gas gen- erator		Rollover protec- tion		12 V battery		High- voltage -leads/ -compo- nents
	Preten- sioner		Gas- pressure damper		Fuel tank		



► Audi A1 e-tron

from 2011

Identifying feature

The Audi A1 e-tron can be identified by means of the „e-tron“ logo on the instrument cluster or on the wing.



Instrument cluster



Wing


Hints

! In the case of accidents in which the pyrotechnic belt tensioners or airbags are deployed, the high-voltage system is deactivated. If the vehicle is connected to the charging point/socket, the charging cable is to be disconnected.

In the case of accidents with deployed/undeployed airbags

- Place Vehicle in Park and set parking brake
- Switch off the ignition
- Disconnect the negative terminal of the 12V battery

! The electric motor is silent!

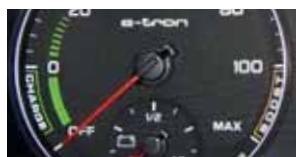

It may not be possible to detect that the car is ready to go by the noises it makes when in operation, as the electric motor is silent. If the large needle in the dial on the left of the instrument cluster (power metre) is not on „OFF“ (for example on the „READY“ position), you have to expect that the electric motor may run or the internal combustion engine may start automatically.

Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the high-voltage battery is located underneath the vehicle, below the transmission tunnel and the rear seat.

It is a lithium-ion battery.

Identification of the remaining high-voltage components




All the high-voltage leads and the high-voltage connections are provided with orange insulation. These items must not be disconnected or damaged.



► Audi A1 Sportback

from 2012

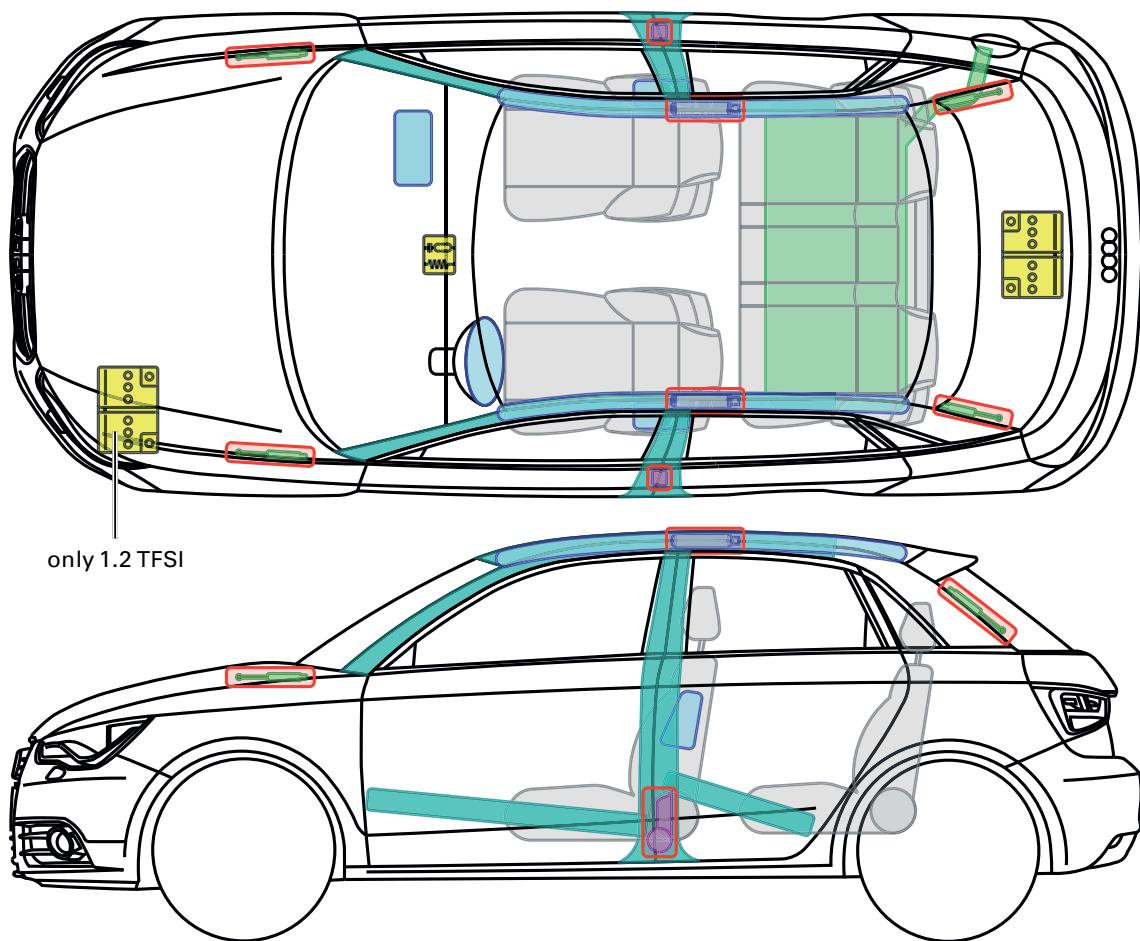

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

A1 Limousine



► Audi A2

2000 – 2005

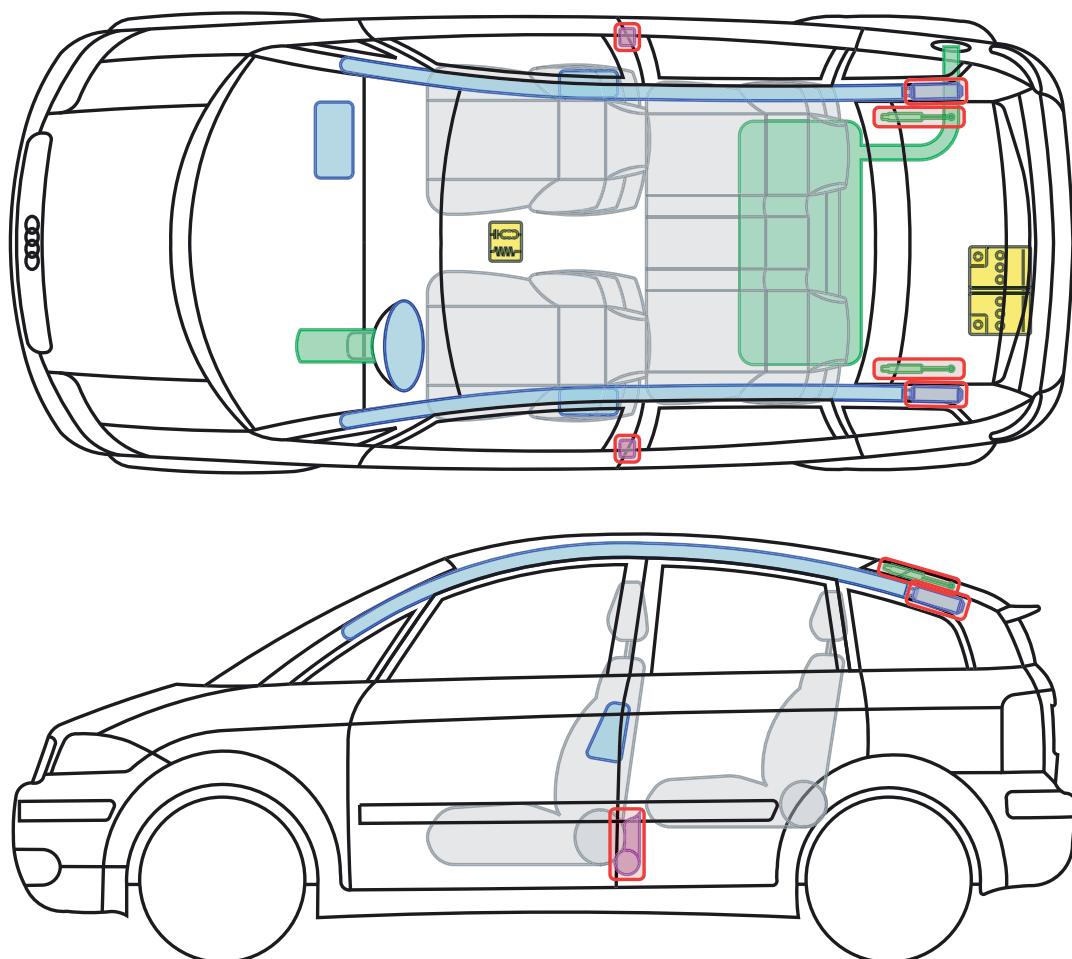

Legend



	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

A2 Limousine



► Audi A3 / S3 (3-door)

1996 – 2003

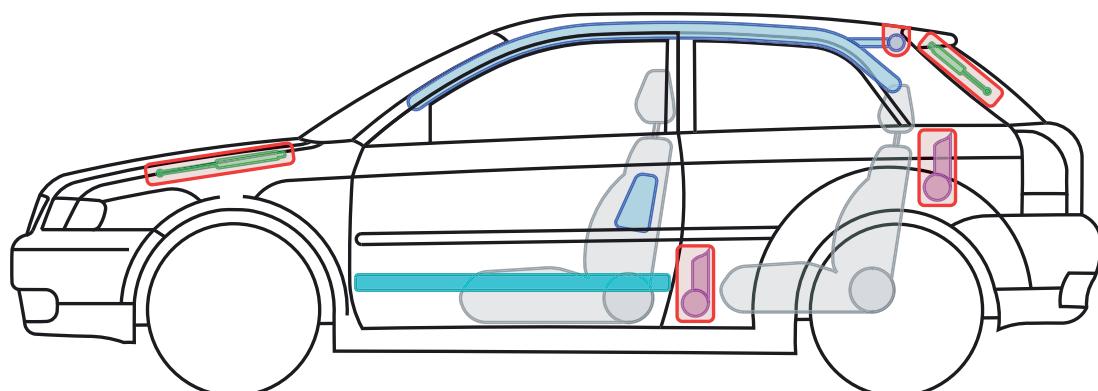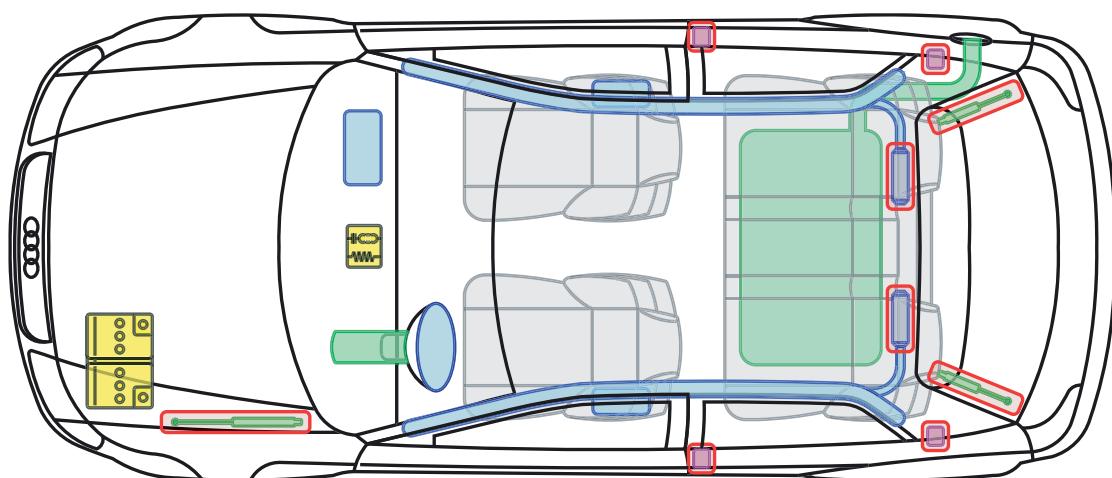

Legende


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

A3
+S3 (3-door)



► Audi A3 (5-door)

1999 – 2003

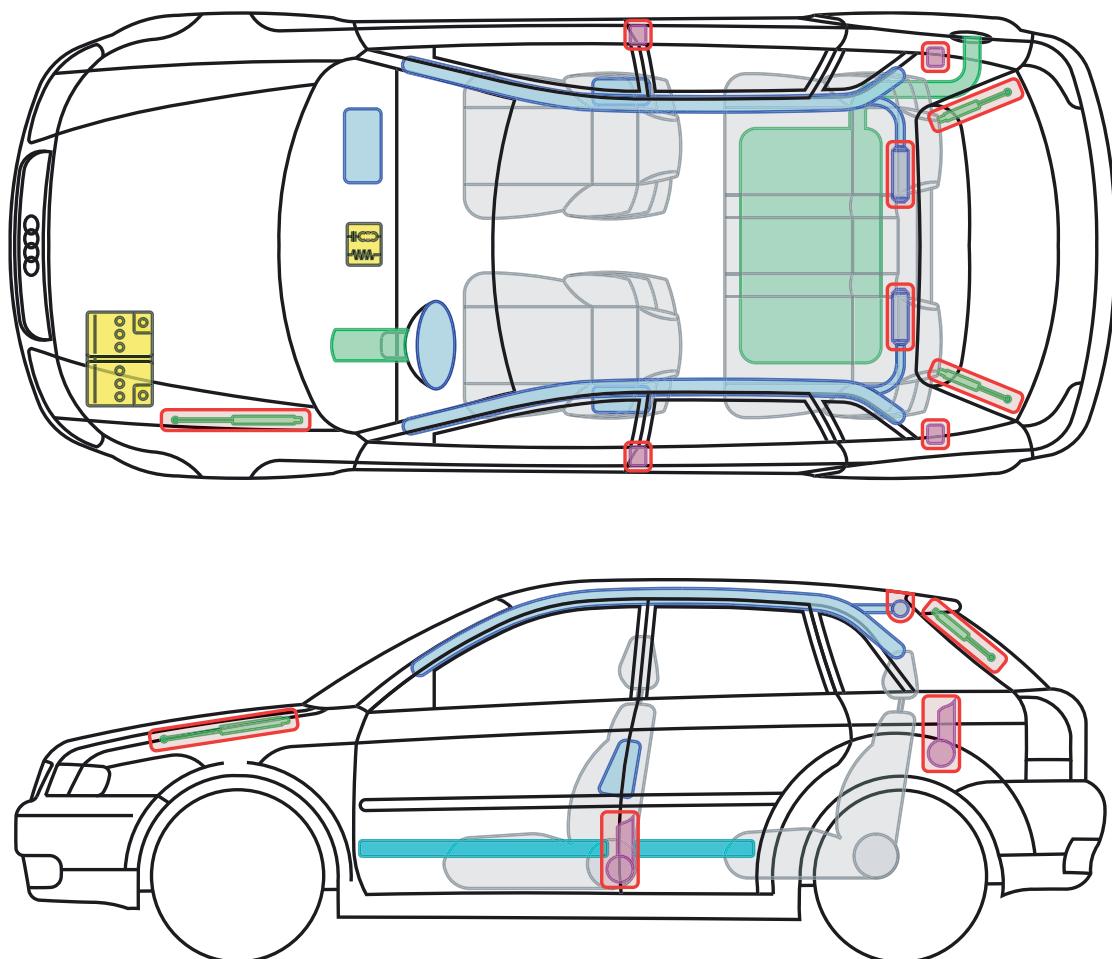

Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank


A3
(5-door)





► Audi A3 / S3 (3-door)

2003 – 2012

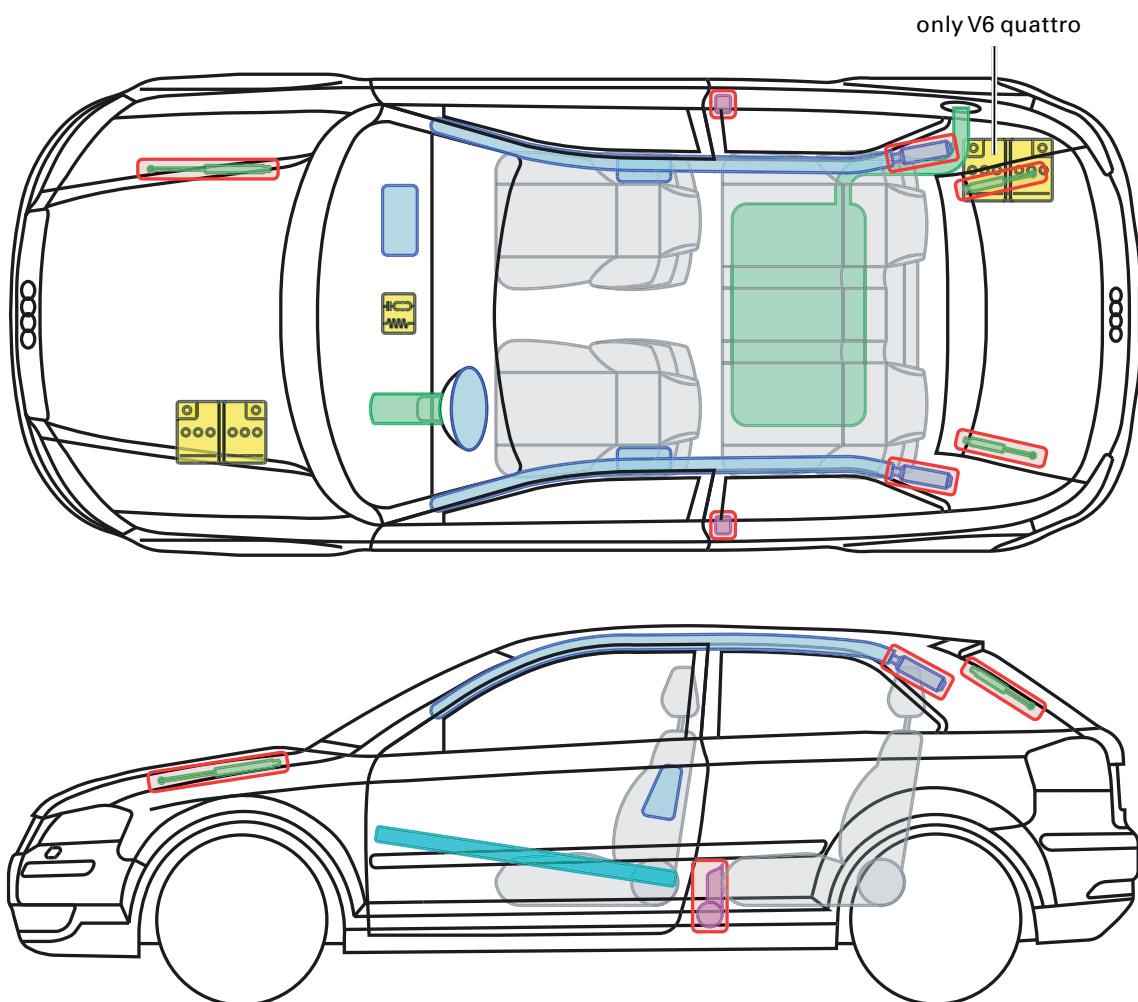

Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



A3
+S3 (3-door)




► Audi A3 / S3 / RS3 Sportback

2004 – 2012

only V6 quattro + RS3

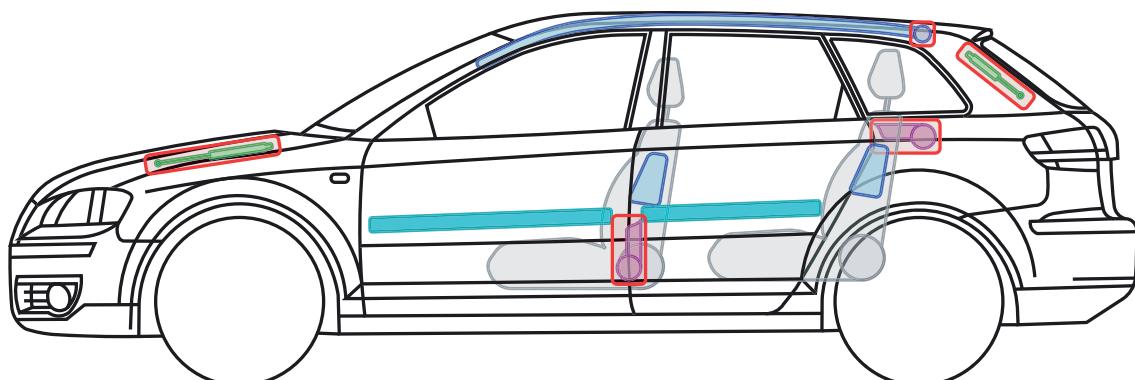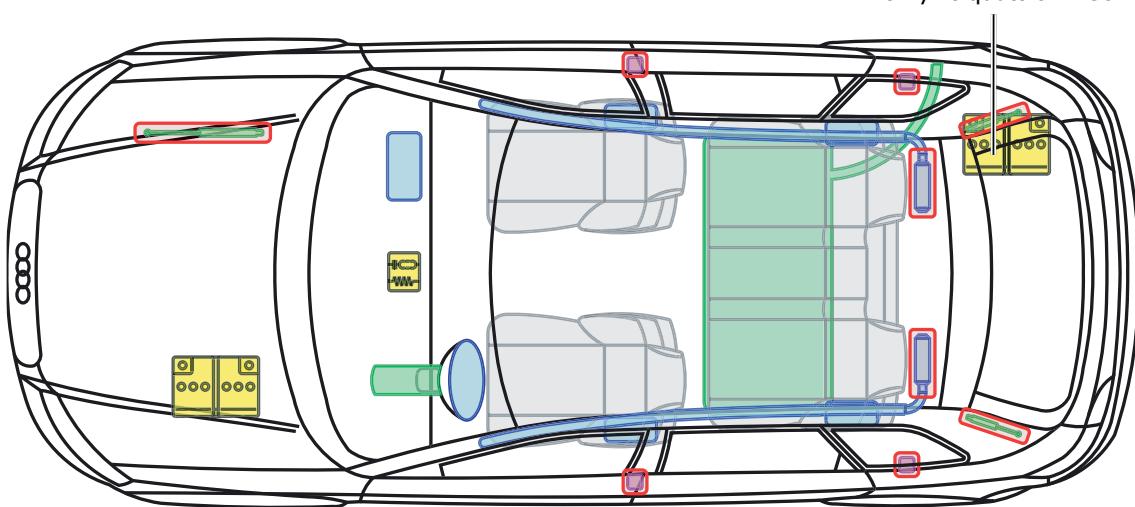

Legend

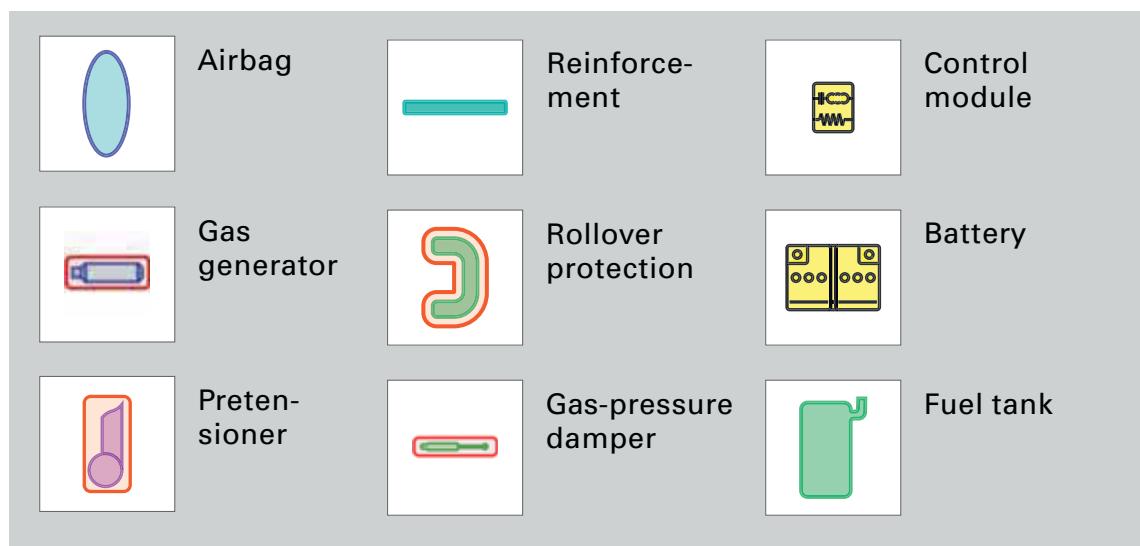



A3
+S3/RS3 Sportback





► Audi A3 Cabriolet

from 2008

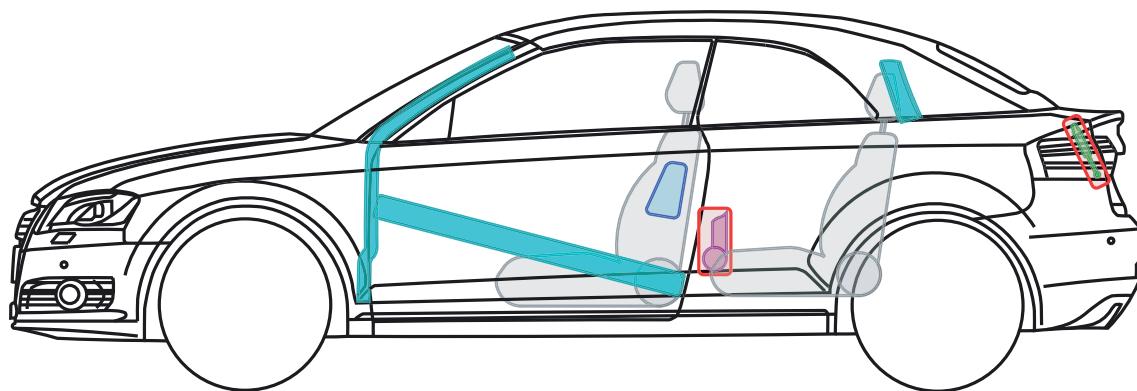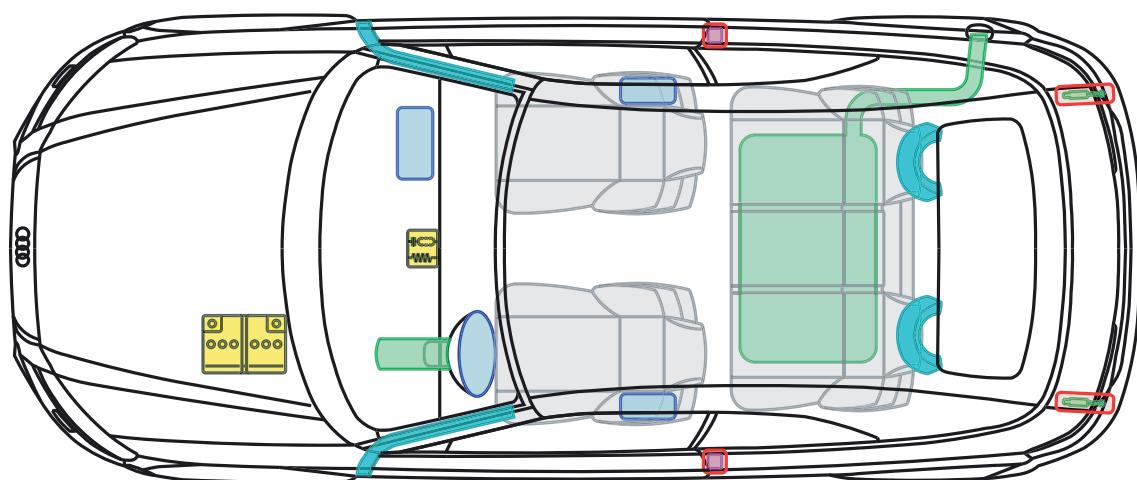


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A3 / S3 (3-door)

from 2012

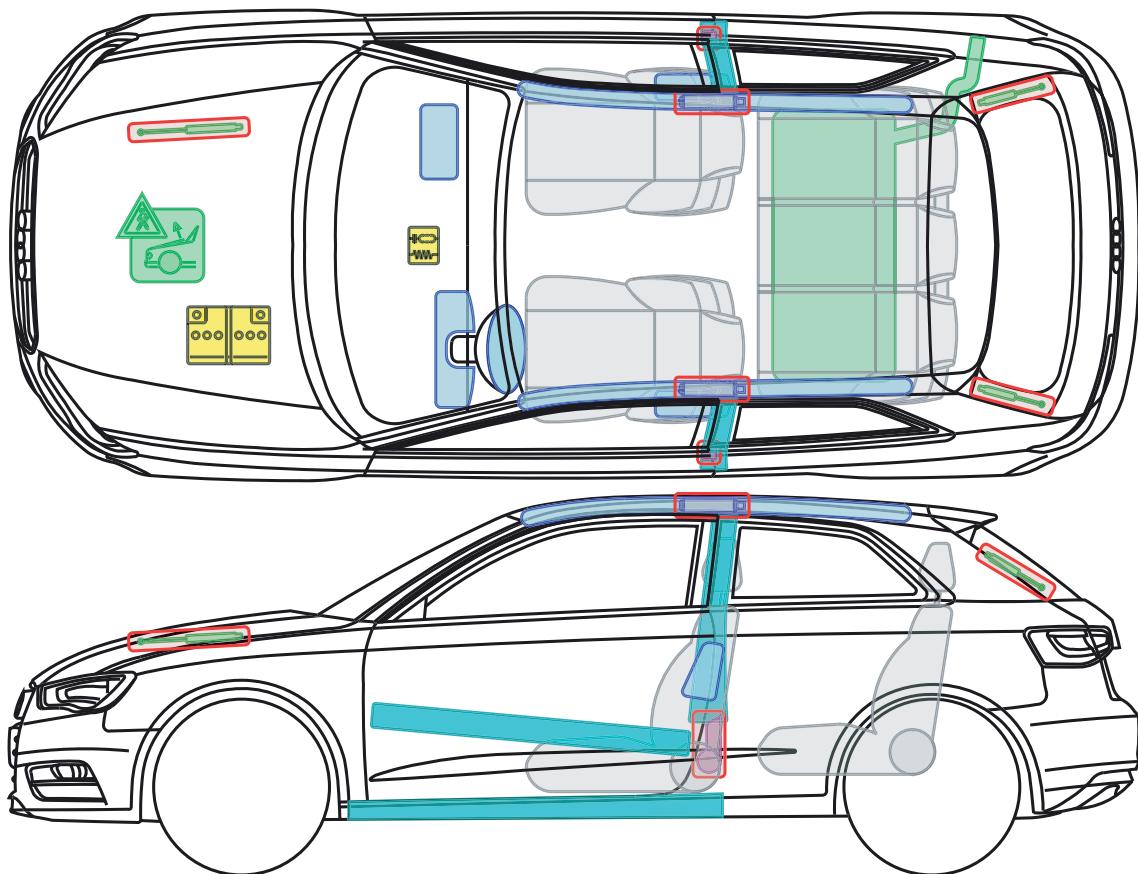


Legend

	Airbag		Reinforcement		Control module		Pedestrian protection system
	Gas generator		Overall protection		12 V battery		
	Pre-tensioner		Gas pressure damper		Fuel tank		



► Audi A3 / S3 Sportback

from 2012

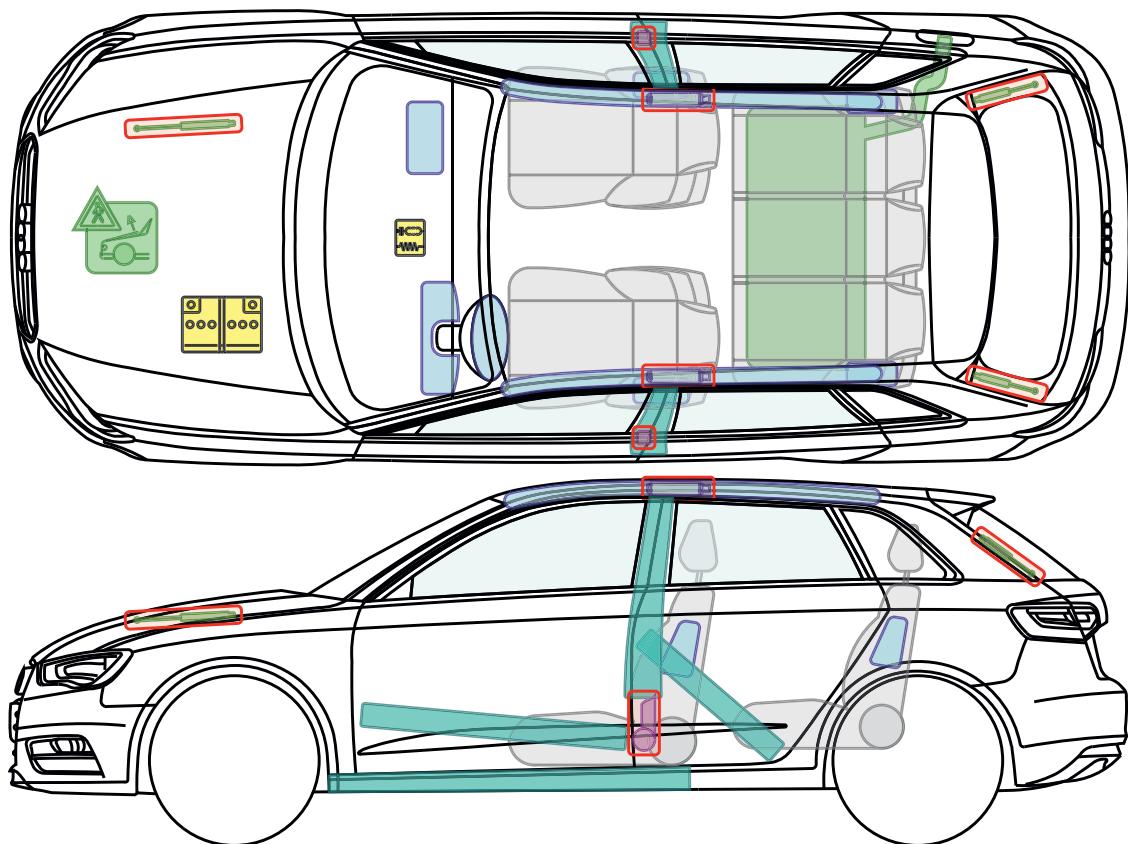


Legend

	Airbag		Reinforcement		Control module		Pedestrian protection system
	Gas generator		Overall protection		12 V battery		
	Pre-tensioner		Gas pressure damper		Fuel tank		



► Audi A3 / S3 Limousine

from 2013

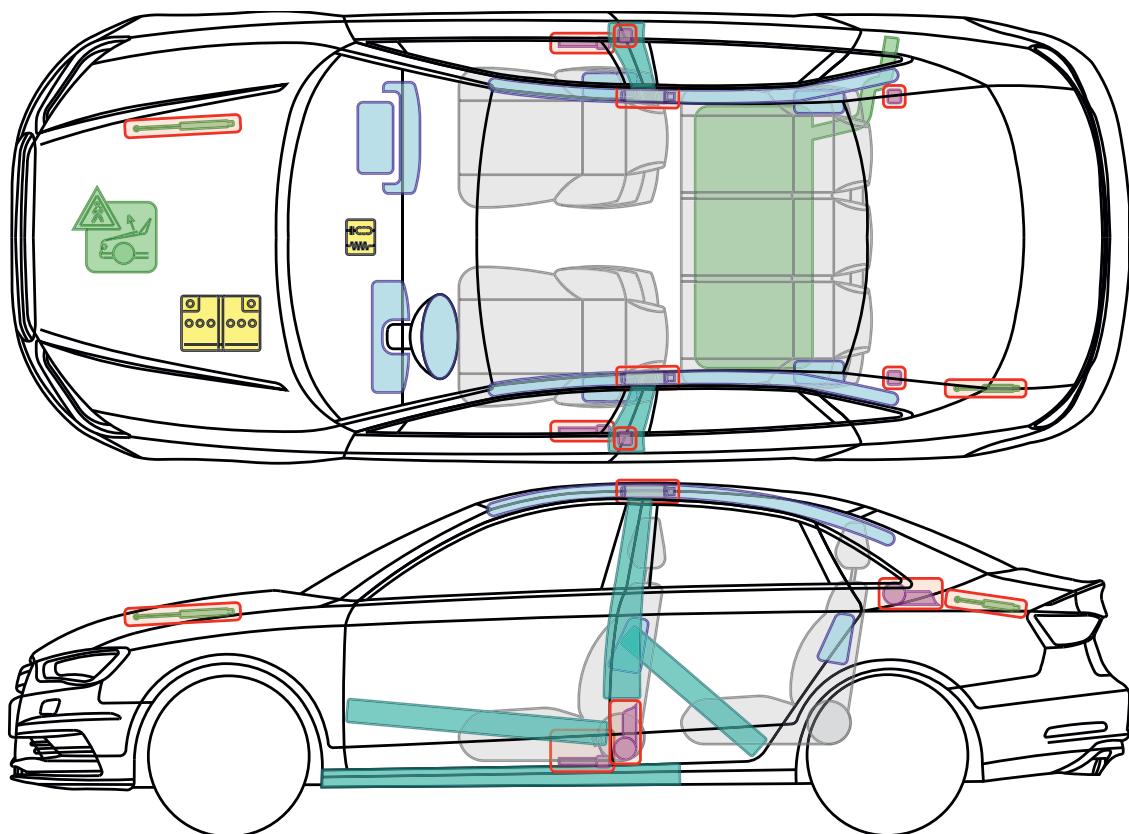


Legend

	Airbag		Reinforcement		Control module		Pedestrian protection system
	Gas generator		Overall protection		12 V battery		
	Pre-tensioner		Gas pressure damper		Fuel tank		



► Audi A4 / S4

1995 – 2001

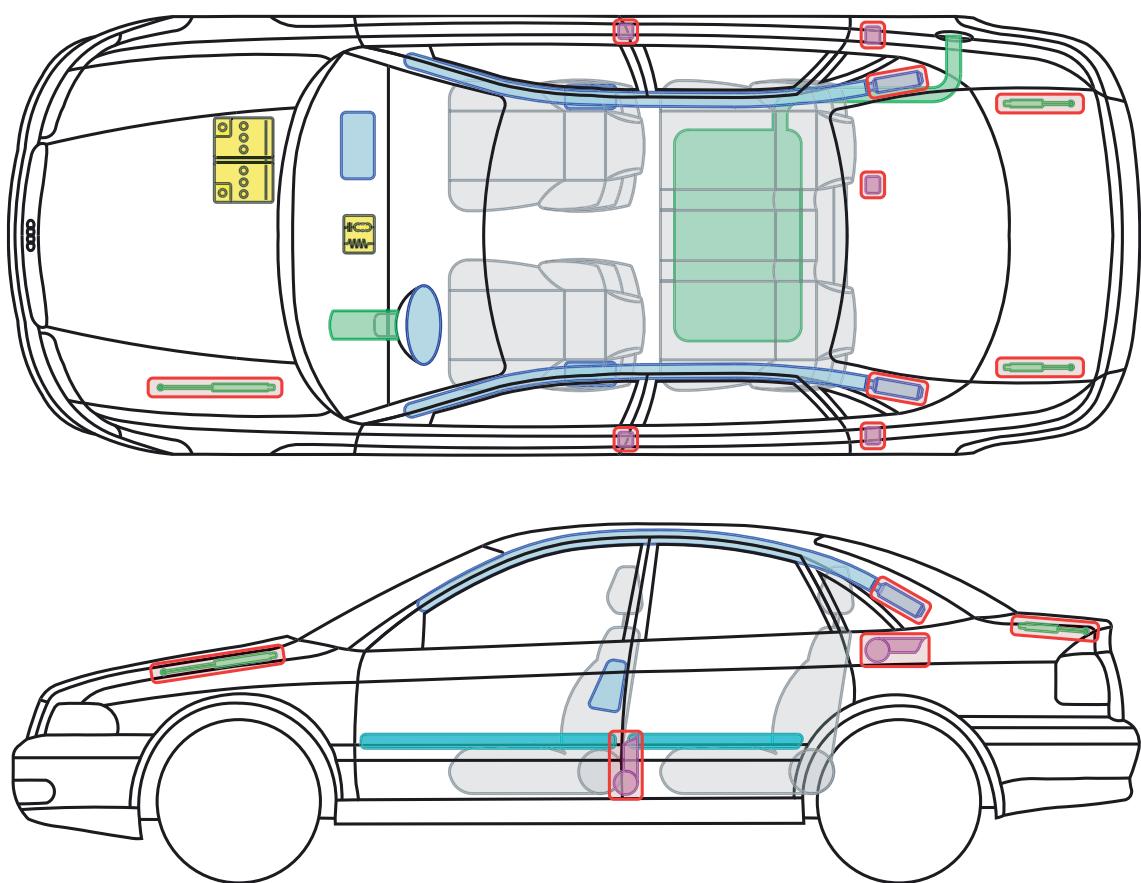


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A4 / S4 / RS4 Avant

1996 – 2001

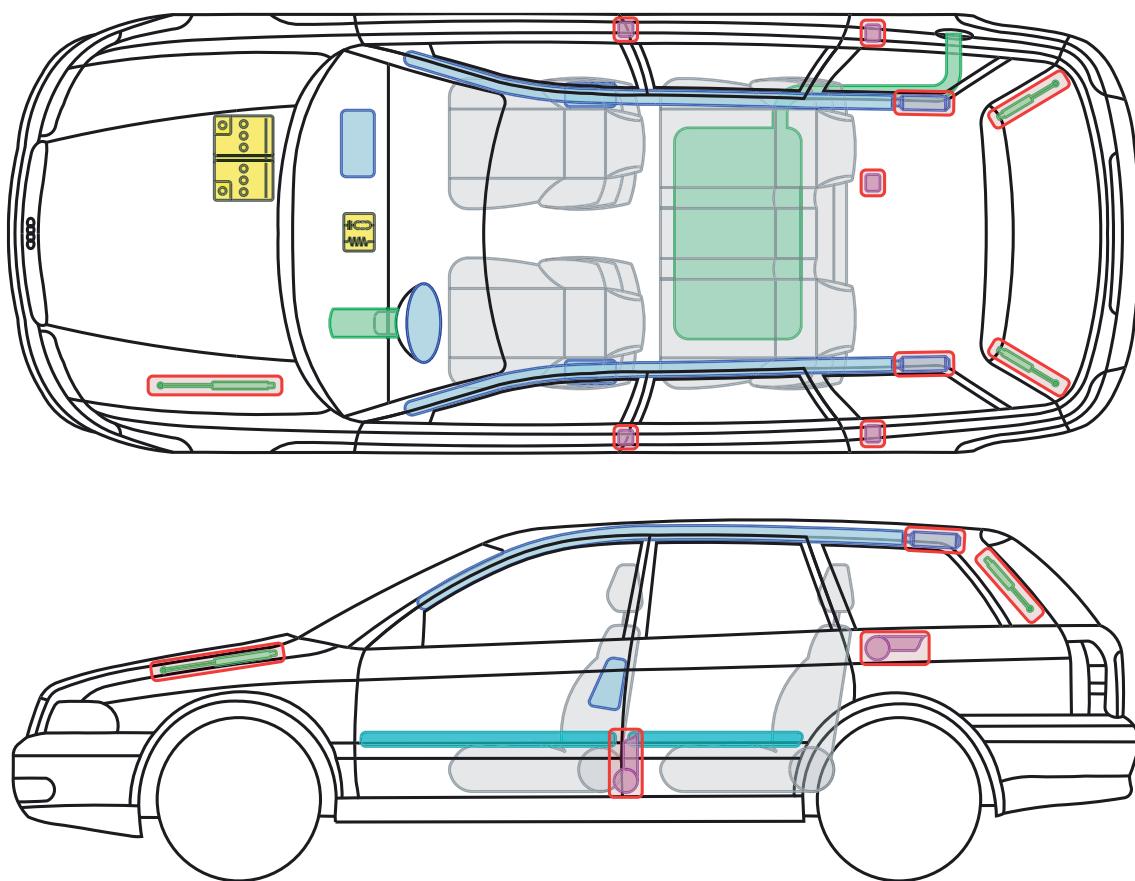

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

A4
+S4/RS4 Avant



► Audi A4 / S4

2001 – 2005

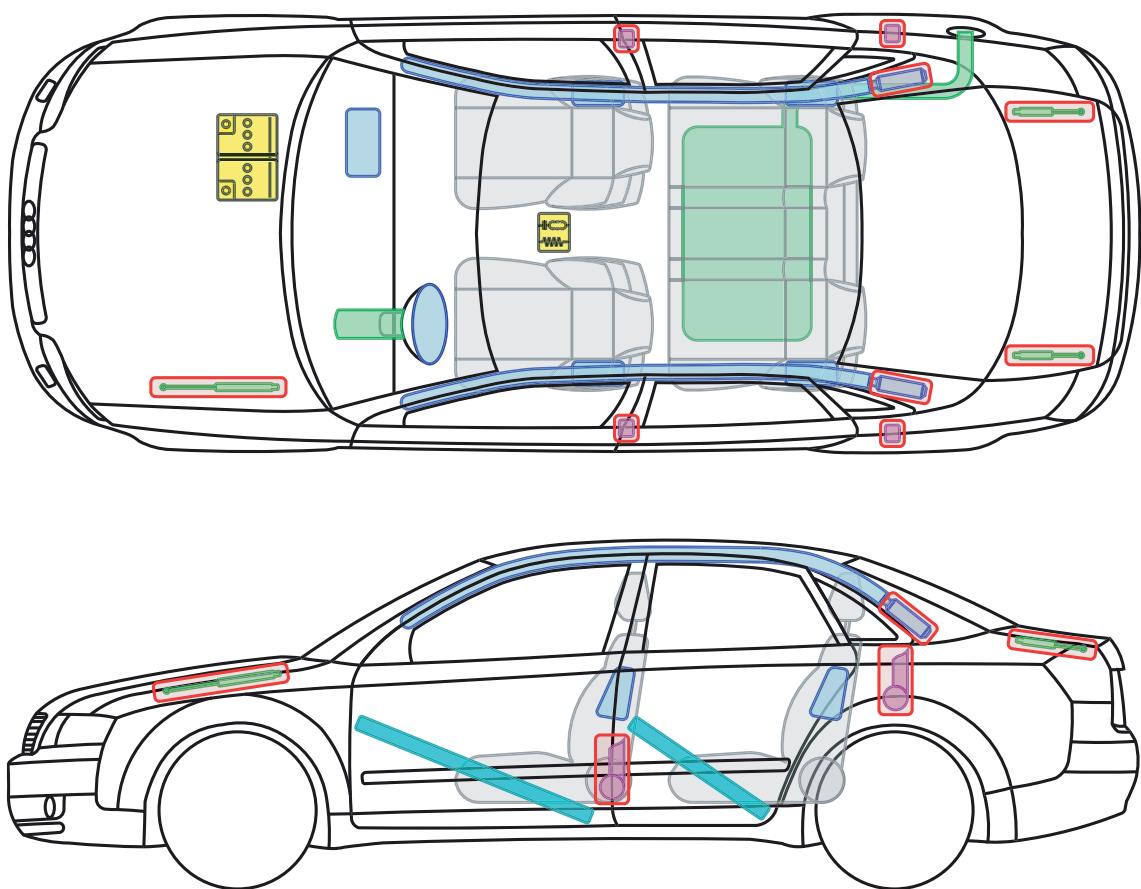


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A4 / S4 Avant

2001 – 2005

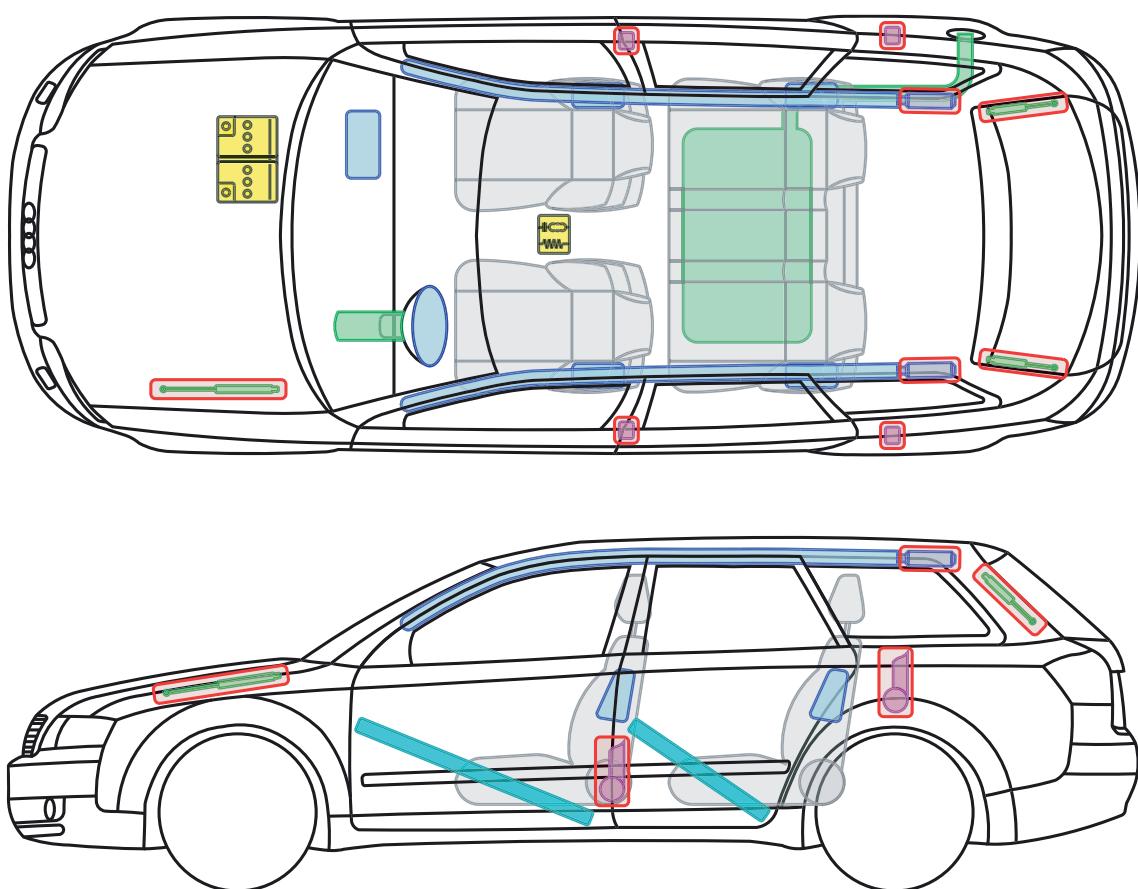



Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A4 / S4 / RS4

2005 – 2007

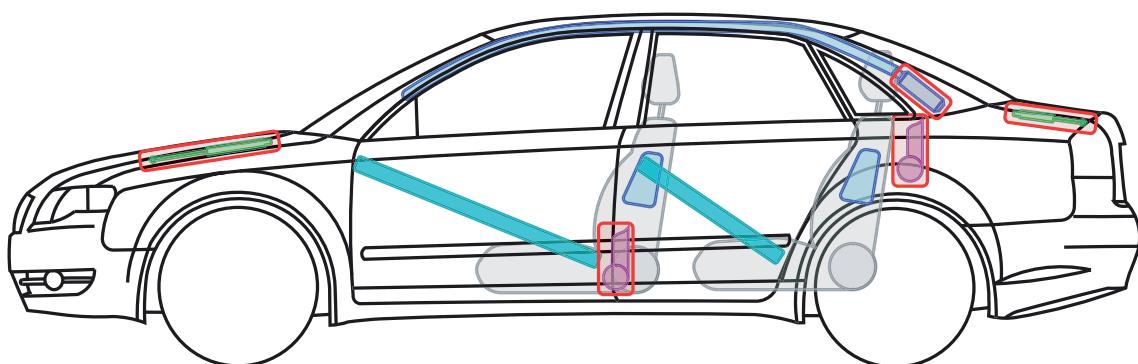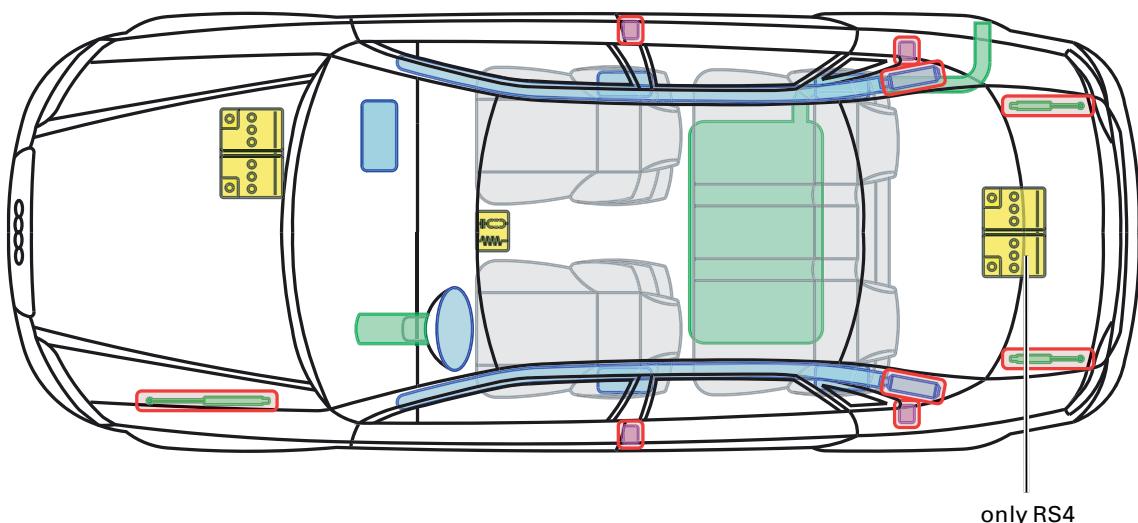

Legend



	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

A4
+S4/RS4 Limous.



► Audi A4 / S4 / RS4 Avant

2005 – 2008

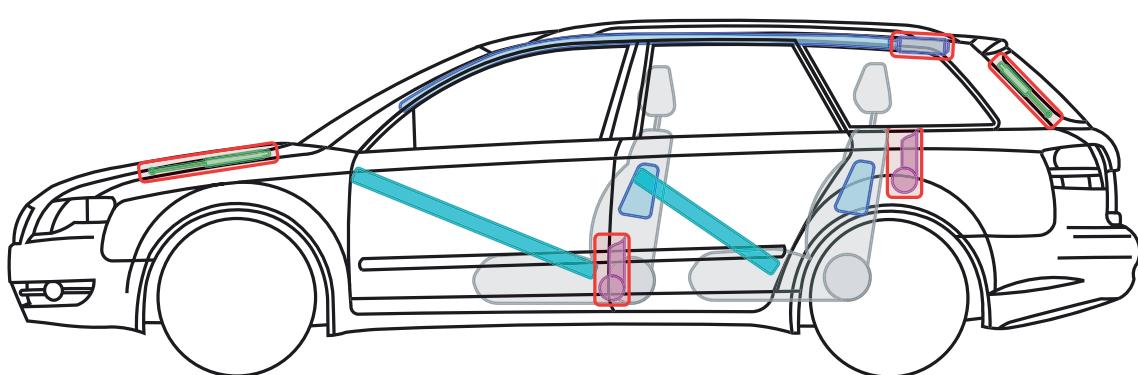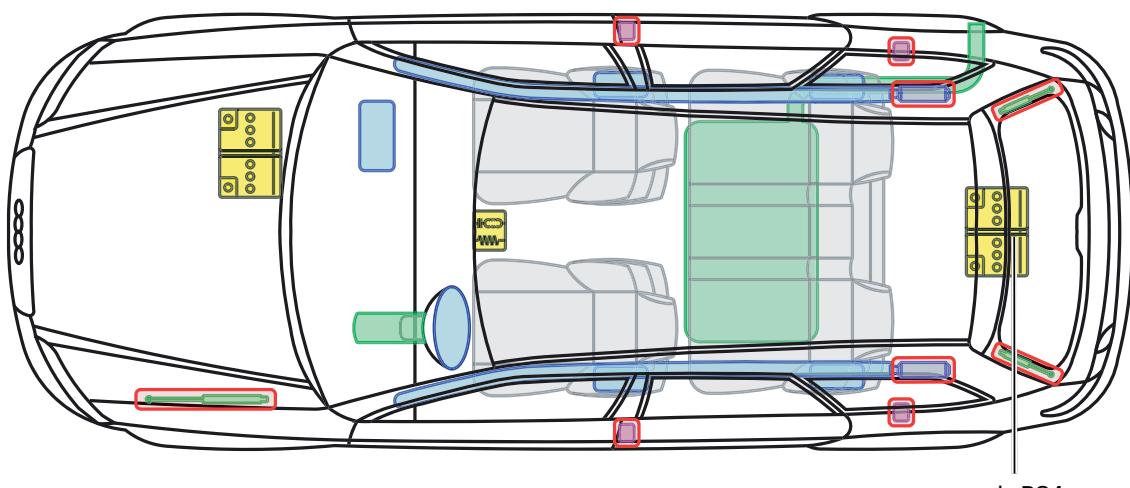


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A4 / S4 Cabriolet

2002 – 2005

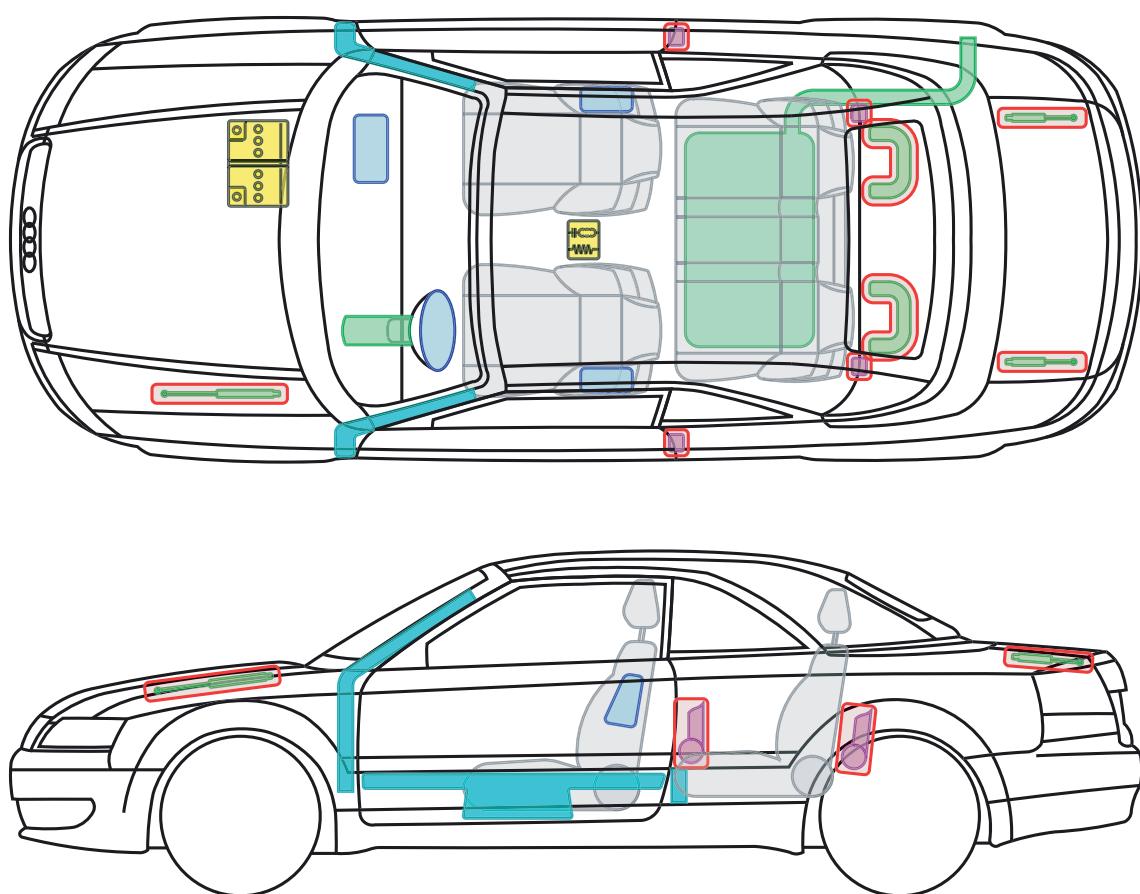



Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A4 / S4 / RS4 Cabriolet

2005 – 2009

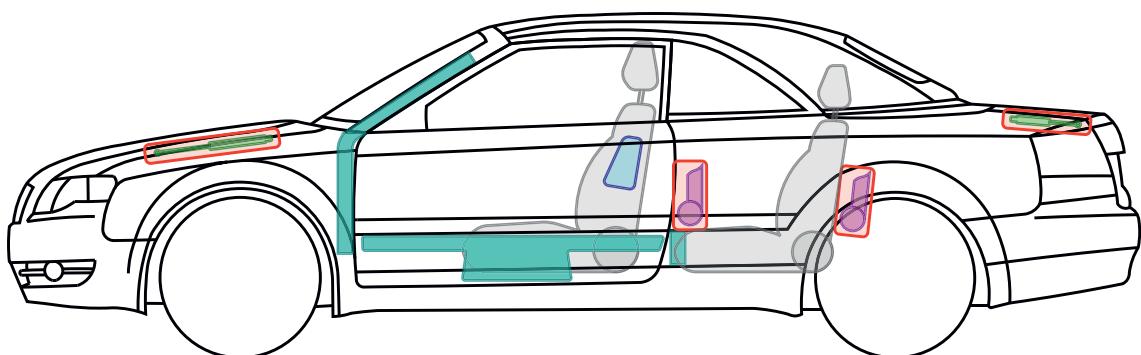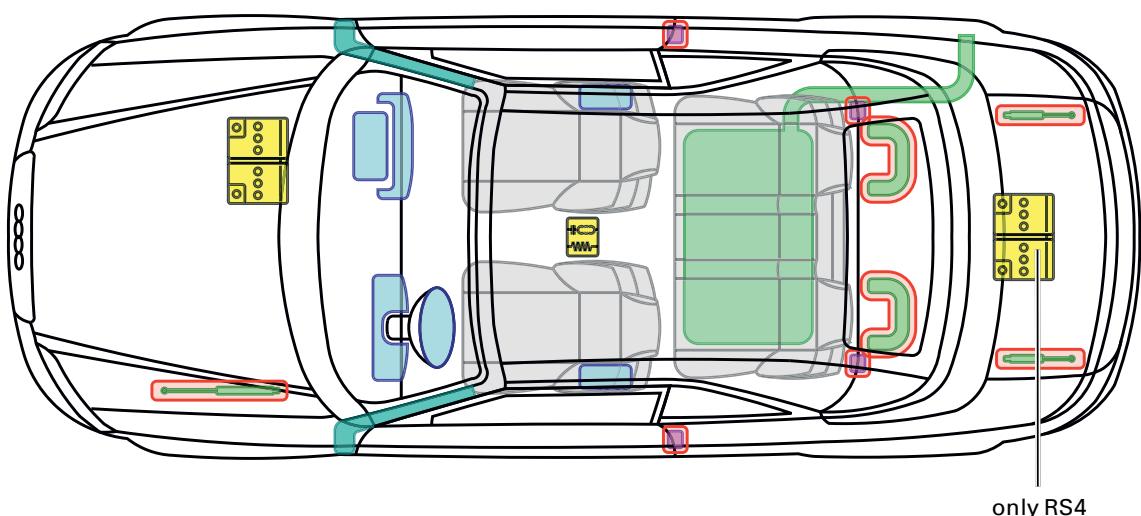

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

A4
+S4 /RS4 Cabriolet



► Audi A4 / S4

2007 – 2012

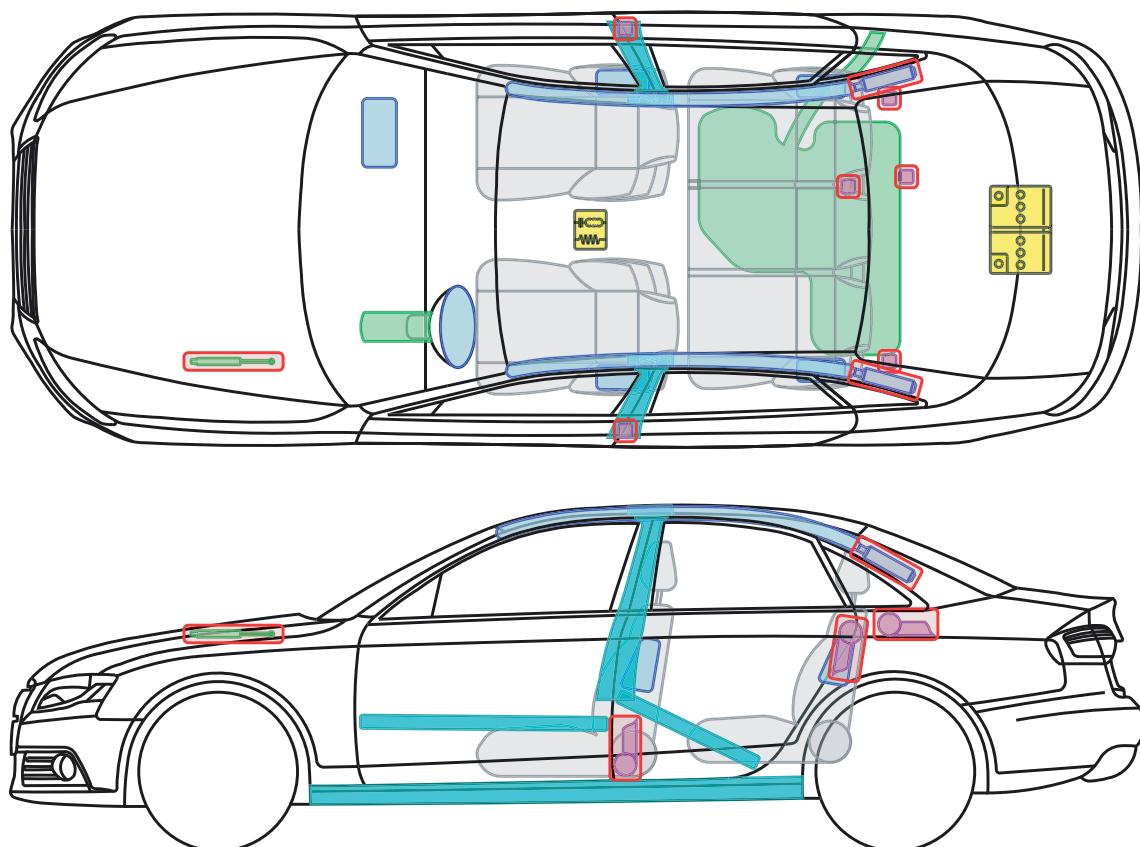


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A4 /S4 Avant

2008 – 2012

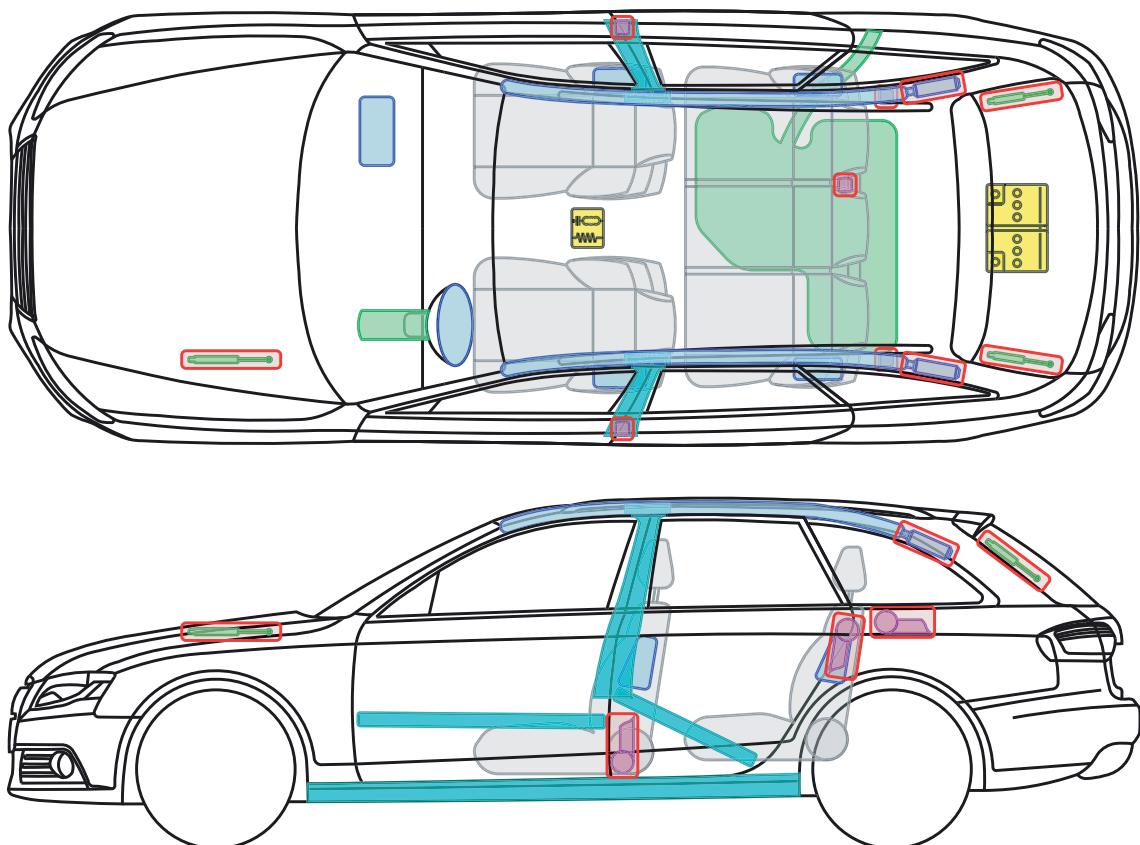


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A4 allroad

2009 – 2012

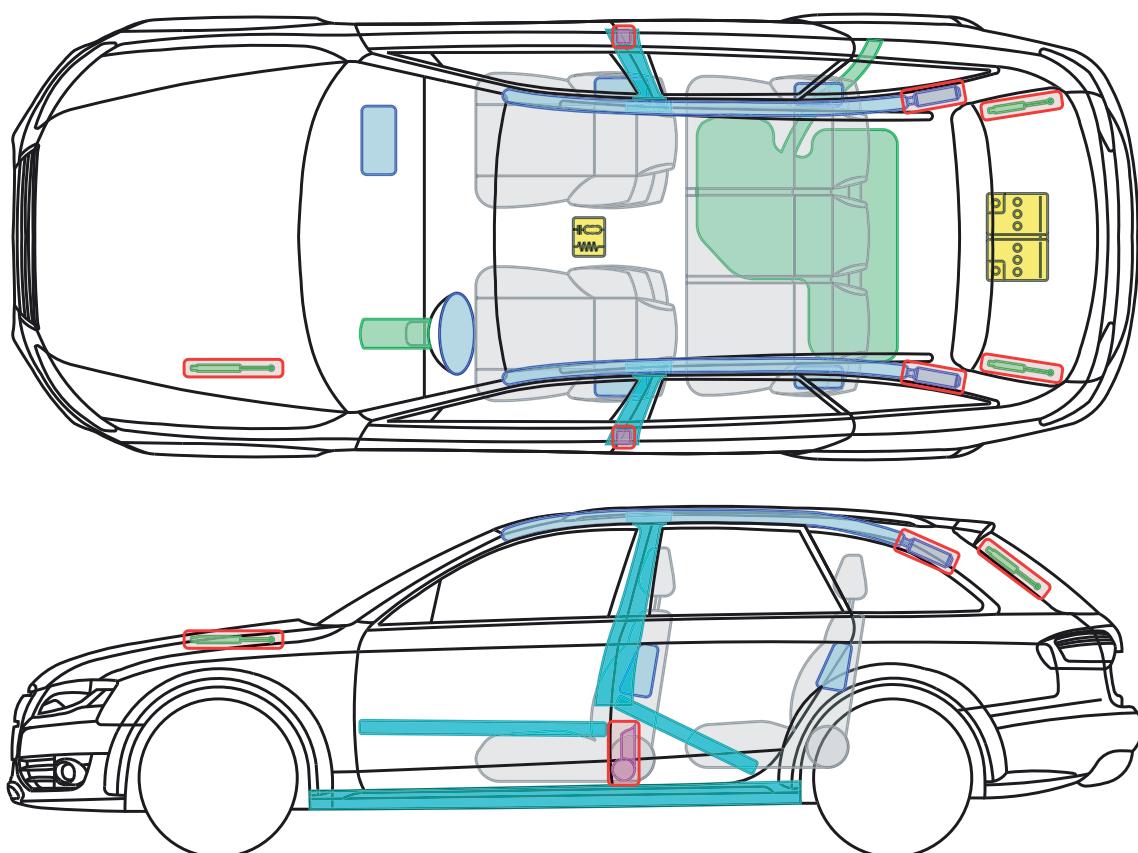


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A4 / S4

from 2012

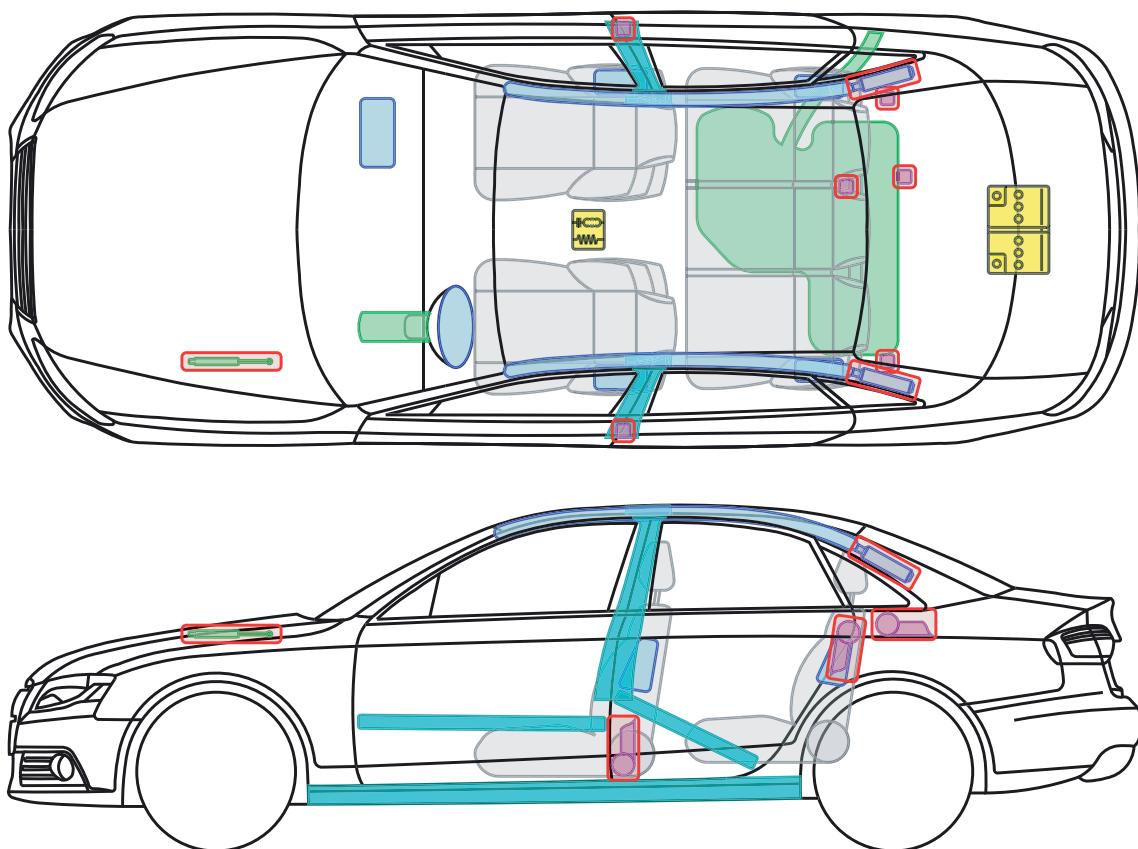


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A4 / S4 / RS4 Avant

from 2012

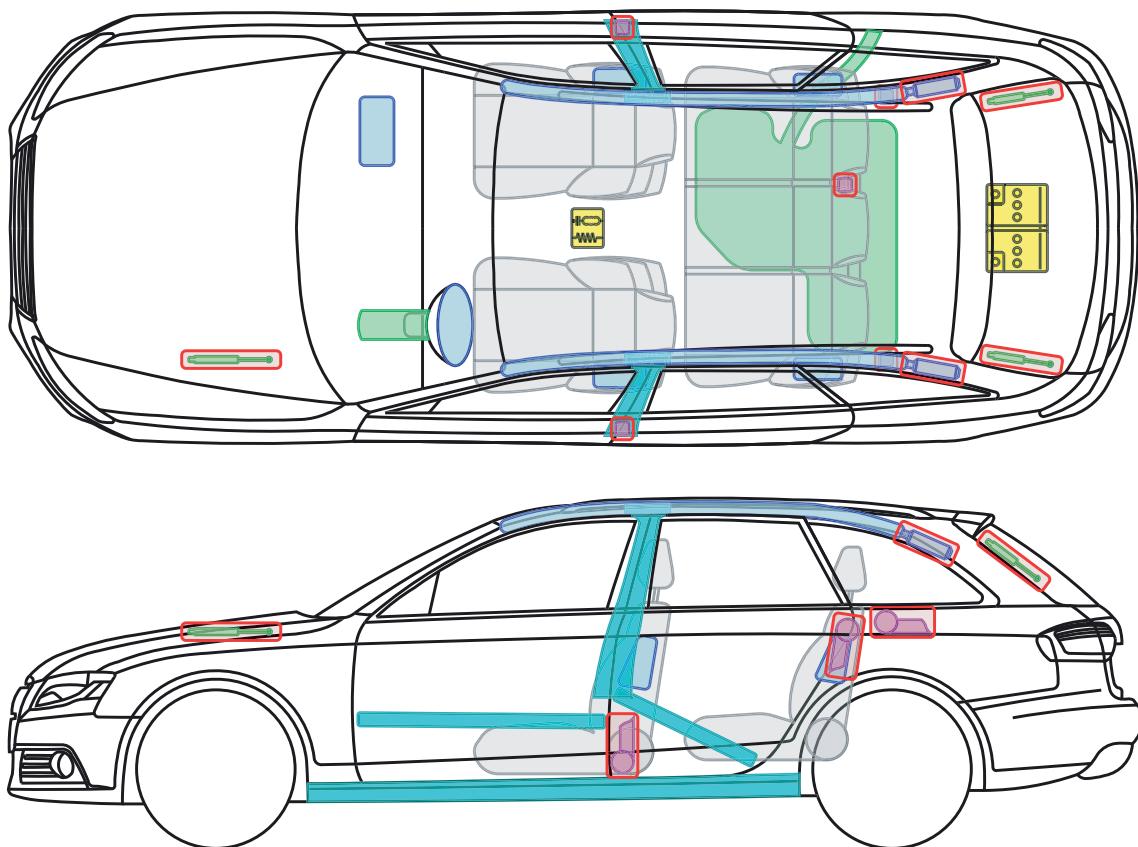


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A4 allroad

from 2012

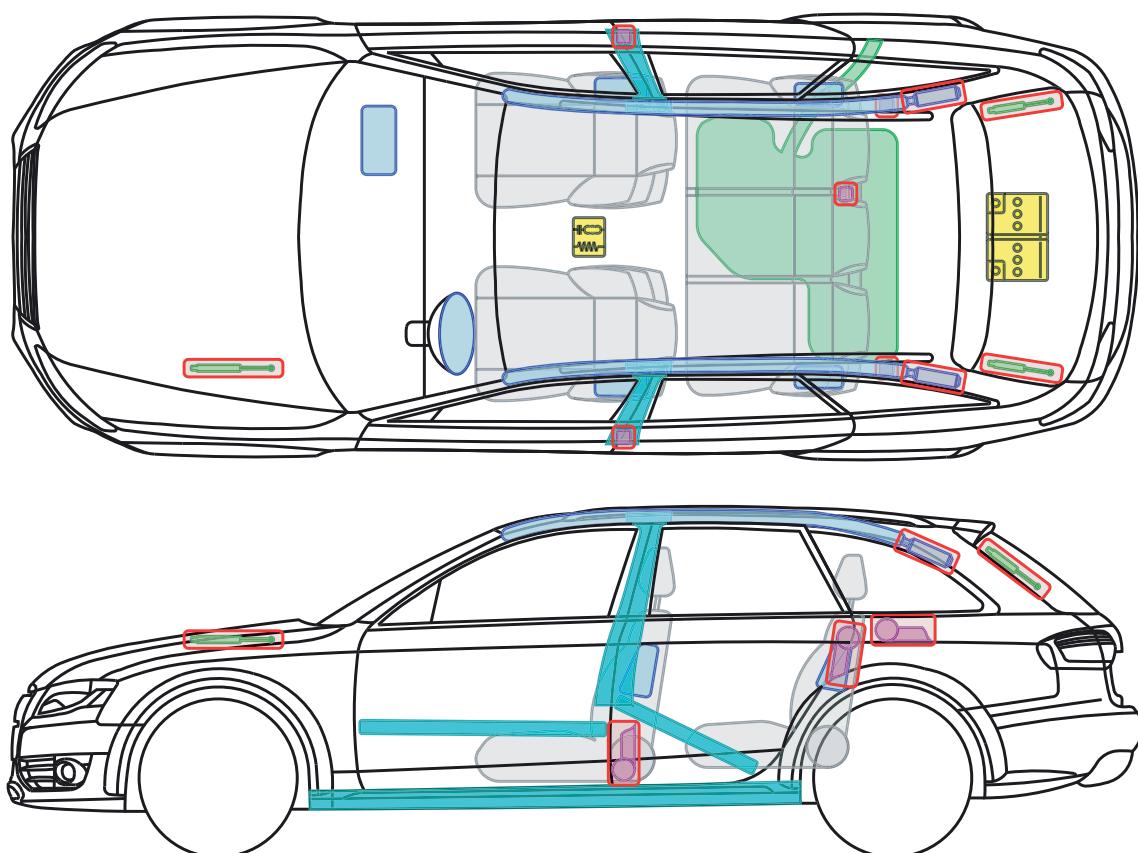


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A5 / S5 / RS5

2007 – 2011

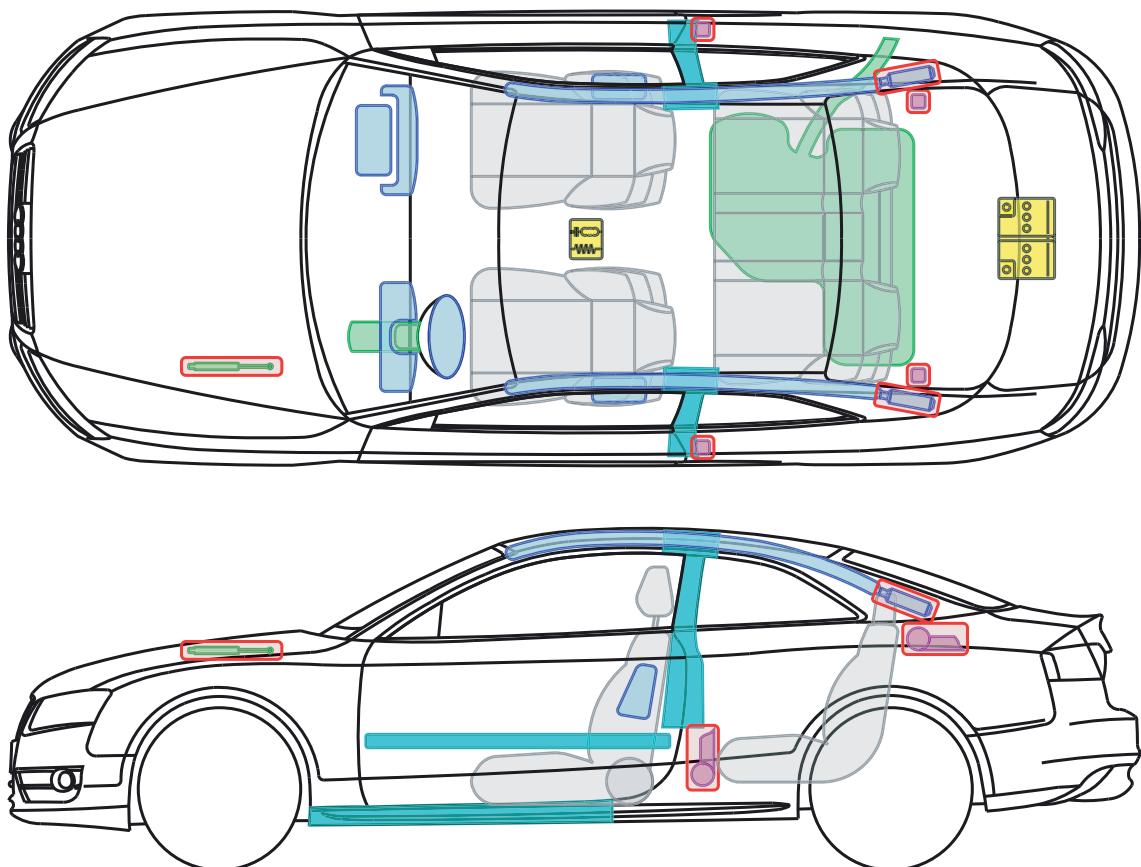



Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A5 / S5 Cabriolet

2009 – 2011

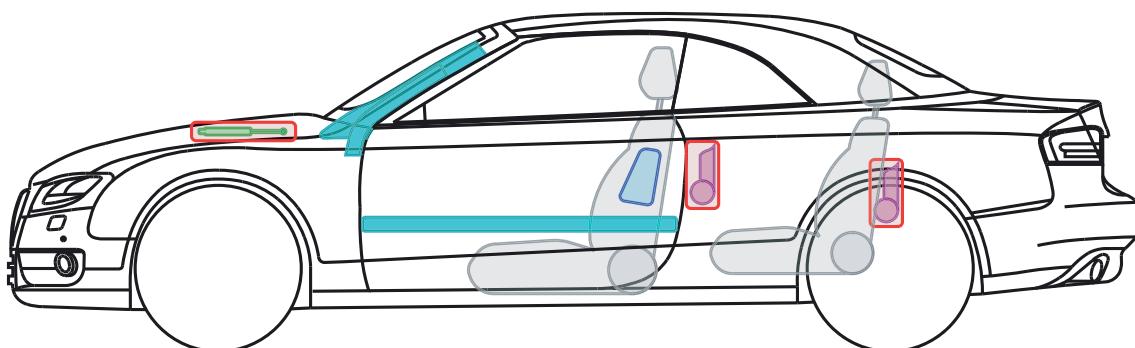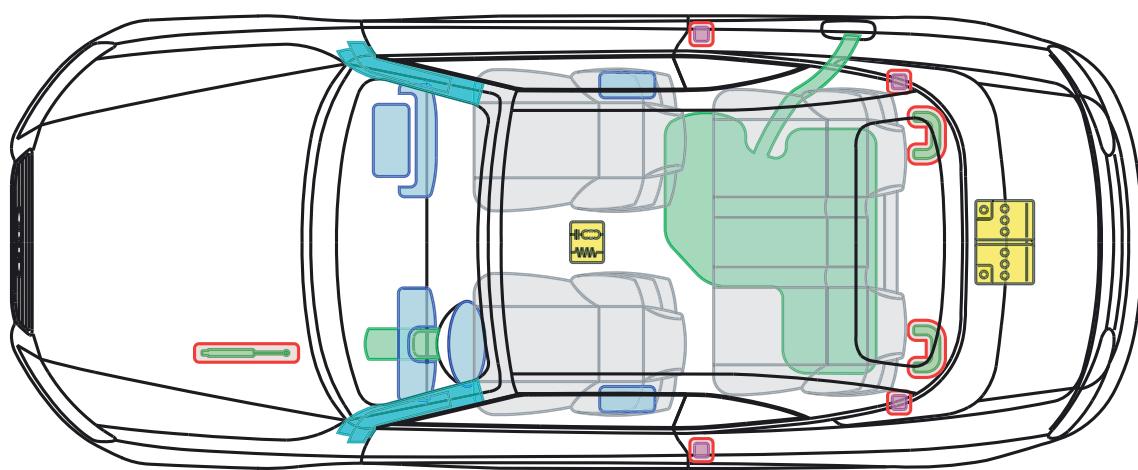

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

A5
+S5 Cabriolet



► Audi A5 / S5 Sportback

2009 – 2011

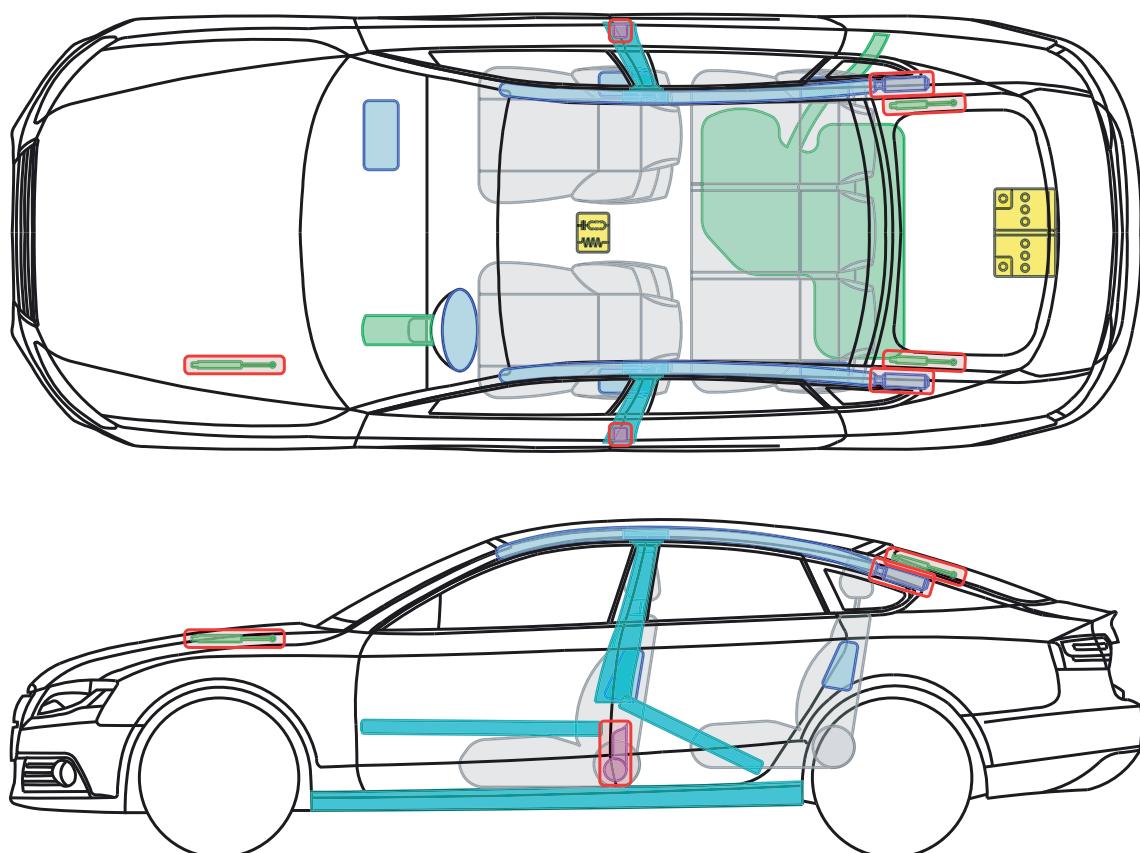

Legend



	Airbag		Reinforcement		Control module
	Gas generator		Rollover protection		Battery
	Pre-tensioner		Gas-pressure damper		Fuel tank

A5
+S5 Sportback



► Audi A5 / S5 / RS5

from 2011

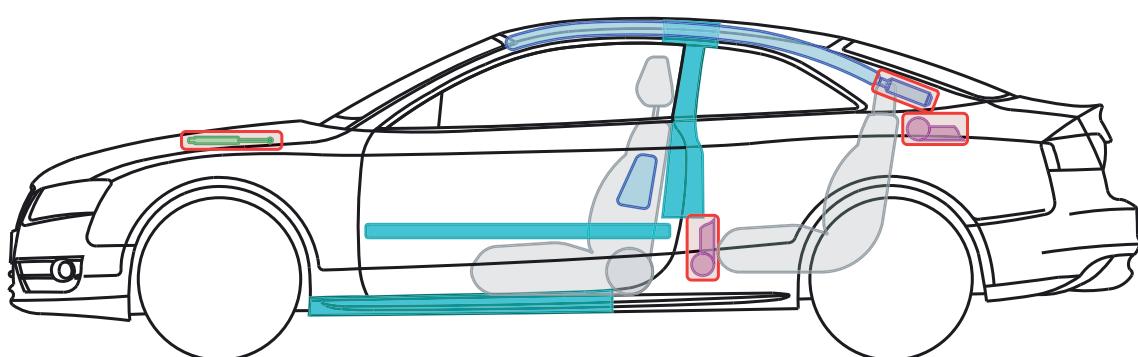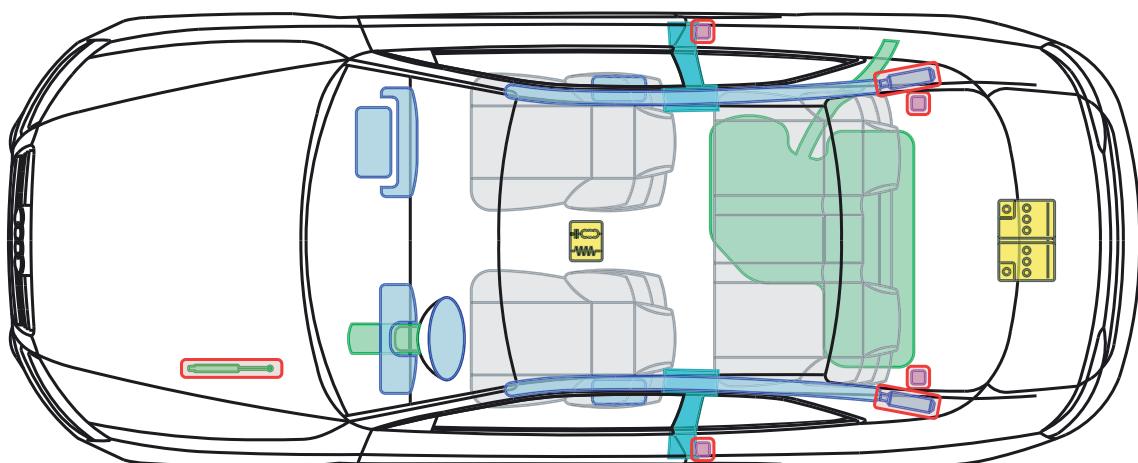

Legend



	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

A5
+S5 Limousine



► Audi A5 / S5 Cabriolet

from 2011

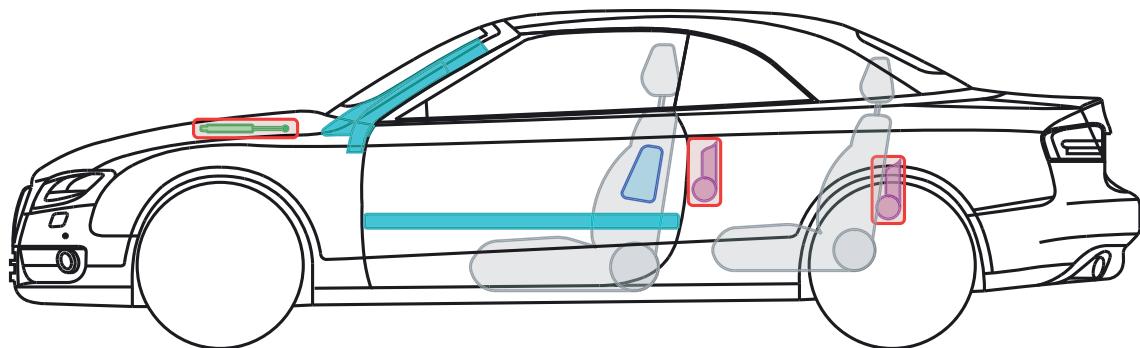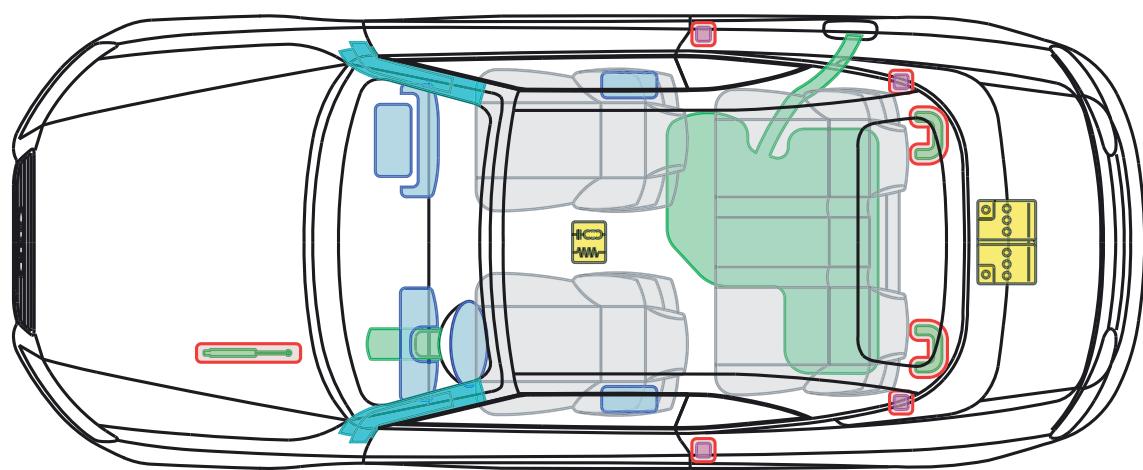

Legend


	Airbag		Reinforcement		Control module
	Gas generator		Rollover protection		Battery
	Pre-tensioner		Gas-pressure damper		Fuel tank

A5
+S5 Cabriolet



► Audi A5 / S5 Sportback

from 2011

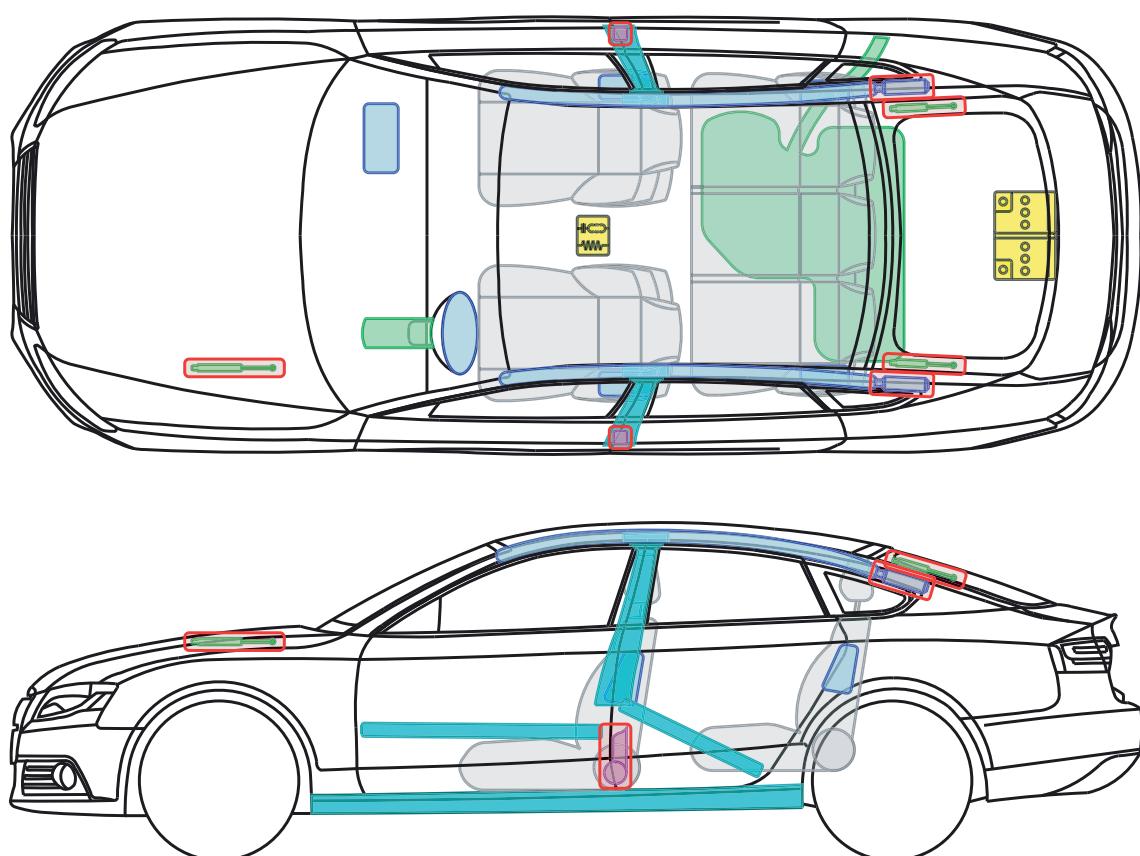


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A6 / S6 / RS6

1997 – 2004

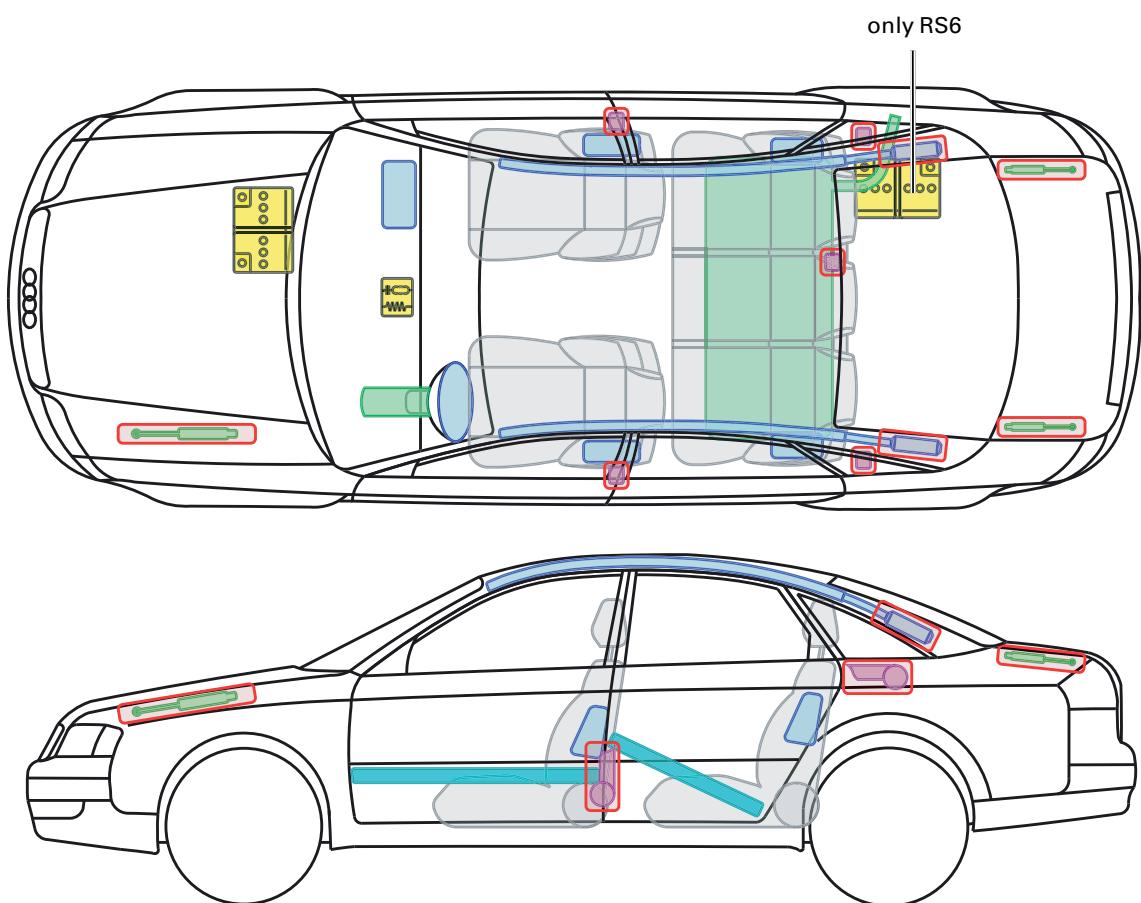


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A6 / S6 / RS6 Avant

1998 – 2004

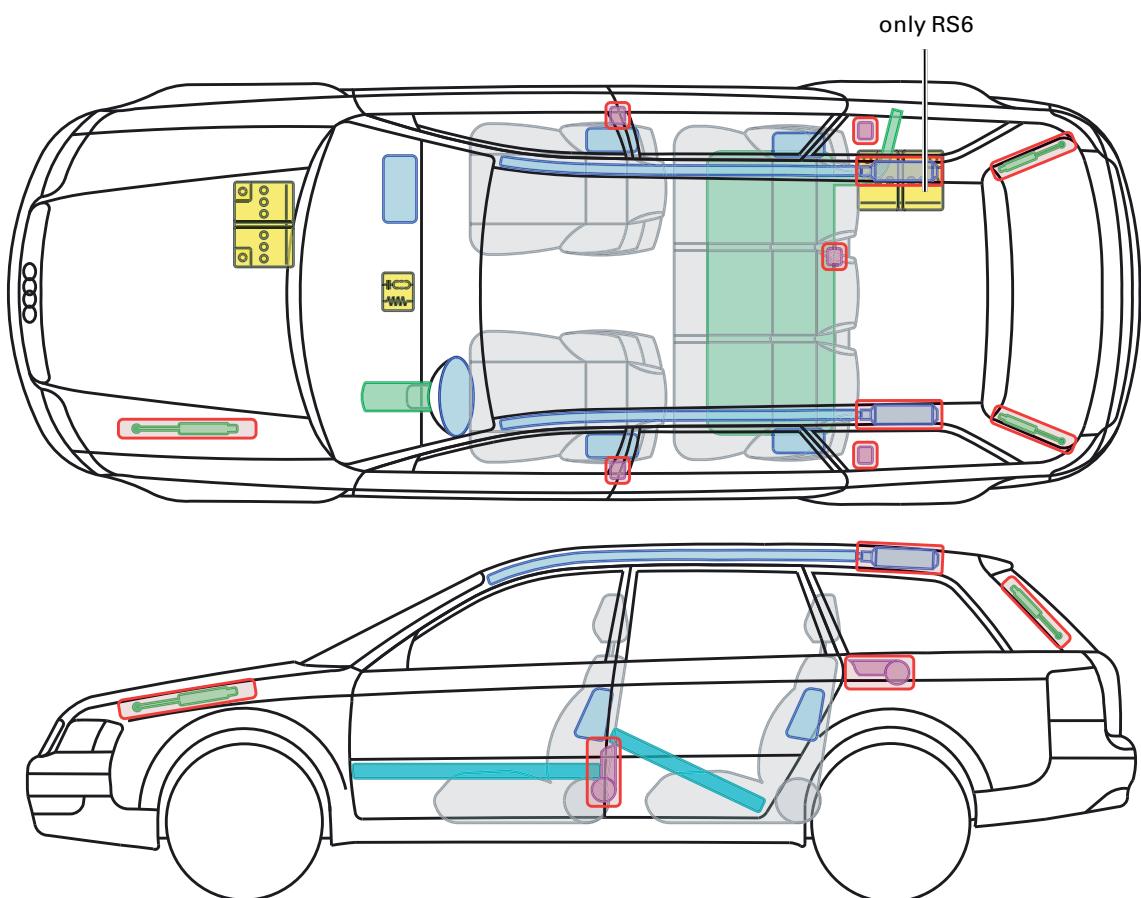


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A6 allroad

2001 – 2006

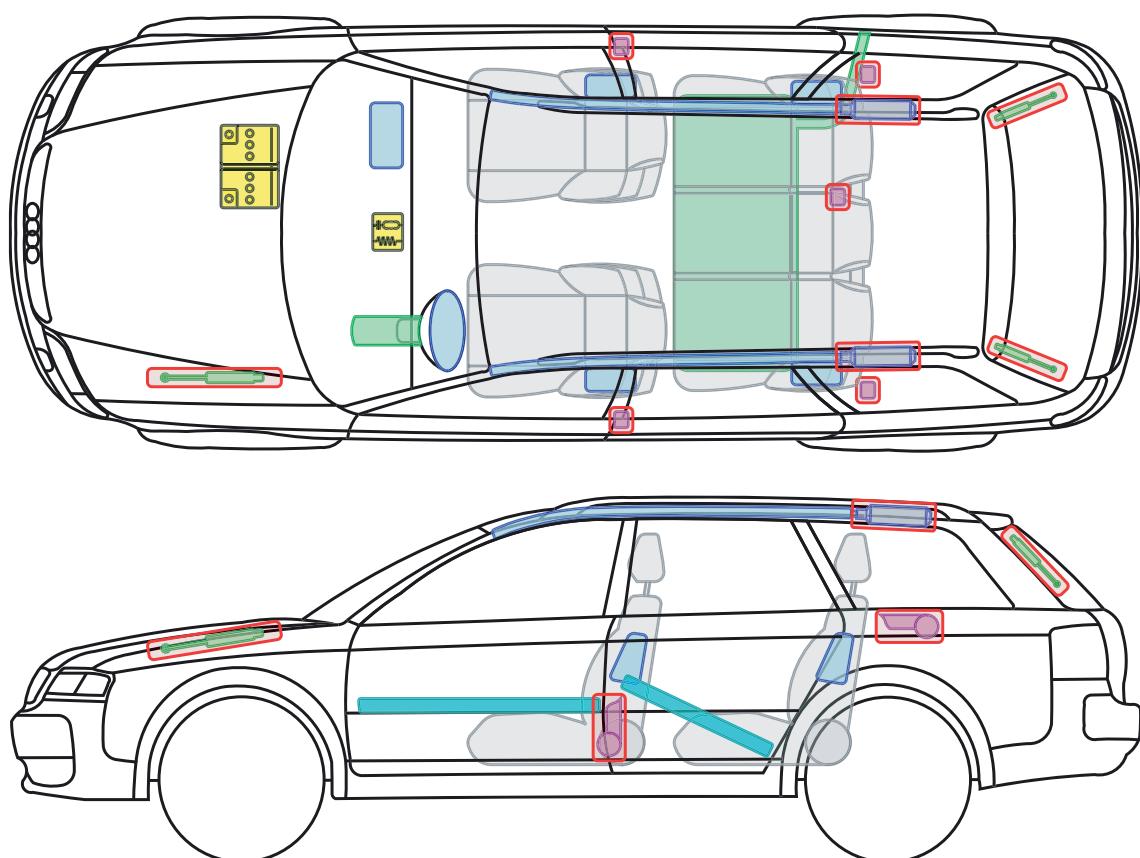

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

A6 allroad



► Audi A6 / S6 / RS6

2004 – 2008

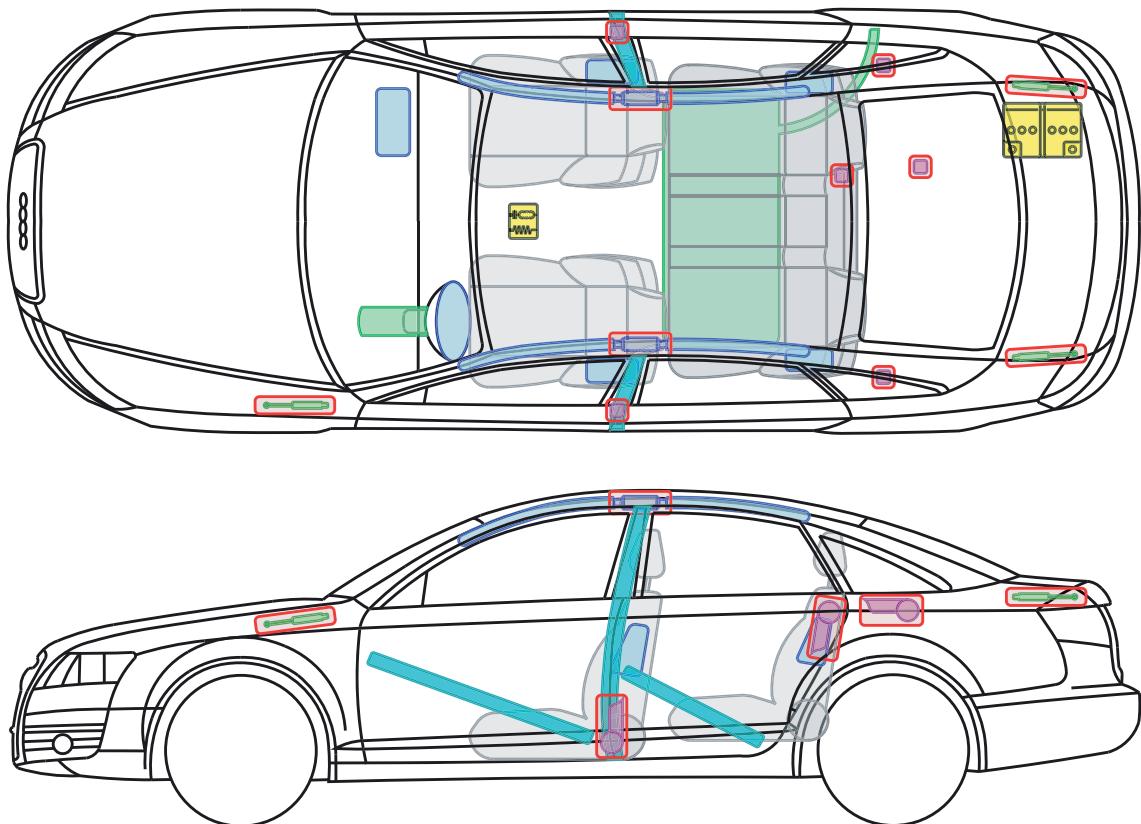


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A6 / S6 / RS6

2008 – 2011

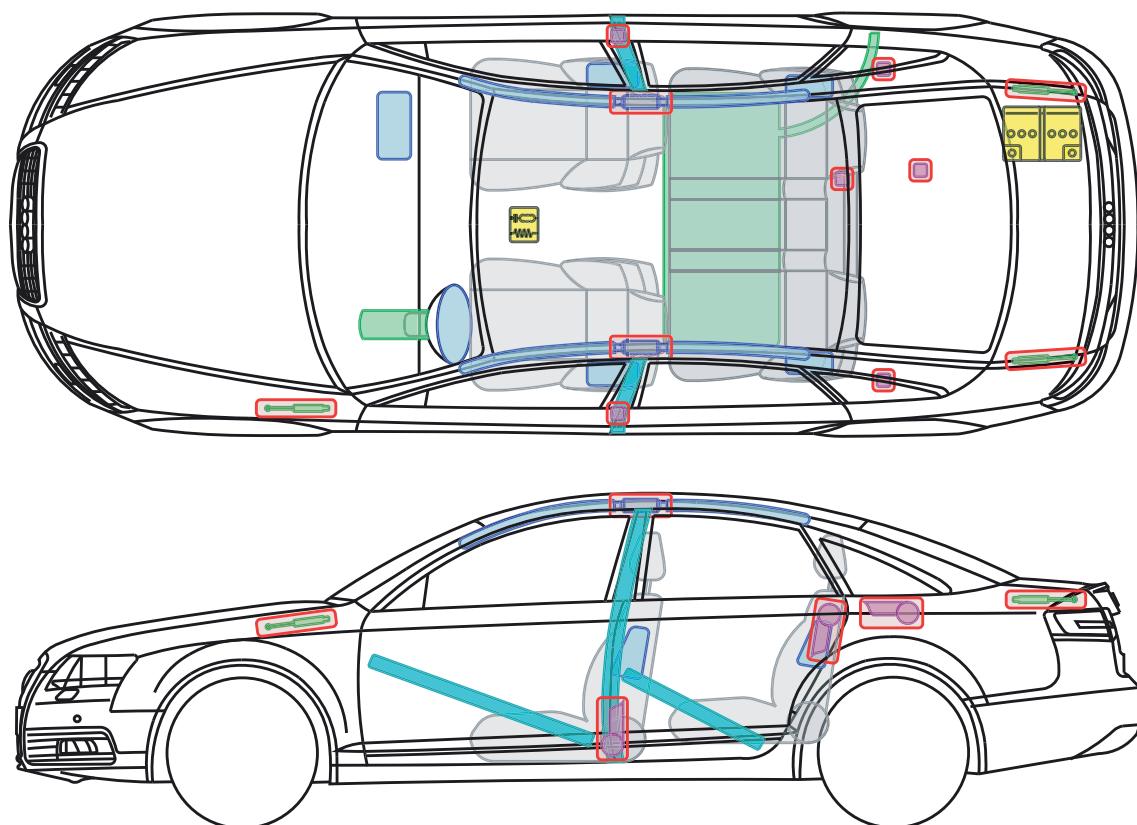


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A6 / S6 / RS6 Avant

2004 – 2012

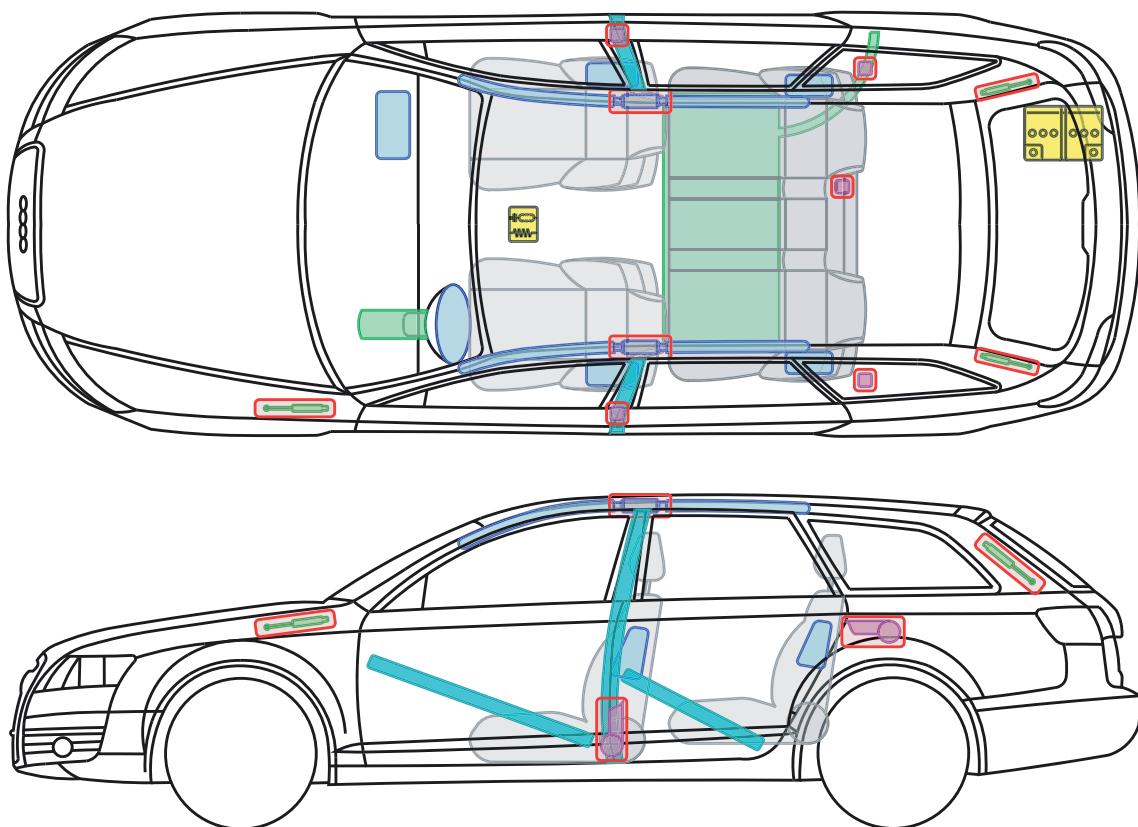

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

A6 +S6/RS6 Avant



► Audi A6 allroad

2006 – 2012

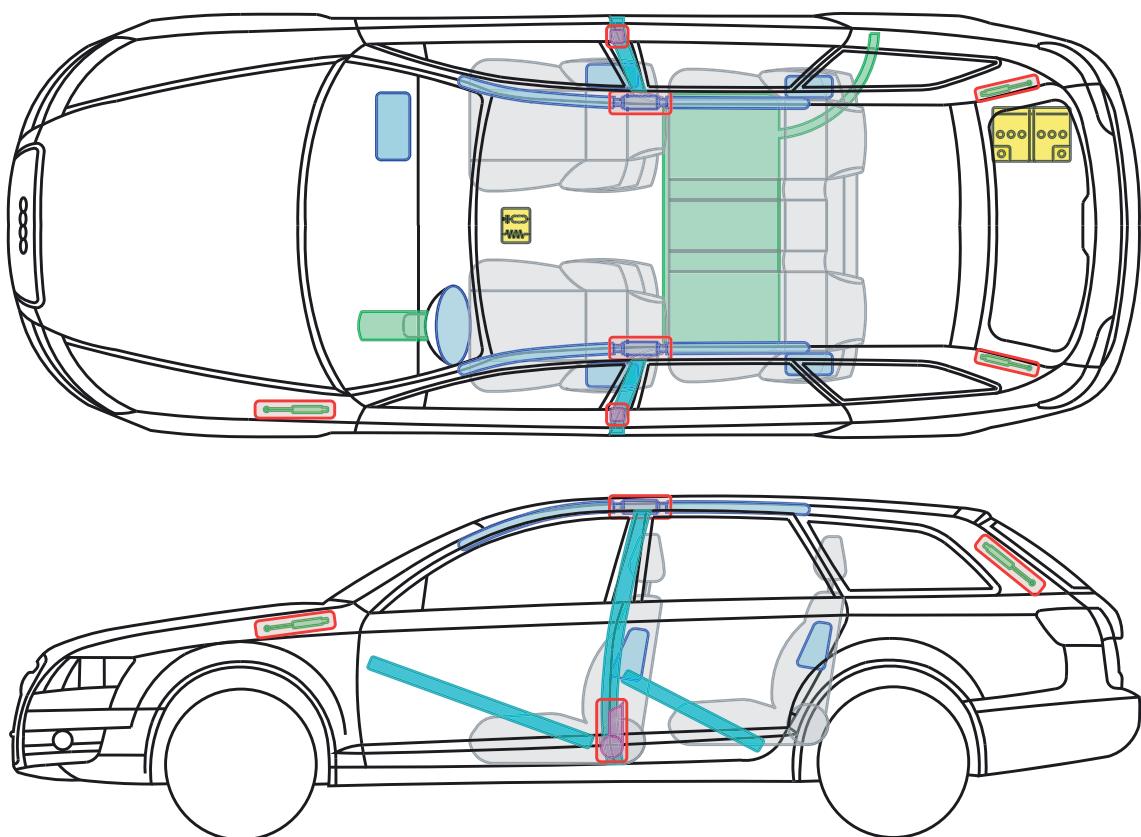


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A6 / S6

from 2011

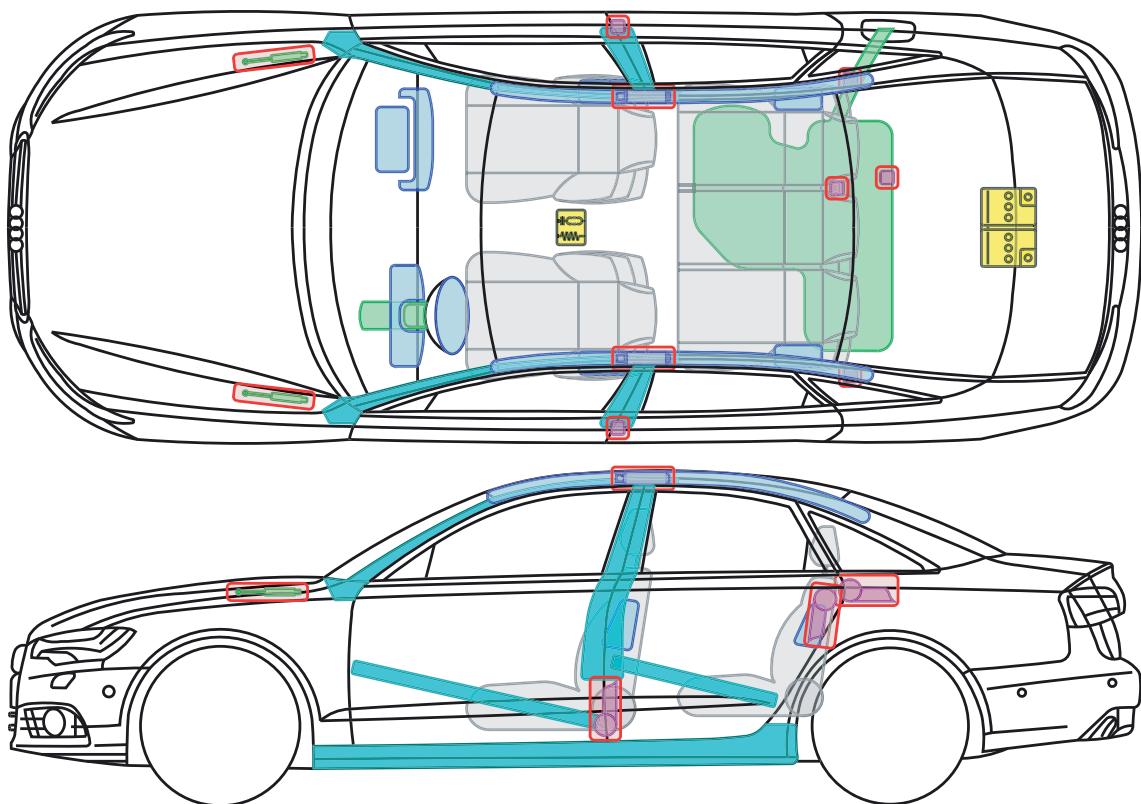


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A6 Avant

from 2011

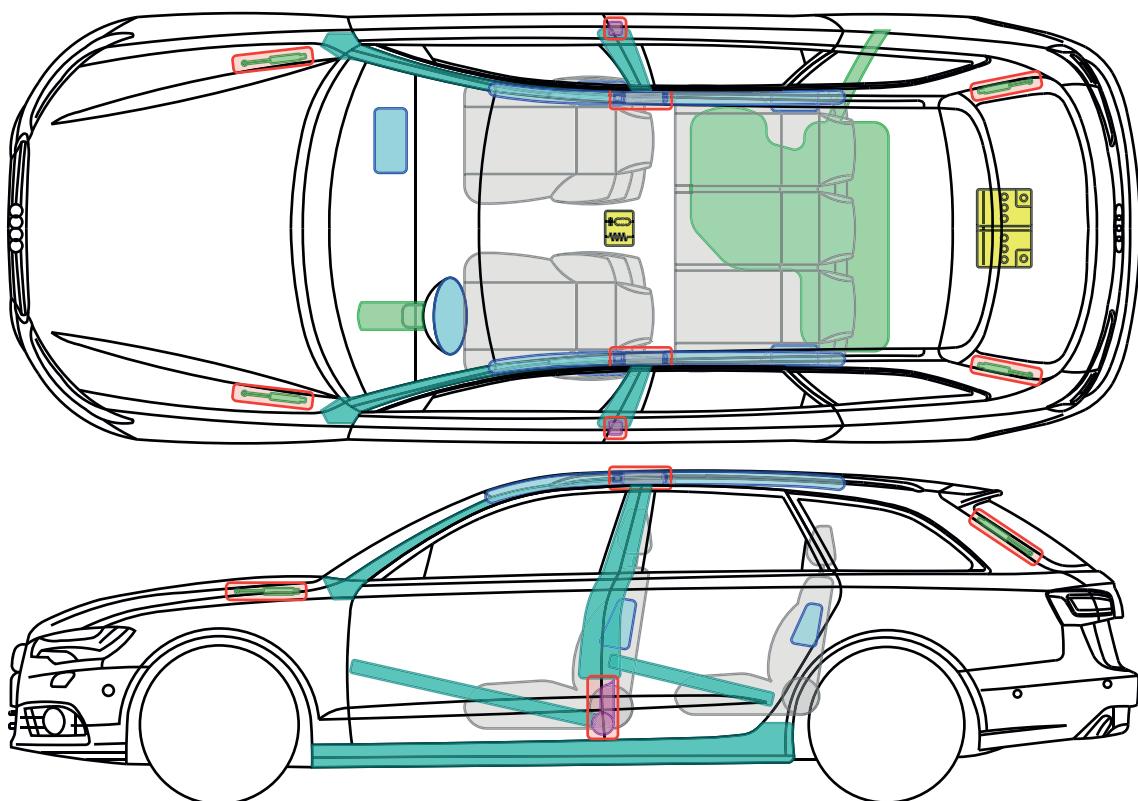


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A6 allroad

from 2012

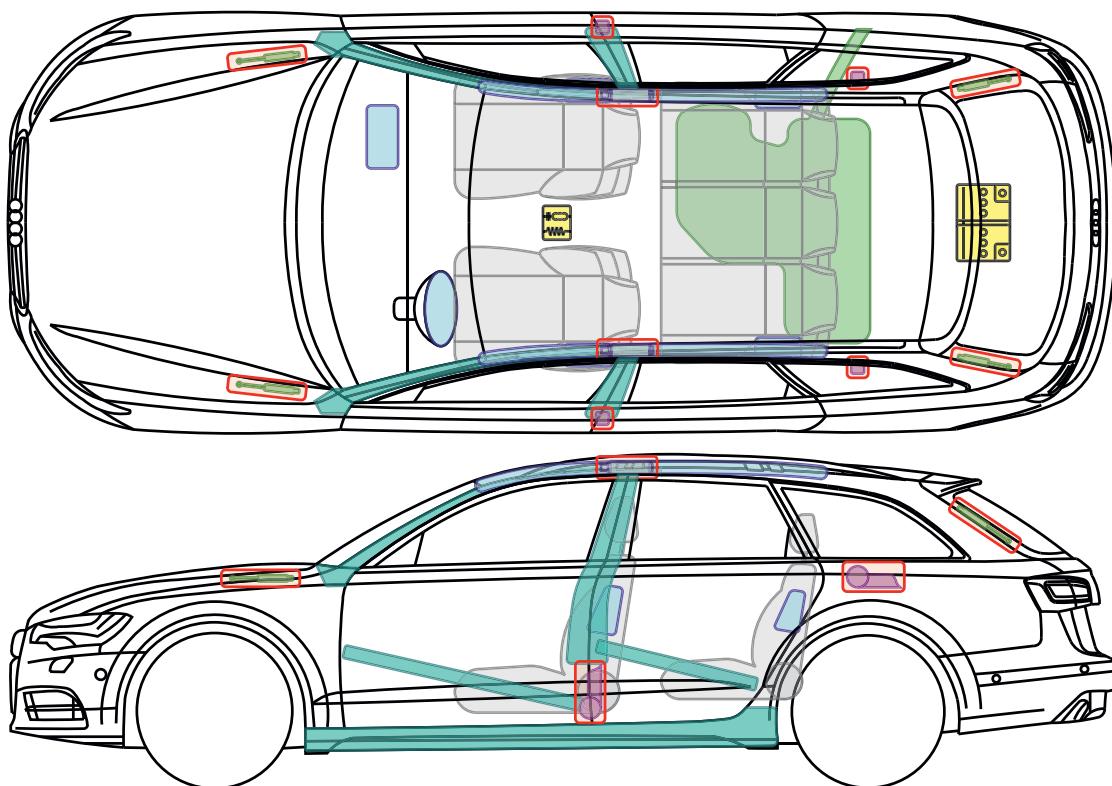


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Pretensioner		Gas-pressure damper		Fuel tank



► Audi A6 hybrid

from 2012

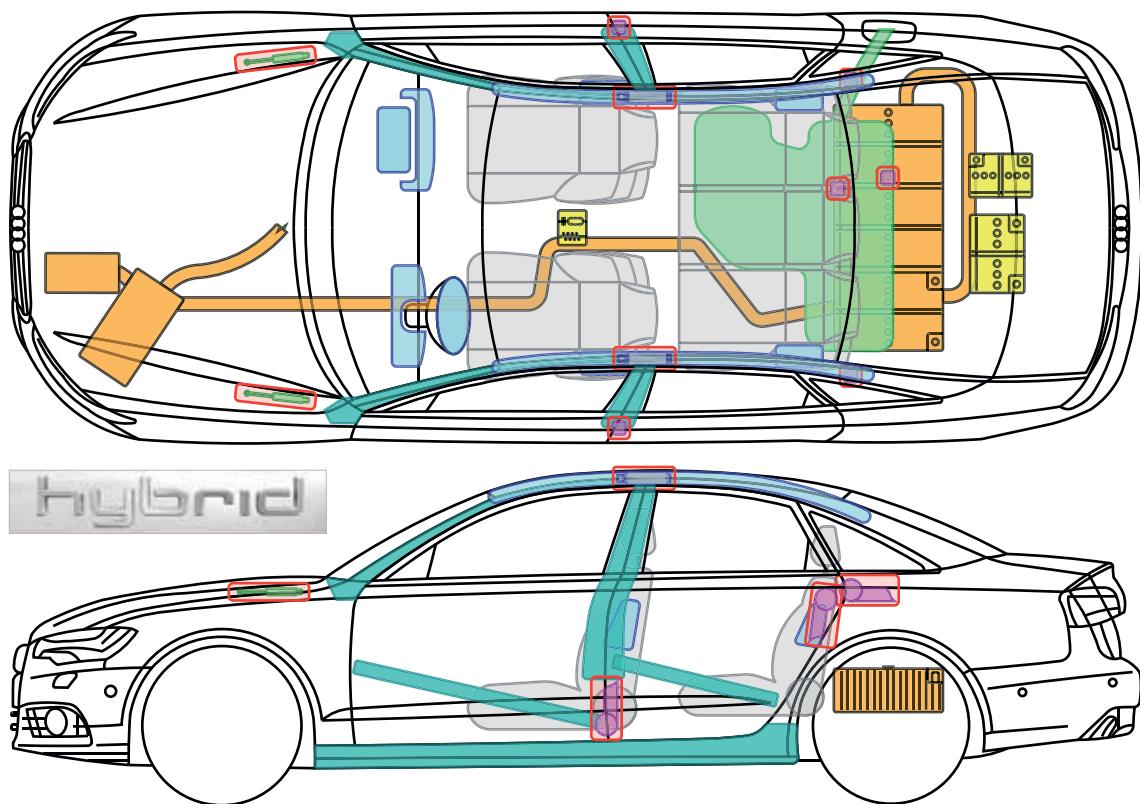

Legend

	Airbag		Reinforce- ment		Control module		High- voltage battery
	Gas gen- erator		Over- all protec- tion		12 V battery		High- voltage -leads/ -compo- nents
	Preten- sioner		Gaspres- sure damper		Fuel tank		



► Audi A6 hybrid

from 2012

Identifying feature

The Audi A6 hybrid can be identified by means of the „hybrid“ logo and the orange cables in the engine compartment.




Hints

! In the case of accidents in which the pyrotechnic belt tensioners or airbags are deployed, the high-voltage system is deactivated.

In the case of accidents with deployed/undeployed airbags

- Place Vehicle in Park and set parking brake
- Switch off the ignition
- Disconnect the negative terminals of the 12V battery

! The electric motor is silent!

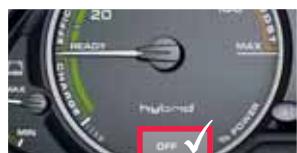

It may not be possible to detect that the car is ready to go by the noises it makes when in operation, as the electric motor is silent. If the large needle in the dial on the left of the instrument cluster (power metre) is not on „OFF“ (for example on the „READY“ position), you have to expect that the electric motor may run or the internal combustion engine may start automatically.

Switch off the ignition



With the ignition switched on:

Press START ENGINE STOP button without depressing brake pedal.

! Risk of Injury: By pressing the START ENINGE STOP button with depressing brake pedal, the engine starts!



► Audi A6 hybrid

from 2012

Disconnect the negative terminals of the 12 V batteries


Option A:

Release the luggage compartment floor by means of the screws indicated by the arrows (screwdriver in the car tool kit) Disconnect the ground cables from both 12V batteries (picture on right)

Option B:

Lever up the luggage compartment floor by inserting a crowbar at the point indicated.

Lift up the luggage compartment floor. Disconnect the ground cables from both 12V batteries (picture on right)

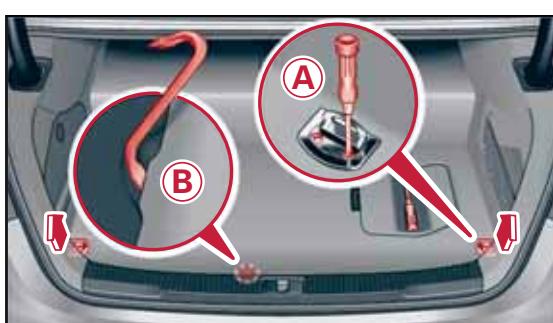

Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the high-voltage battery is located under the luggage compartment floor.

It is a lithium-ion battery.

Identification of the remaining high-voltage components




All the high-voltage leads and the high-voltage connections are provided with orange insulation. These items must not be disconnected or damaged.



► Audi A7 Sportback

from 2010

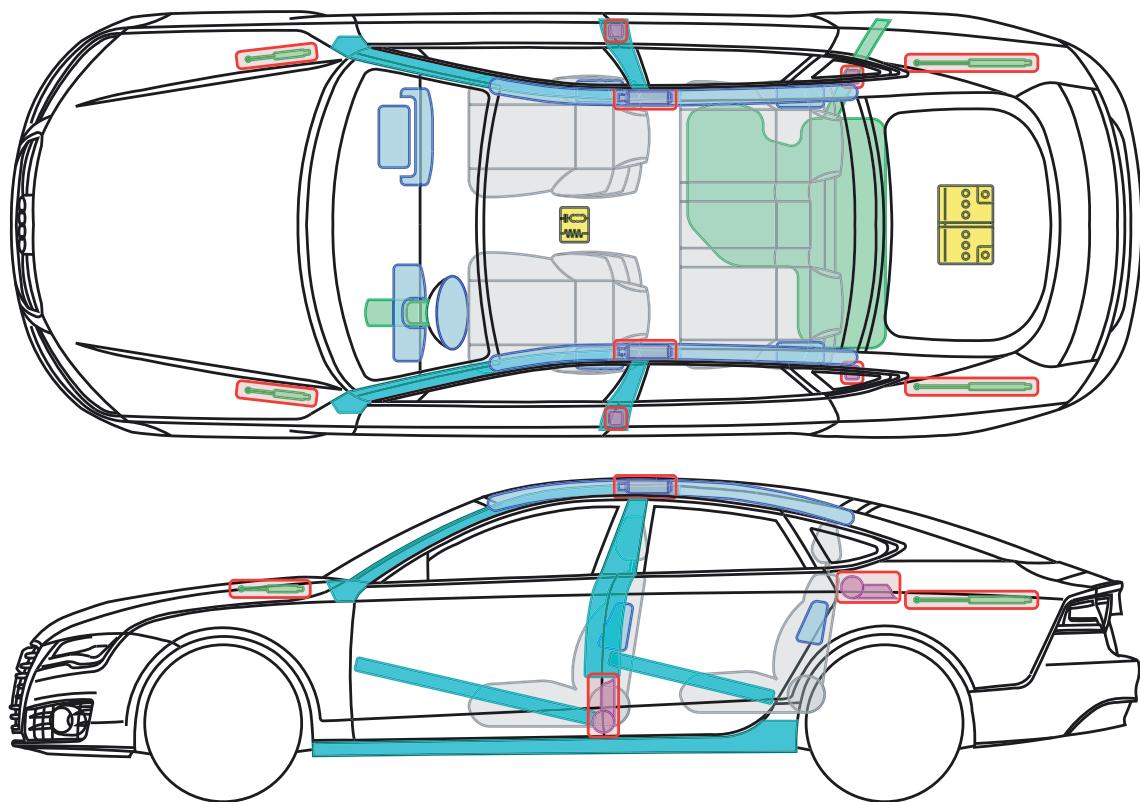


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A8 / S8

1994 – 2002

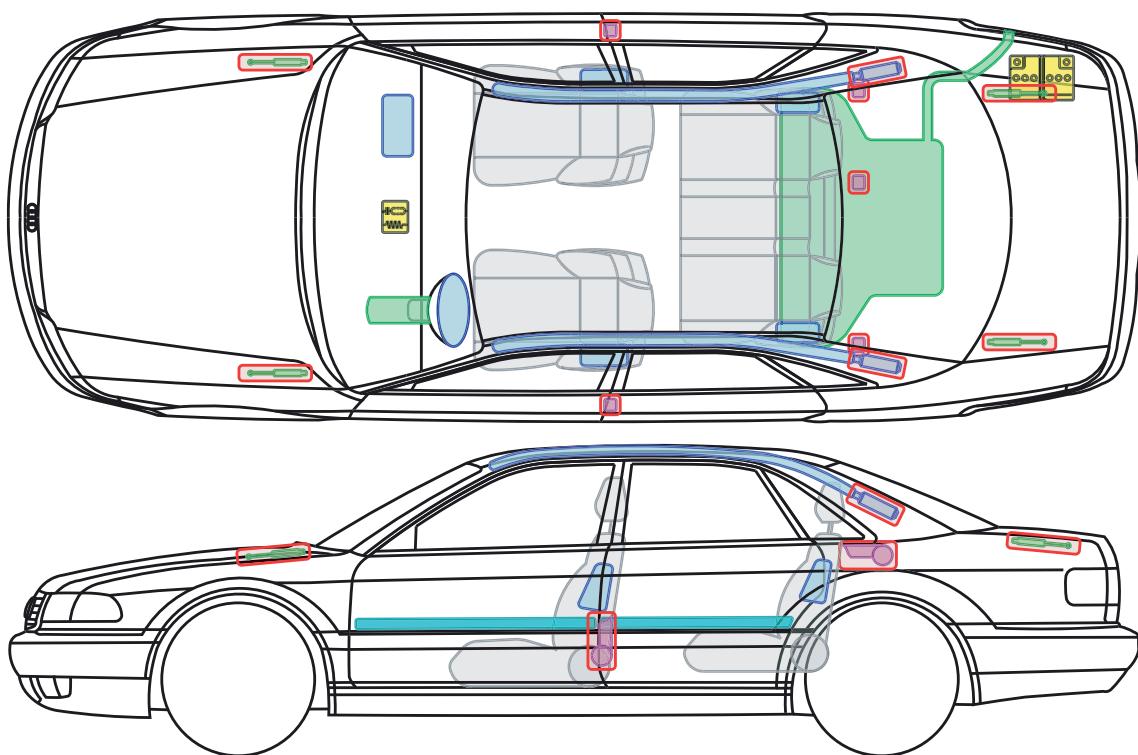

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

A8 +S8 Limousine



► Audi A8 / S8

2002 – 2010

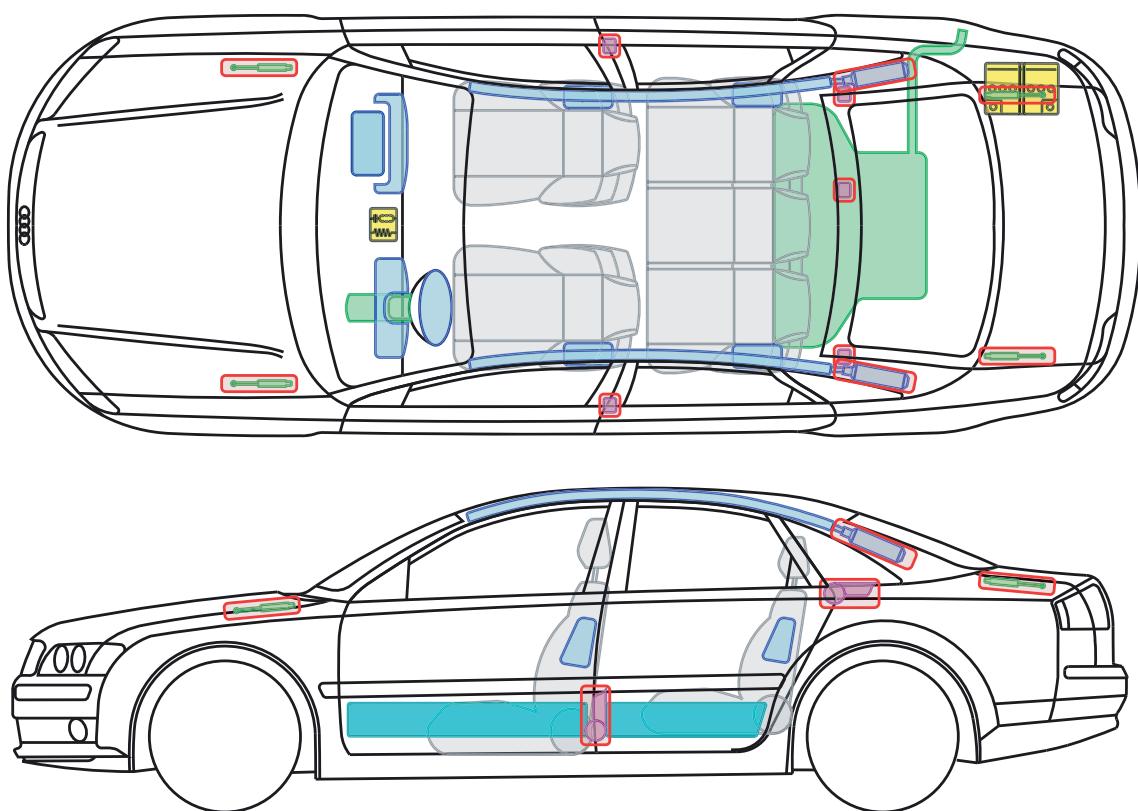


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A8 / S8

from 2010

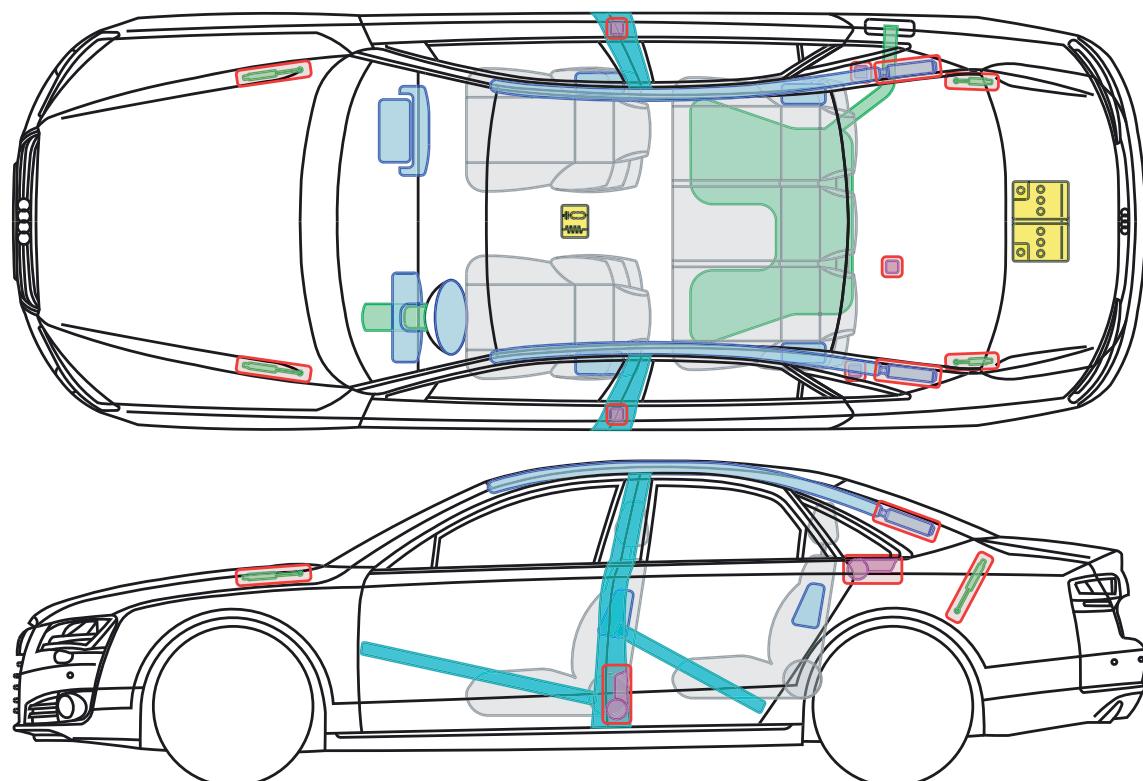


Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi A8 hybrid

from 2012

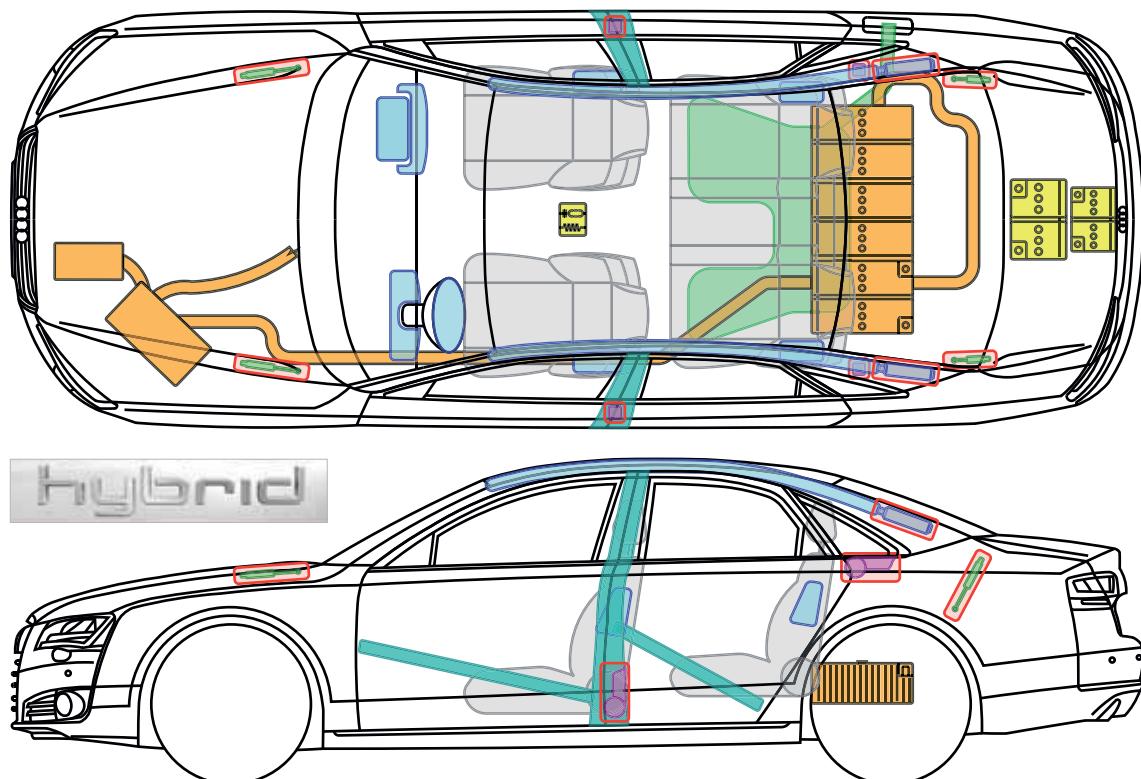

Legend

	Airbag		Reinforce- ment		Control module		High- voltage battery
	Gas gen- erator		Over- all protec- tion		12 V battery		High- voltage -leads/ -compo- nents
	Preten- sioner		Gaspres- sure damper		Fuel tank		



► Audi A8 hybrid

from 2012

Identifying feature

The Audi A8 hybrid can be identified by means of the „hybrid“ logo and the orange cables in the engine compartment.




Hints

! In the case of accidents in which the pyrotechnic belt tensioners or airbags are deployed, the high-voltage system is deactivated.

In the case of accidents with deployed/undeployed airbags

- Place Vehicle in Park and set parking brake
- Switch off the ignition
- Disconnect the negative terminals of the 12V battery

! The electric motor is silent!

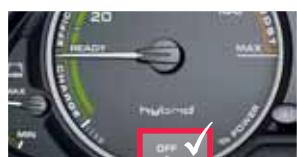

It may not be possible to detect that the car is ready to go by the noises it makes when in operation, as the electric motor is silent. If the large needle in the dial on the left of the instrument cluster (power metre) is not on „OFF“ (for example on the „READY“ position), you have to expect that the electric motor may run or the internal combustion engine may start automatically.

Switch off the ignition



With the ignition switched on:

Press START ENGINE STOP button without depressing brake pedal.

! Risk of Injury: By pressing the START ENINGE STOP button with depressing brake pedal, the engine starts!







► Audi A8 hybrid

from 2012

Disconnect the negative terminals of the 12 V batteries

Lever up the luggage compartment floor. Lift up the tool box element. Disconnect the ground cables from both 12 V batteries (picture on right).

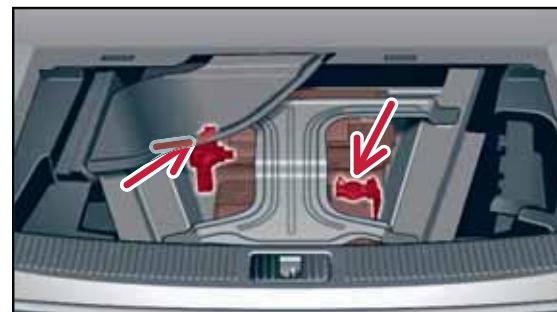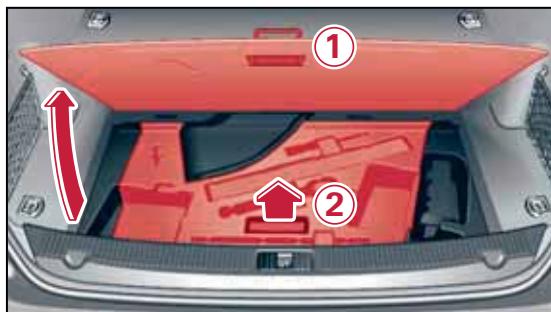

Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the high-voltage battery is located under the luggage compartment floor.

It is a lithium-ion battery.

Identification of the remaining high-voltage components




All the high-voltage leads and the high-voltage connections are provided with orange insulation. These items must not be disconnected or damaged.



► Audi Q3

from 2011

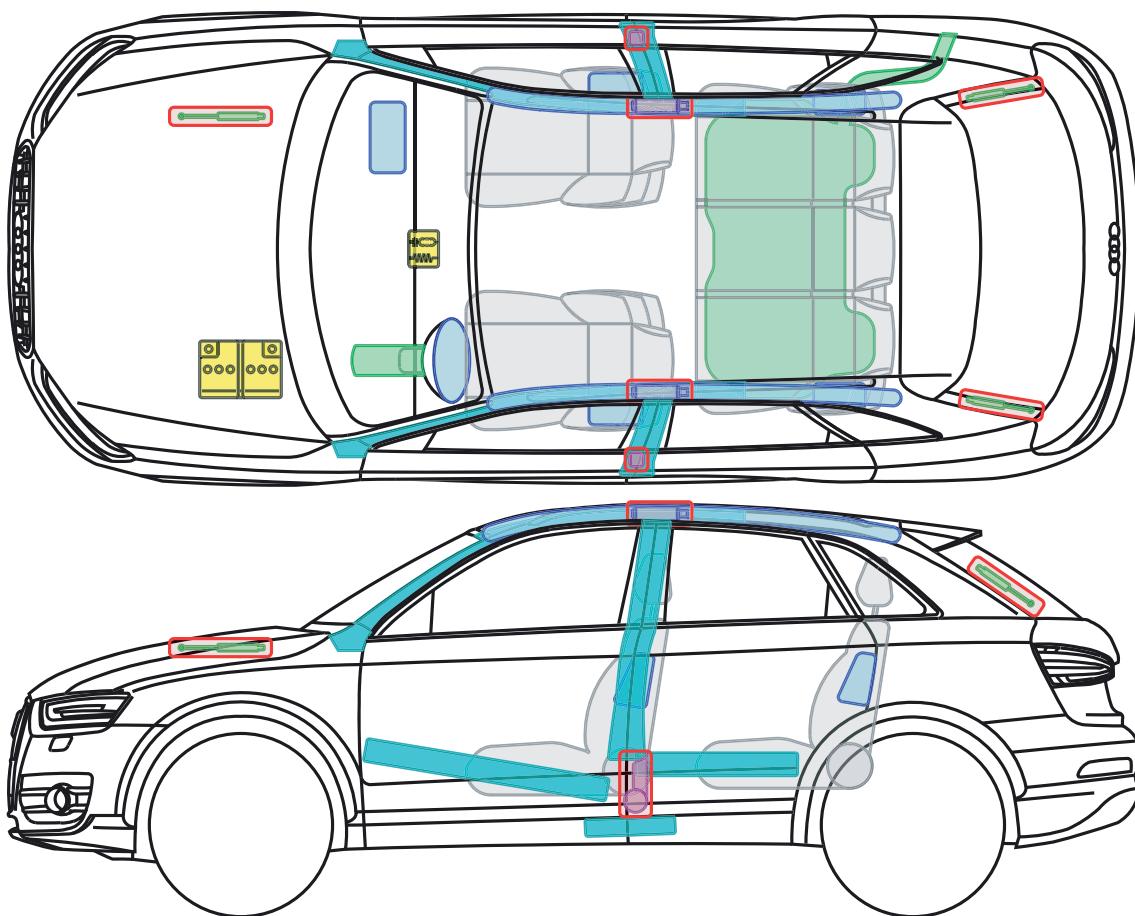

Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank


usw...

Q3



► Audi Q5

from 2008

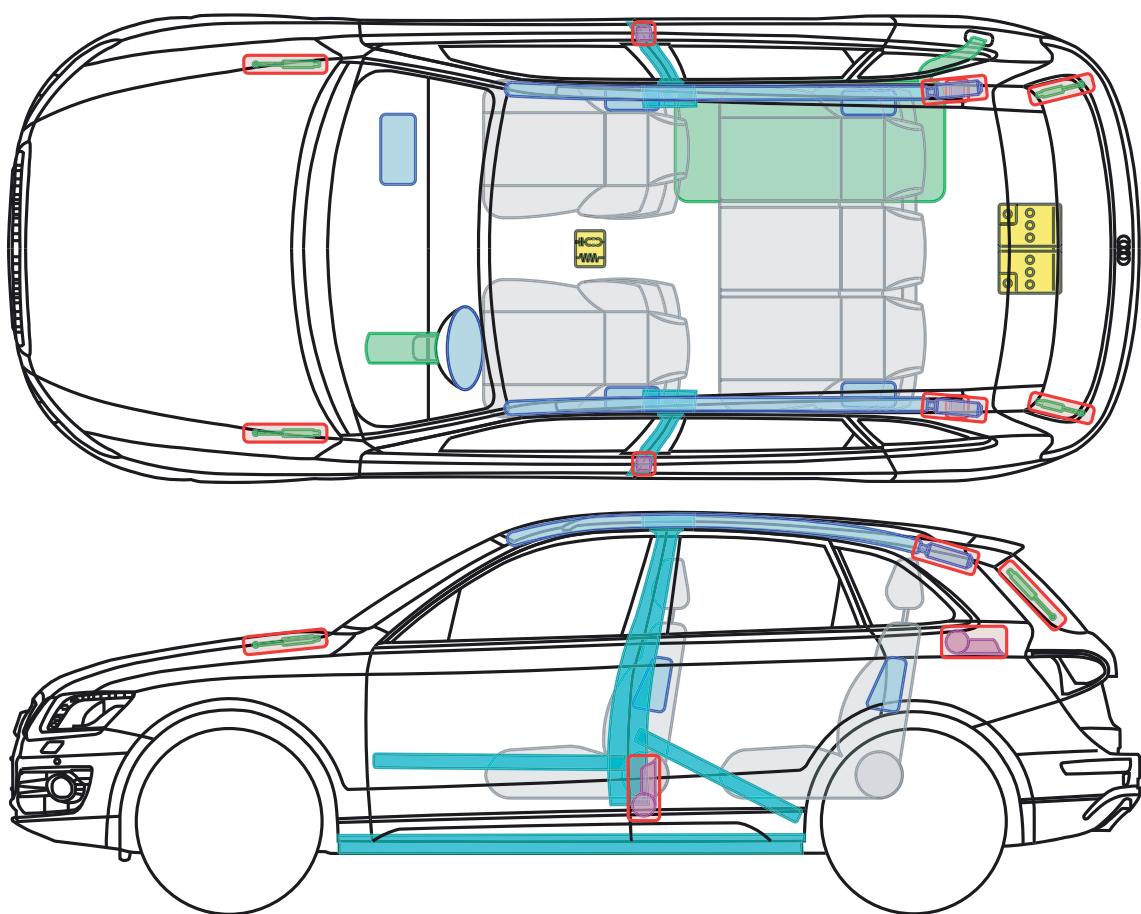

Legend



	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

Q5



► Audi Q5 hybrid quattro

from 2011

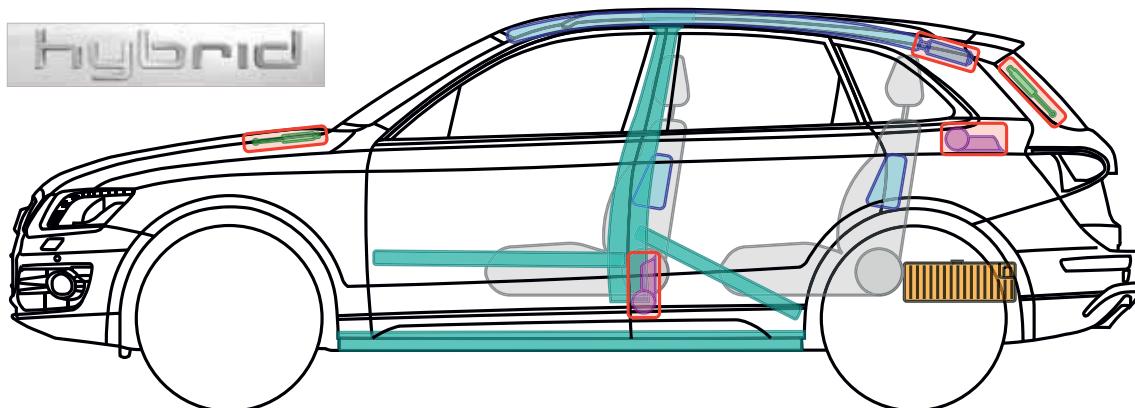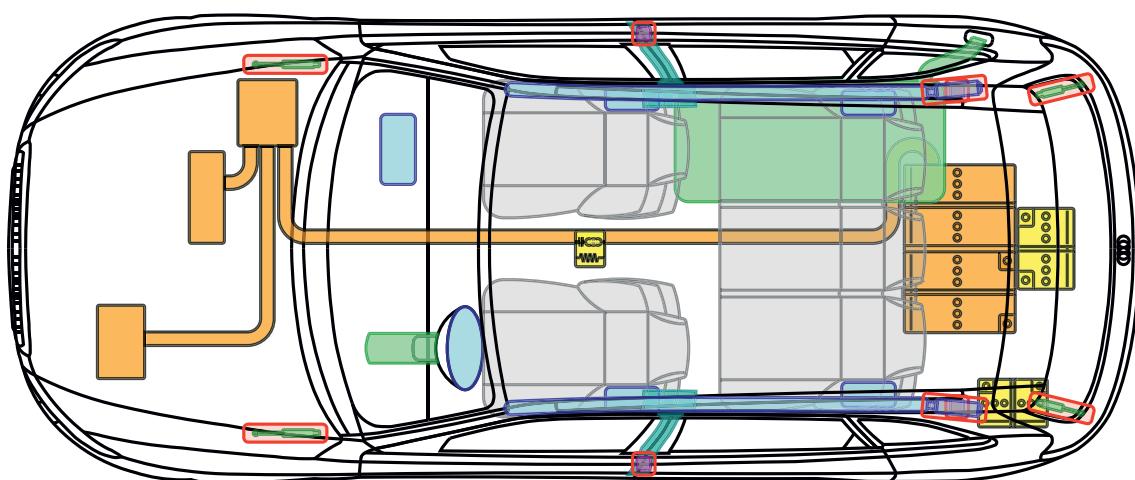

Legend

	Airbag		Reinforce- ment		Control module		High- voltage battery
	Gas gen- erator		Over- all protec- tion		12 V bat- tery		High- voltage -leads/ -compo- nents
	Preten- sioner		Gas- pres- sure damper		Fuel tank		



► Audi Q5 hybrid quattro

from 2011

Identifying feature

The Audi Q5 hybrid quattro can be identified by means of the „hybrid“ logo.



Hints

⚠ In the case of accidents in which the pyrotechnic belt tensioners or airbags are deployed, the high-voltage system is deactivated.

In the case of accidents with deployed/undeployed airbags


- Place Vehicle in Park and set parking brake
- Switch off the ignition
- Disconnect the negative terminals of the 12V battery

⚠ The electric motor is silent!




It may not be possible to detect that the car is ready to go by the noises it makes when in operation, as the electric motor is silent. If the large needle in the dial on the left of the instrument cluster (power metre) is not on „OFF“ (for example on the „READY position), you have to expect that the electric motor may run or the internal combustion engine may start automatically.

Switch off the ignition

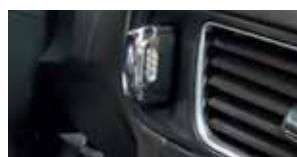

With the ignition switched on and the key in the ignition:

Switch off the ignition by pressing the key into the ignition lock **without** depressing brake pedal. Pull out the key.

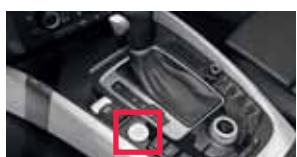

With the ignition switched on and the key not in the ignition (possible with the convenience key):

Press START ENGINE STOP button **without** depressing brake pedal. If possible, take the convenience key outside the transmission range of the vehicle (5 meter).

⚠ Risk of Injury: By pressing the key / the START ENINGE STOP button with depressing brake pedal, the engine starts!



► Audi Q5 hybrid quattro

from 2011


Disconnect the negative terminals of the 12 V batteries

Option A:

Release the luggage compartment floor by means of the screws indicated by the arrows (screwdriver in the car tool kit) Disconnect the ground cables from both 12V batteries (picture on right)

Option B:

Lever up the luggage compartment floor by inserting a crowbar at the points indicated. Lift up the luggage compartment floor. Disconnect the ground cables from both 12V batteries (picture on right)

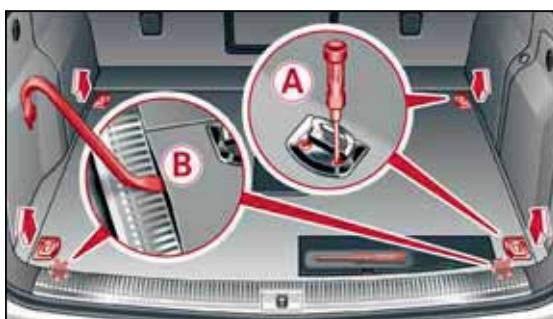

Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the
The high-voltage
battery is located
under the luggage
compartment floor.

It is a lithium-ion
battery.

Identification of the remaining high-voltage components




All the high-voltage leads and the
high-voltage connections are provided
with orange insulation. These items
must not be disconnected or damaged.



► Audi Q7

from 2006

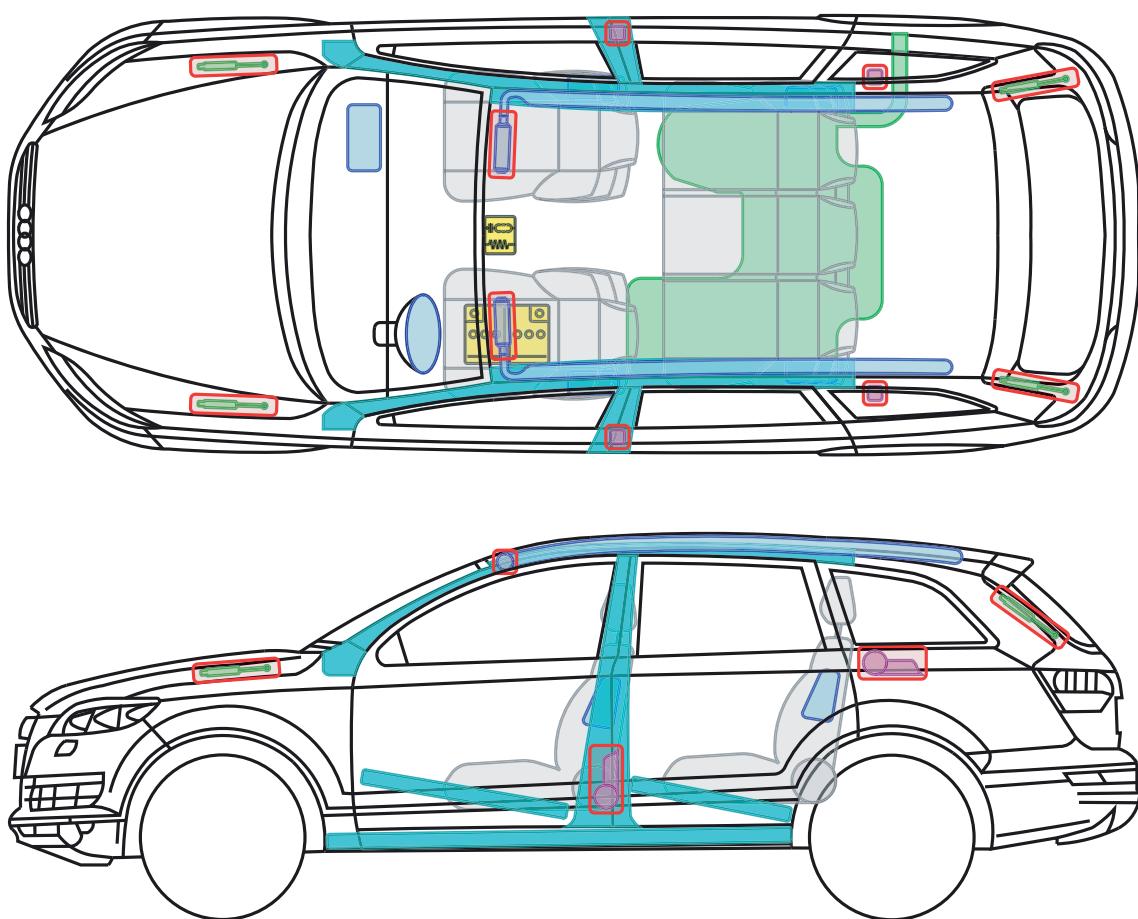



Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



► Audi R8

from 2007

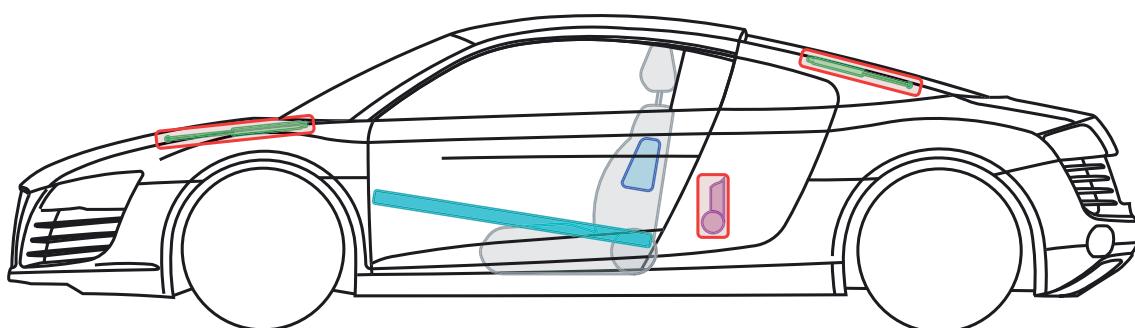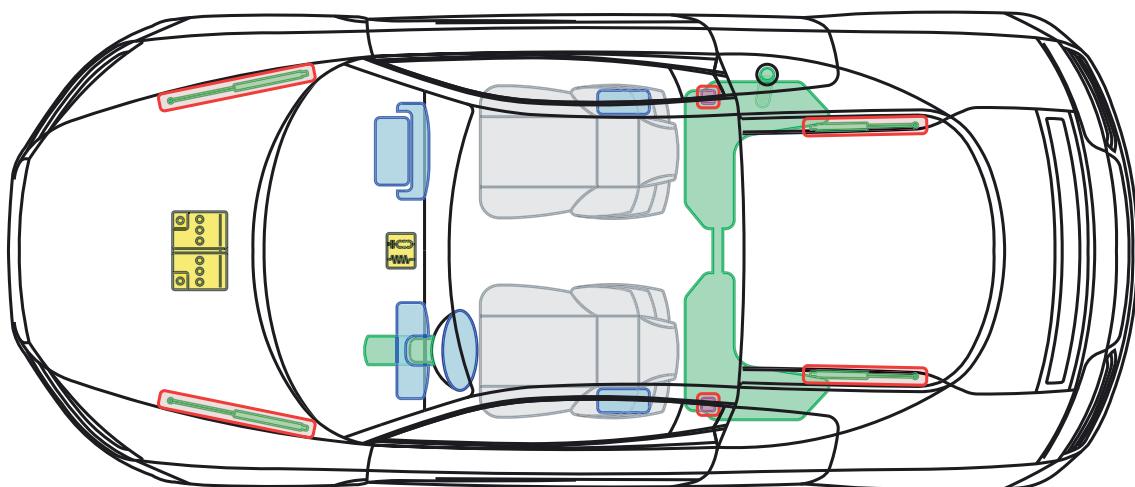

Legend



	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

R8



► Audi R8 Spyder

from 2010

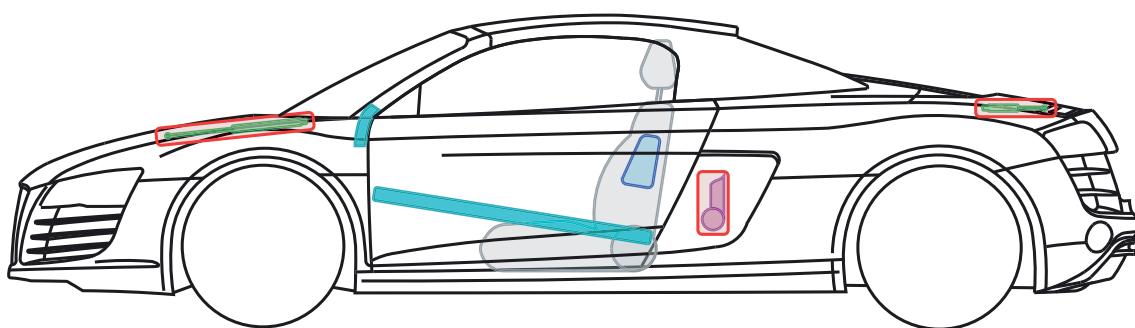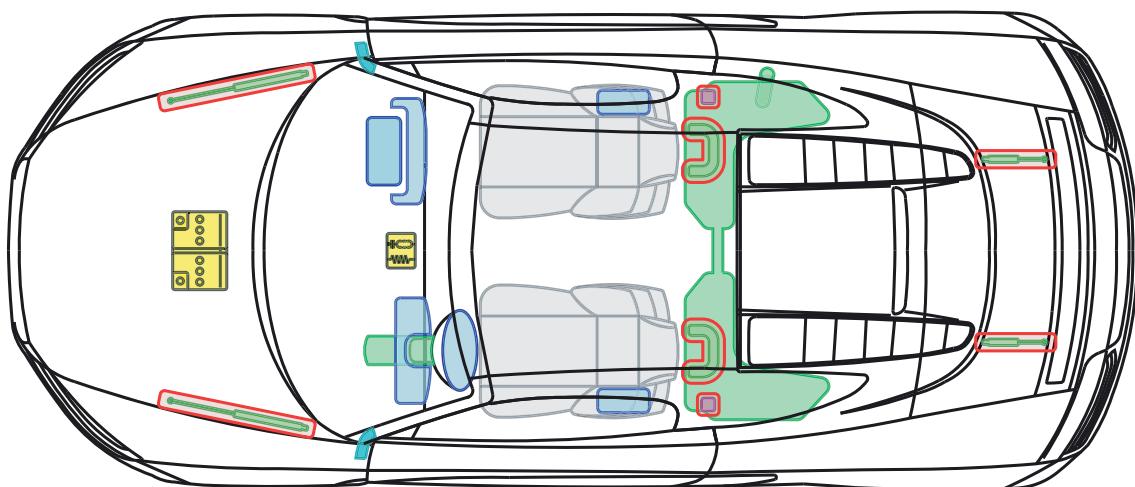

Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank



R8 Spyder





► Audi TT Coupé

1998 – 2006

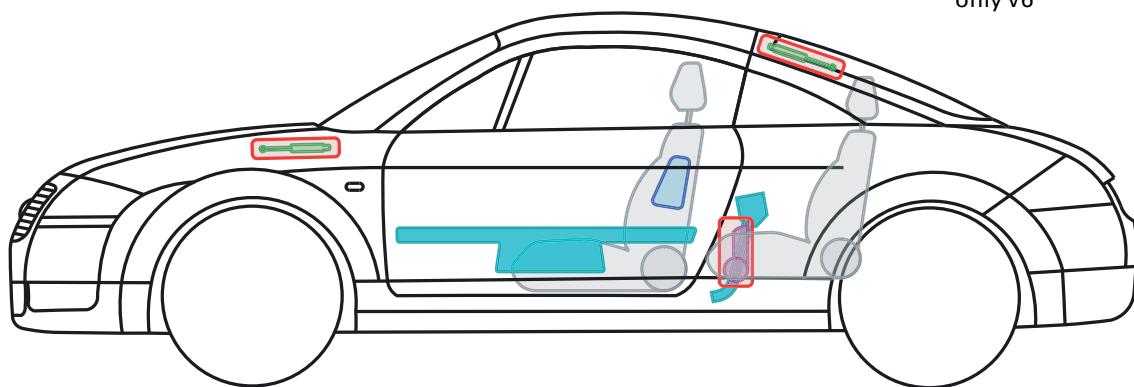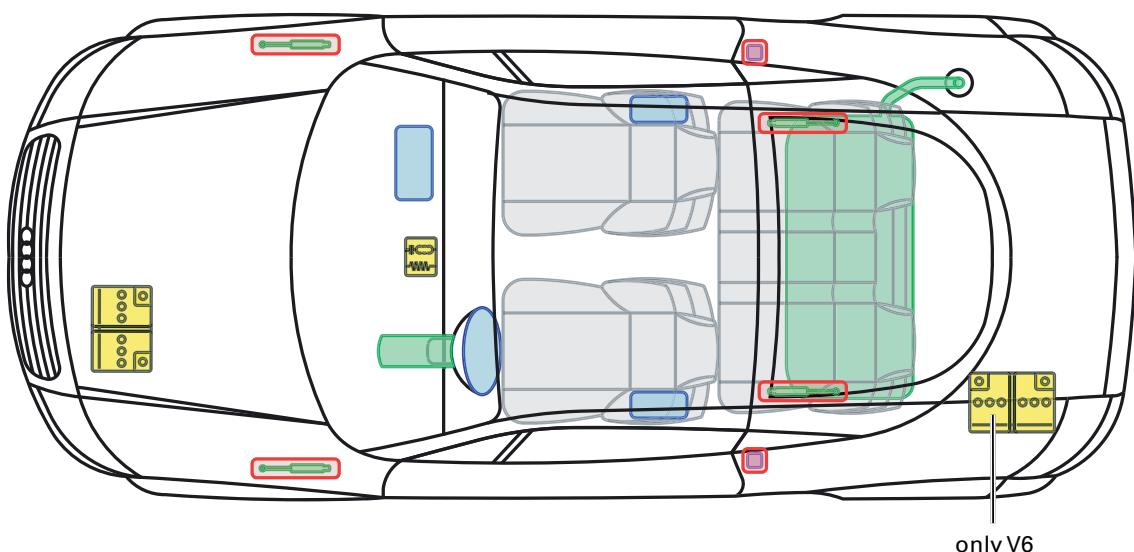

Legend


	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

Coupé



► Audi TT / TTS / TTRS Coupé

from 2006

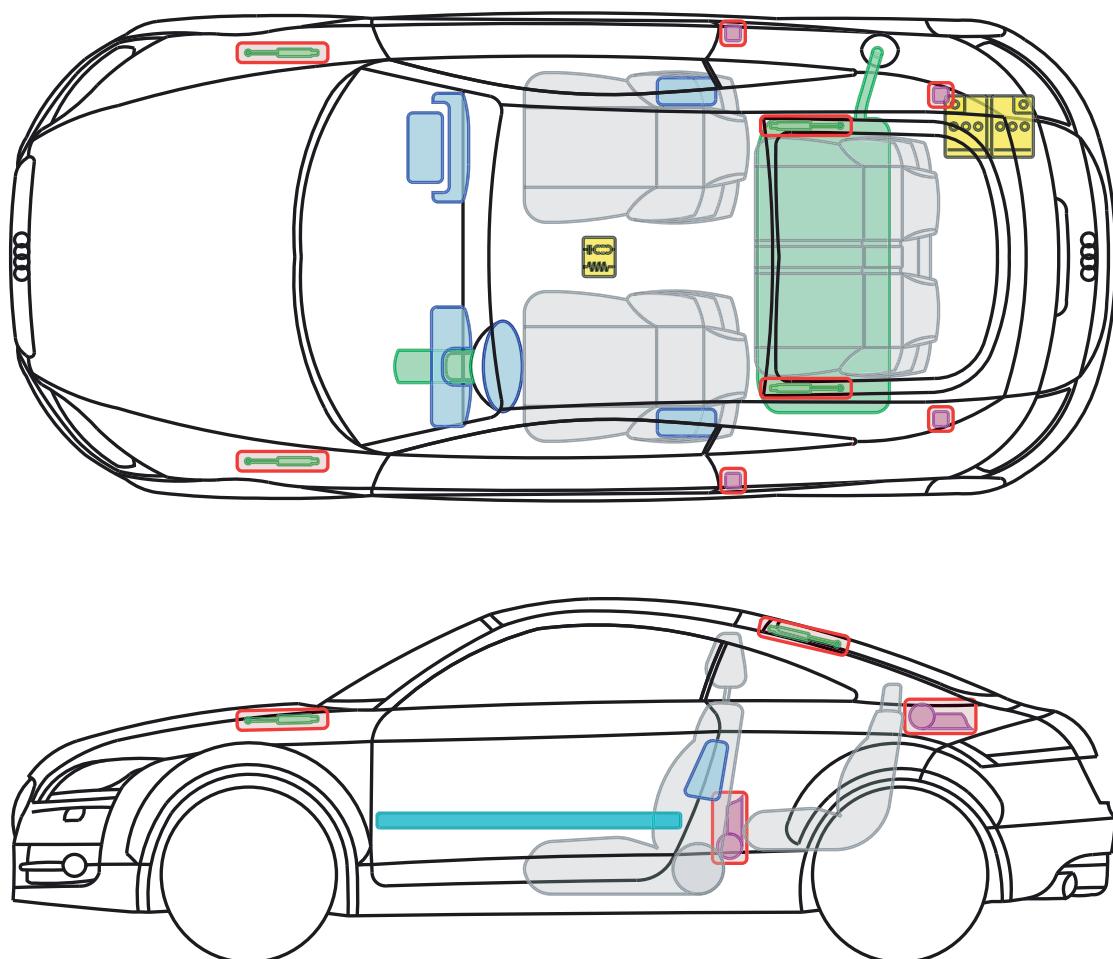

Legend



	Airbag		Reinforcement		Control module
	Gas generator		Rollover protection		Battery
	Pre-tensioner		Gas-pressure damper		Fuel tank

TTS/TTRS Coupé



► Audi TT Roadster

1999 – 2006

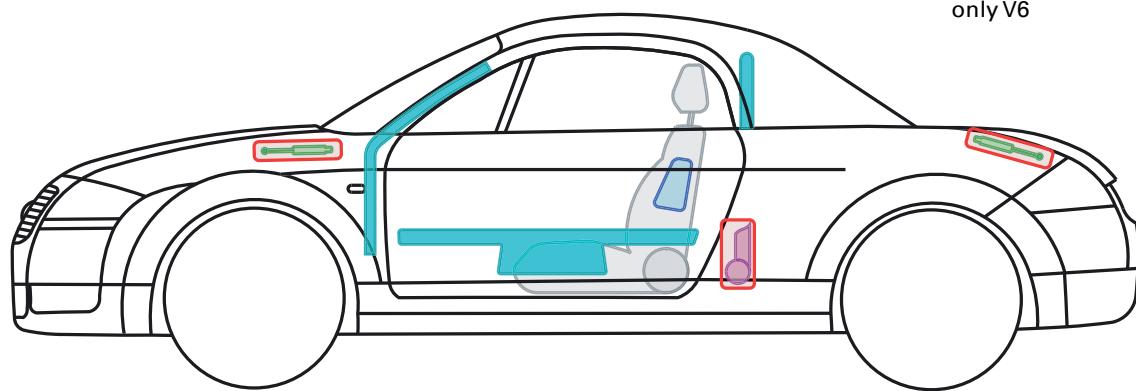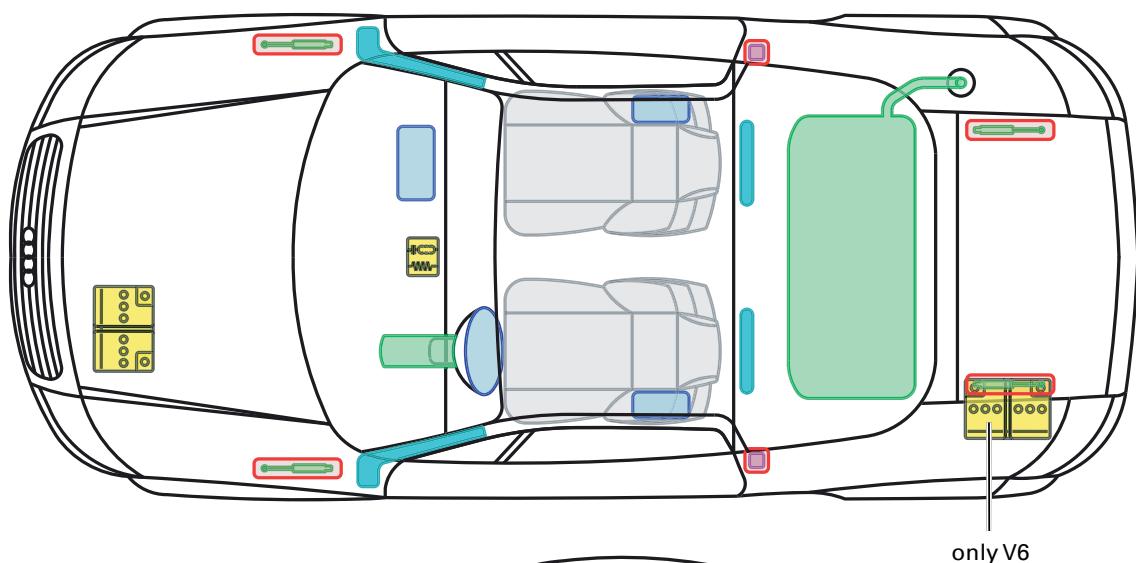

Legend



	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

TT
Roadster



► Audi TT / TTS / TTRS Roadster

from 2007

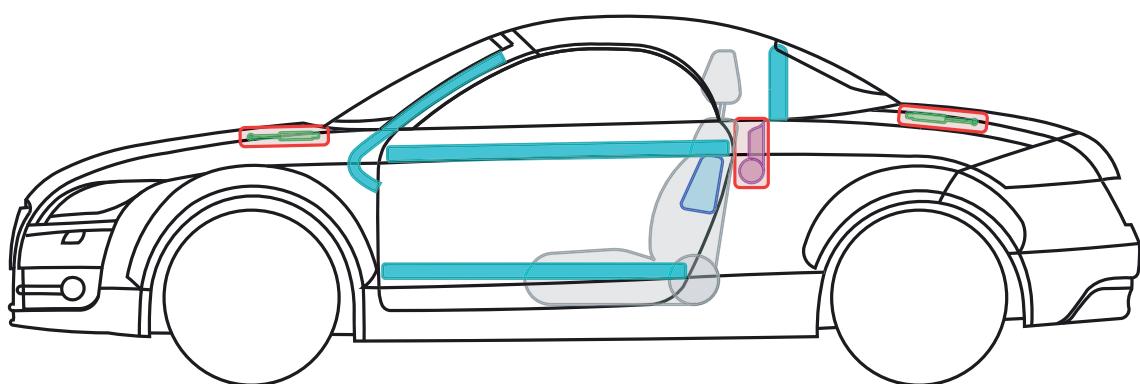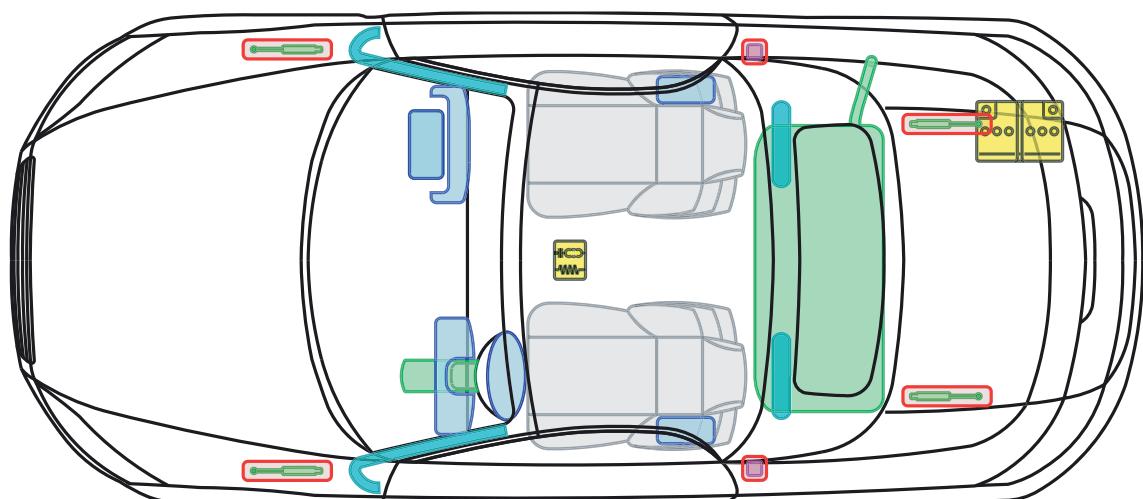

Legend

	Airbag		Reinforce- ment		Control module
	Gas generator		Rollover protection		Battery
	Preten- sioner		Gas-pressure damper		Fuel tank

TTS/TTRS Roadster